

# HP ProLiant WS460c G6 Workstation Blade with WS460c Graphics Expansion Blade Maintenance and Service Guide

## Abstract

This guide provides maintenance and service information for the HP ProLiant WS460c G6 Workstation Blade with WS460c Graphics Expansion Blade. This guide is for technicians that service computer equipment, recognize hazards in products with hazardous energy levels, and understand weight and stability precautions for rack installations.



Part Number: 582470-008  
June 2012  
Edition: 8

© Copyright 2009, 2012 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

Intel® and Xeon® are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

# Contents

<b>Customer self repair .....</b>	<b>5</b>
Parts only warranty service .....	5
<b>Illustrated parts catalog .....</b>	<b>16</b>
Workstation blade components .....	16
Graphics Expansion Blade components .....	22
<b>Removal and replacement procedures .....</b>	<b>25</b>
Required tools .....	25
Safety considerations .....	25
Preventing electrostatic discharge .....	25
Workstation blade warnings and cautions .....	25
Symbols on equipment .....	26
Workstation blade preparation .....	26
Power down the workstation blade .....	26
Remove the workstation blade .....	28
Access panel .....	28
WS460c Graphics Expansion Blade access panel .....	29
WS460c Graphics Expansion Blade .....	29
WS460c Graphics Expansion Blade PCIe card cage .....	30
Configure the WS460c Graphics Expansion Blade configuration with HBA .....	32
Hard drive blank .....	39
Hard drive .....	39
Battery tray .....	40
Mezzanine connector cover .....	41
DIMM baffles .....	42
Installing a DIMM .....	42
Heatsink blank .....	43
Mezzanine card .....	44
Hard drive backplane .....	45
Front panel/hard drive cage assembly .....	46
Battery-backed write cache procedures .....	47
Removing the cache module .....	47
Removing the battery pack .....	48
Recovering data from the battery-backed write cache .....	49
SD card module .....	50
Heatsink .....	51
Processor .....	53
System board .....	59
PCI Express graphics board .....	66
Battery replacement .....	66
Workstation blade release lever .....	67
Release button .....	68
HP Trusted Platform Module .....	69
Installing the NVIDIA Quadro 1000M and 3000M GPUs .....	69
Installing the NVIDIA Quadro 4000, 5000, and 6000 graphics cards .....	73

<b>Diagnostic tools .....</b>	<b>78</b>
Troubleshooting resources .....	78
HP Insight Diagnostics.....	78
HP Insight Diagnostics survey functionality .....	78
Integrated Management Log .....	79
Array Diagnostic Utility .....	79
HP Systems Insight Manager.....	79
HP Insight Remote Support software.....	80
USB support and functionality .....	80
USB support.....	80
Internal USB functionality.....	80
External USB functionality .....	81
<b>Component identification.....</b>	<b>82</b>
Front panel components .....	82
Front panel components for workstation blade with graphics expander blade .....	83
Front panel LEDs .....	84
Front panel LEDs for workstation blade with graphics expansion blade .....	85
SAS and SATA hard drive LEDs.....	86
SAS and SATA hard drive LED combinations .....	86
System board components.....	87
DIMM slot locations .....	88
DIMM identification .....	88
Mezzanine connector definitions .....	89
System maintenance switch.....	89
HP c-Class Blade SUV Cable.....	90
<b>Cabling .....</b>	<b>91</b>
BBWC battery pack cabling .....	91
Using the HP c-Class Blade SUV Cable .....	91
Connecting locally to a workstation blade with video and USB devices .....	91
Accessing a workstation blade with local KVM.....	92
Accessing local media devices .....	92
<b>Specifications .....</b>	<b>94</b>
Environmental specifications .....	94
Workstation blade specifications.....	94
<b>Acronyms and abbreviations.....</b>	<b>95</b>
<b>Documentation feedback .....</b>	<b>97</b>
<b>Index.....</b>	<b>98</b>

# Customer self repair

HP products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period HP (or HP service providers or service partners) identifies that the repair can be accomplished by the use of a CSR part, HP will ship that part directly to you for replacement. There are two categories of CSR parts:

- **Mandatory**—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.
- **Optional**—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

**NOTE:** Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can call the HP Technical Support Center and a technician will help you over the telephone. HP specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to HP. In cases where it is required to return the defective part to HP, you must ship the defective part back to HP within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in HP billing you for the replacement. With a customer self repair, HP will pay all shipping and part return costs and determine the courier/carrier to be used.

For more information about HP's Customer Self Repair program, contact your local service provider. For the North American program, refer to the HP website (<http://www.hp.com/go/selfrepair>).

## Parts only warranty service

Your HP Limited Warranty may include a parts only warranty service. Under the terms of parts only warranty service, HP will provide replacement parts free of charge.

For parts only warranty service, CSR part replacement is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

## Réparation par le client (CSR)

Les produits HP comportent de nombreuses pièces CSR (Customer Self Repair = réparation par le client) afin de minimiser les délais de réparation et faciliter le remplacement des pièces défectueuses. Si pendant la période de diagnostic, HP (ou ses partenaires ou mainteneurs agréés) détermine que la réparation peut être effectuée à l'aide d'une pièce CSR, HP vous l'envoie directement. Il existe deux catégories de pièces CSR:

Obligatoire - Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

Facultatif - Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

**REMARQUE:** Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

Les pièces CSR sont livrées le jour ouvré suivant, dans la limite des stocks disponibles et selon votre situation géographique. Si votre situation géographique le permet et que vous demandez une livraison le jour même ou dans les 4 heures, celle-ci vous sera facturée. Pour bénéficier d'une assistance téléphonique,appelez le Centre d'assistance technique HP. Dans les documents envoyés avec la pièce de rechange CSR, HP précise s'il est nécessaire de lui retourner la pièce défectueuse. Si c'est le cas, vous devez le faire dans le délai indiqué, généralement cinq (5) jours ouvrés. La pièce et sa documentation doivent être retournées dans l'emballage fourni. Si vous ne retournez pas la pièce défectueuse, HP se réserve le droit de vous facturer les coûts de remplacement. Dans le cas d'une pièce CSR, HP supporte l'ensemble des frais d'expédition et de retour, et détermine la société de courses ou le transporteur à utiliser.

Pour plus d'informations sur le programme CSR de HP, contactez votre Mainteneur Agréé local. Pour plus d'informations sur ce programme en Amérique du Nord, consultez le site Web HP (<http://www.hp.com/go/selfrepair>).

## Service de garantie "pièces seules"

Votre garantie limitée HP peut inclure un service de garantie "pièces seules". Dans ce cas, les pièces de rechange fournies par HP ne sont pas facturées.

Dans le cadre de ce service, la réparation des pièces CSR par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

## Riparazione da parte del cliente

Per abbreviare i tempi di riparazione e garantire una maggiore flessibilità nella sostituzione di parti difettose, i prodotti HP sono realizzati con numerosi componenti che possono essere riparati direttamente dal cliente (CSR, Customer Self Repair). Se in fase di diagnostica HP (o un centro di servizi o di assistenza HP) identifica il guasto come riparabile mediante un ricambio CSR, HP lo spedirà direttamente al cliente per la sostituzione. Vi sono due categorie di parti CSR:

Obbligatorie – Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.

Opzionali – Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese addizionali a seconda del tipo di garanzia previsto per il prodotto.

**NOTA:** alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

In base alla disponibilità e alla località geografica, le parti CSR vengono spedite con consegna entro il giorno lavorativo seguente. La consegna nel giorno stesso o entro quattro ore è offerta con un supplemento di costo solo in alcune zone. In caso di necessità si può richiedere l'assistenza telefonica di un addetto del centro di supporto tecnico HP. Nel materiale fornito con una parte di ricambio CSR, HP specifica se il cliente deve restituire dei componenti. Qualora sia richiesta la resa ad HP del componente difettoso, lo si deve spedire ad HP entro un determinato periodo di tempo, generalmente cinque (5) giorni lavorativi. Il componente difettoso deve essere restituito con la documentazione associata nell'imballo di spedizione fornito. La mancata restituzione del componente può comportare la fatturazione del ricambio da parte di HP. Nel caso di riparazione da parte del cliente, HP sostiene tutte le spese di spedizione e resa e sceglie il corriere/vettore da utilizzare.

Per ulteriori informazioni sul programma CSR di HP contattare il centro di assistenza di zona. Per il programma in Nord America fare riferimento al sito Web HP (<http://www.hp.com/go/selfrepair>).

## Servizio di garanzia per i soli componenti

La garanzia limitata HP può includere un servizio di garanzia per i soli componenti. Nei termini di garanzia del servizio per i soli componenti, HP fornirà gratuitamente le parti di ricambio.

Per il servizio di garanzia per i soli componenti è obbligatoria la formula CSR che prevede la riparazione da parte del cliente. Se il cliente invece richiede la sostituzione ad HP, dovrà sostenere le spese di spedizione e di manodopera per il servizio.

## Customer Self Repair

HP Produkte enthalten viele CSR-Teile (Customer Self Repair), um Reparaturzeiten zu minimieren und höhere Flexibilität beim Austausch defekter Bauteile zu ermöglichen. Wenn HP (oder ein HP Servicepartner) bei der Diagnose feststellt, dass das Produkt mithilfe eines CSR-Teils repariert werden kann, sendet Ihnen HP dieses Bauteil zum Austausch direkt zu. CSR-Teile werden in zwei Kategorien unterteilt:

Zwingend – Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von HP vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

Optional – Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

**HINWEIS:** Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

CSR-Teile werden abhängig von der Verfügbarkeit und vom Lieferziel am folgenden Geschäftstag geliefert. Für bestimmte Standorte ist eine Lieferung am selben Tag oder innerhalb von vier Stunden gegen einen Aufpreis verfügbar. Wenn Sie Hilfe benötigen, können Sie das HP technische Support Center anrufen und sich von einem Mitarbeiter per Telefon helfen lassen. Den Materialien, die mit einem CSR-Ersatzteil geliefert werden, können Sie entnehmen, ob das defekte Teil an HP zurückgeschickt werden muss. Wenn es erforderlich ist, das defekte Teil an HP zurückzuschicken, müssen Sie dies innerhalb eines vorgegebenen Zeitraums tun, in der Regel innerhalb von fünf (5) Geschäftstagen. Das defekte Teil muss mit der zugehörigen Dokumentation in der Verpackung zurückgeschickt werden, die im Lieferumfang enthalten ist. Wenn Sie das

defekte Teil nicht zurückschicken, kann HP Ihnen das Ersatzteil in Rechnung stellen. Im Falle von Customer Self Repair kommt HP für alle Kosten für die Lieferung und Rücksendung auf und bestimmt den Kurier-/Frachtdienst.

Weitere Informationen über das HP Customer Self Repair Programm erhalten Sie von Ihrem Servicepartner vor Ort. Informationen über das CSR-Programm in Nordamerika finden Sie auf der HP Website unter (<http://www.hp.com/go/selfrepair>).

## Parts-only Warranty Service (Garantieservice ausschließlich für Teile)

Ihre HP Garantie umfasst möglicherweise einen Parts-only Warranty Service (Garantieservice ausschließlich für Teile). Gemäß den Bestimmungen des Parts-only Warranty Service stellt HP Ersatzteile kostenlos zur Verfügung.

Für den Parts-only Warranty Service ist das CSR-Verfahren zwingend vorgegeben. Wenn Sie den Austausch dieser Teile von HP vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

## Reparaciones del propio cliente

Los productos de HP incluyen muchos componentes que el propio usuario puede reemplazar (*Customer Self Repair*, CSR) para minimizar el tiempo de reparación y ofrecer una mayor flexibilidad a la hora de realizar sustituciones de componentes defectuosos. Si, durante la fase de diagnóstico, HP (o los proveedores o socios de servicio de HP) identifica que una reparación puede llevarse a cabo mediante el uso de un componente CSR, HP le enviará dicho componente directamente para que realice su sustitución. Los componentes CSR se clasifican en dos categorías:

- **Obligatorio:** componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.
- **Opcional:** componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

**NOTA:** Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

Según la disponibilidad y la situación geográfica, los componentes CSR se enviarán para que lleguen a su destino al siguiente día laborable. Si la situación geográfica lo permite, se puede solicitar la entrega en el mismo día o en cuatro horas con un coste adicional. Si precisa asistencia técnica, puede llamar al Centro de asistencia técnica de HP y recibirá ayuda telefónica por parte de un técnico. Con el envío de materiales para la sustitución de componentes CSR, HP especificará si los componentes defectuosos deberán devolverse a HP. En aquellos casos en los que sea necesario devolver algún componente a HP, deberá hacerlo en el periodo de tiempo especificado, normalmente cinco días laborables. Los componentes defectuosos deberán devolverse con toda la documentación relacionada y con el embalaje de envío. Si no

enviara el componente defectuoso requerido, HP podrá cobrarle por el de sustitución. En el caso de todas las sustituciones que lleve a cabo el cliente, HP se hará cargo de todos los gastos de envío y devolución de componentes y escogerá la empresa de transporte que se utilice para dicho servicio.

Para obtener más información acerca del programa de Reparaciones del propio cliente de HP, póngase en contacto con su proveedor de servicios local. Si está interesado en el programa para Norteamérica, visite la página web de HP siguiente (<http://www.hp.com/go/selfrepair>).

## Servicio de garantía exclusivo de componentes

La garantía limitada de HP puede que incluya un servicio de garantía exclusivo de componentes. Según las condiciones de este servicio exclusivo de componentes, HP le facilitará los componentes de repuesto sin cargo adicional alguno.

Para este servicio de garantía exclusivo de componentes, es obligatoria la sustitución de componentes por parte del usuario (CSR). Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

## Customer Self Repair

Veel onderdelen in HP producten zijn door de klant zelf te repareren, waardoor de reparatietaart tot een minimum beperkt kan blijven en de flexibiliteit in het vervangen van defecte onderdelen groter is. Deze onderdelen worden CSR-onderdelen (Customer Self Repair) genoemd. Als HP (of een HP Service Partner) bij de diagnose vaststelt dat de reparatie kan worden uitgevoerd met een CSR-onderdeel, verzendt HP dat onderdeel rechtstreeks naar u, zodat u het defecte onderdeel daarmee kunt vervangen. Er zijn twee categorieën CSR-onderdelen:

**Verplicht:** Onderdelen waarvoor reparatie door de klant verplicht is. Als u HP verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.

**Optioneel:** Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

**OPMERKING:** Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorraarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

Afhankelijk van de leverbaarheid en de locatie worden CSR-onderdelen verzonden voor levering op de eerstvolgende werkdag. Levering op dezelfde dag of binnen vier uur kan tegen meerkosten worden aangeboden, indien dit mogelijk is gezien de locatie. Indien assistentie gewenst is, belt u een HP Service Partner om via de telefoon technische ondersteuning te ontvangen. HP vermeldt in de documentatie bij het vervangende CSR-onderdeel of het defecte onderdeel aan HP moet worden geretourneerd. Als het defecte onderdeel aan HP moet worden teruggezonden, moet u het defecte onderdeel binnen een bepaalde periode, gewoonlijk vijf (5) werkdagen, retourneren aan HP. Het defecte onderdeel moet met de bijbehorende documentatie worden geretourneerd in het meegeleverde verpakkingsmateriaal. Als u het defecte onderdeel niet terugzendt, kan HP u voor het vervangende onderdeel kosten in rekening brengen. Bij reparatie door de klant betaalt HP alle verzendkosten voor het vervangende en geretourneerde onderdeel en kiest HP zelf welke koerier/transportonderneming hiervoor wordt gebruikt.

Neem contact op met een Service Partner voor meer informatie over het Customer Self Repair programma van HP. Informatie over Service Partners vindt u op de HP website (<http://www.hp.com/go/selfrepair>).

## Garantieservice "Parts Only"

Het is mogelijk dat de HP garantie alleen de garantieservice "Parts Only" omvat. Volgens de bepalingen van de Parts Only garantieservice zal HP kosteloos vervangende onderdelen ter beschikking stellen.

Voor de Parts Only garantieservice is vervanging door CSR-onderdelen verplicht. Als u HP verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.

## Reparo feito pelo cliente

Os produtos da HP são projetados com muitas peças para reparo feito pelo cliente (CSR) de modo a minimizar o tempo de reparo e permitir maior flexibilidade na substituição de peças com defeito. Se, durante o período de diagnóstico, a HP (ou fornecedores/partneiros de serviço da HP) concluir que o reparo pode ser efetuado pelo uso de uma peça CSR, a peça de reposição será enviada diretamente ao cliente. Existem duas categorias de peças CSR:

Obrigatória – Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

Opcional – Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

**OBSERVAÇÃO:** Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

Conforme a disponibilidade e o local geográfico, as peças CSR serão enviadas no primeiro dia útil após o pedido. Onde as condições geográficas permitirem, a entrega no mesmo dia ou em quatro horas pode ser feita mediante uma taxa adicional. Se precisar de auxílio, entre em contato com o Centro de suporte técnico da HP para que um técnico o ajude por telefone. A HP especifica nos materiais fornecidos com a peça CSR de reposição se a peça com defeito deve ser devolvida à HP. Nos casos em que isso for necessário, é preciso enviar a peça com defeito à HP dentro do período determinado, normalmente cinco (5) dias úteis. A peça com defeito deve ser enviada com a documentação correspondente no material de transporte fornecido. Caso não o faça, a HP poderá cobrar a reposição. Para as peças de reparo feito pelo cliente, a HP paga todas as despesas de transporte e de devolução da peça e determina a transportadora/serviço postal a ser utilizado.

Para obter mais informações sobre o programa de reparo feito pelo cliente da HP, entre em contato com o fornecedor de serviços local. Para o programa norte-americano, visite o site da HP (<http://www.hp.com/go/selfrepair>).

## Serviço de garantia apenas para peças

A garantia limitada da HP pode incluir um serviço de garantia apenas para peças. Segundo os termos do serviço de garantia apenas para peças, a HP fornece as peças de reposição sem cobrar nenhuma taxa.

No caso desse serviço, a substituição de peças CSR é obrigatória. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

## 顧客自己修理保証サービス

修理時間を短縮し、故障部品の交換における高い柔軟性を確保するために、HP製品には多数の顧客自己修理（CSR）部品があります。診断の際に、CSR部品を使用すれば修理ができるとHP（HPまたはHP正規保守代理店）が判断した場合、HPIはその部品を直接、お客様に発送し、お客様に交換していただきます。CSR部品には以下の2通りがあります。

- 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPIに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。
- 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPIに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

注： HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

部品供給が可能な場合、地域によっては、CSR部品を翌営業日に届くように発送します。また、地域によっては、追加費用を負担いただくことにより同日または4時間以内に届くように発送することも可能な場合があります。サポートが必要なときは、HPの修理受付窓口に電話していただければ、技術者が電話でアドバイスします。交換用のCSR部品または同梱物には、故障部品をHPIに返送する必要があるかどうかが表示されています。故障部品をHPIに返送する必要がある場合は、指定期限内（通常は5営業日以内）に故障部品をHPIに返送してください。故障部品を返送する場合は、届いた時の梱包箱に関連書類とともに入れてください。故障部品を返送しない場合、HPから部品費用が請求されます。顧客自己修理の際には、HPIは送料および部品返送費を全額負担し、使用する宅配便会社や運送会社を指定します。

## 部品のみ保証サービス

HP保証サービスには、部品のみ保証サービスが適用される場合があります。このサービスでは、交換部品は無償で提供されます。

部品のみ保証サービスにおいては、CSR部品をお客様により交換作業していただくことが必須となります。当該部品について、もしもお客様がHPIに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費はお客様の負担となります。

# 客户自行维修

HP 产品提供许多客户自行维修 (CSR) 部件，以尽可能缩短维修时间和在更换缺陷部件方面提供更大的灵活性。如果在诊断期间 HP (或 HP 服务提供商或服务合作伙伴) 确定可以通过使用 CSR 部件完成维修，HP 将直接把该部件发送给您进行更换。有两类 CSR 部件：

- **强制性的** — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。
- **可选的** — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据为您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

**注：**某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

CSR 部件将在下一个工作日发运（取决于备货情况和允许的地理范围）。在允许的地理范围内，可在当天或四小时内发运，但要收取额外费用。如果需要帮助，您可以致电 HP 技术支持中心，将会有技术人员通过电话为您提供帮助。HP 会在随更换的 CSR 部件发运的材料中指明是否必须将有缺陷的部件返还给 HP。如果要求您将有缺陷的部件返还给 HP，那么您必须在规定期限内（通常是五 (5) 个工作日）将缺陷部件发给 HP。有缺陷的部件必须随所提供的发运材料中的相关文件一起返还。如果未能送还有缺陷的部件，HP 可能会要求您支付更换费用。客户自行维修时，HP 将承担所有相关运输和部件返回费用，并指定快递商/承运商。

有关 HP 客户自行维修计划的详细信息，请与您当地的服务提供商联系。有关北美地区的计划，请访问 HP 网站 (<http://www.hp.com/go/selfrepair>)。

## 仅部件保修服务

您的 HP 有限保修服务可能涉及仅部件保修服务。根据仅部件保修服务条款的规定，HP 将免费提供更换的部件。

仅部件保修服务要求进行 CSR 部件更换。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

# 客戶自行維修

HP 產品設計了許多「客戶自行維修」(CSR) 的零件以減少維修時間，並且使得更換瑕疵零件時能有更大的彈性。如果在診斷期間 HP (或 HP 服務供應商或維修夥伴) 辨認出此項維修工作可以藉由使用 CSR 零件來完成，則 HP 將直接寄送該零件給您作更換。CSR 零件分為兩種類別：

- **強制的** — 客戶自行維修所使用的零件是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。
- **選購的** — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

**備註：**某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

基於材料取得及環境允許的情況下，CSR 零件將於下一個工作日以快遞寄送。在環境的允許下當天或四小時內送達，則可能需要額外的費用。若您需要協助，可致電「HP 技術支援中心」，會有一位技術人員透過電話來協助您。不論損壞的零件是否必須退回，HP 皆會在與 CSR 替換零件一起運送的材料中註明。若要將損壞的零件退回 HP，您必須在指定的一段時間內（通常為五 (5) 個工作天），將損壞的零件寄回 HP。損壞的零件必須與寄送資料中隨附的相關技術文件一併退還。如果無法退還損壞的零件，HP 可能要向您收取替換費用。針對客戶自行維修情形，HP 將負責所有運費及零件退還費用並指定使用何家快遞/貨運公司。

如需 HP 的「客戶自行維修」方案詳細資訊，請連絡您當地的服務供應商。至於北美方案，請參閱 HP 網站 (<http://www.hp.com/go/selfrepair>)。

## 僅限零件的保固服務

您的「HP 有限保固」可能包含僅限零件的保固服務。在僅限零件的保固服務情況下，HP 將免費提供替換零件。

針對僅限零件的保固服務，CSR 零件替換是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

## 고객 셀프 수리

HP 제품은 수리 시간을 최소화하고 결함이 있는 부품 교체 시 더욱 융통성을 발휘할 수 있도록 하기 위해 고객 셀프 수리(CSR) 부품을 다량 사용하여 설계되었습니다. 진단 기간 동안 HP(또는 HP 서비스 공급업체 또는 서비스 협력업체)에서 CSR 부품을 사용하여 수리가 가능하다고 판단되면 HP는 해당 부품을 바로 사용자에게 보내어 사용자가 교체할 수 있도록 합니다. CSR 부품에는 두 가지 종류가 있습니다.

- **고객 셀프 수리가 의무 사항인 필수 부품.** 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.
- **고객 셀프 수리가 선택 사항인 부품.** 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

**참고:** 일부 HP 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

CSR 부품은 재고 상태와 지리적 조건이 허용하는 경우 다음 영업일 납품이 가능하도록 배송이 이루어집니다. 지리적 조건이 허용하는 경우 추가 비용이 청구되는 조건으로 당일 또는 4시간 배송이 가능할 수도 있습니다. 도움이 필요하시면 HP 기술 지원 센터로 전화하십시오. 전문 기술자가 전화로 도움을 줄 것입니다. HP는 결함이 발생한 부품을 HP로 반환해야 하는지 여부를 CSR 교체 부품과 함께 배송된 자료에 지정합니다. 결함이 발생한 부품을 HP로 반환해야 하는 경우에는 지정된 기간 내(통상 영업일 기준 5일)에 HP로 반환해야 합니다. 이 때 결함이 발생한 부품은 제공된 포장 재료에 넣어 관련 설명서와 함께 반환해야 합니다. 결함이 발생한 부품을 반환하지 않는 경우 HP가 교체 부품에 대해 비용을 청구할 수 있습니다. 고객 셀프 수리의 경우, HP는 모든 운송 및 부품 반환 비용을 부담하며 이용할 운송업체 및 택배 서비스를 결정합니다.

HP 고객 셀프 수리 프로그램에 대한 자세한 내용은 가까운 서비스 제공업체에 문의하십시오. 북미 지역의 프로그램에 대해서는 HP 웹 사이트(<http://www.hp.com/go/selfrepair>)를 참조하십시오.


## 부품 제공 보증 서비스

HP 제한 보증에는 부품 제공 보증 서비스가 포함될 수 있습니다. 이러한 경우 HP는 부품 제공 보증 서비스의 조건에 따라 교체 부품만을 무료로 제공합니다.

부품 제공 보증 서비스 제공 시 CSR 부품 교체는 의무 사항입니다. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

# Illustrated parts catalog

## Workstation blade components

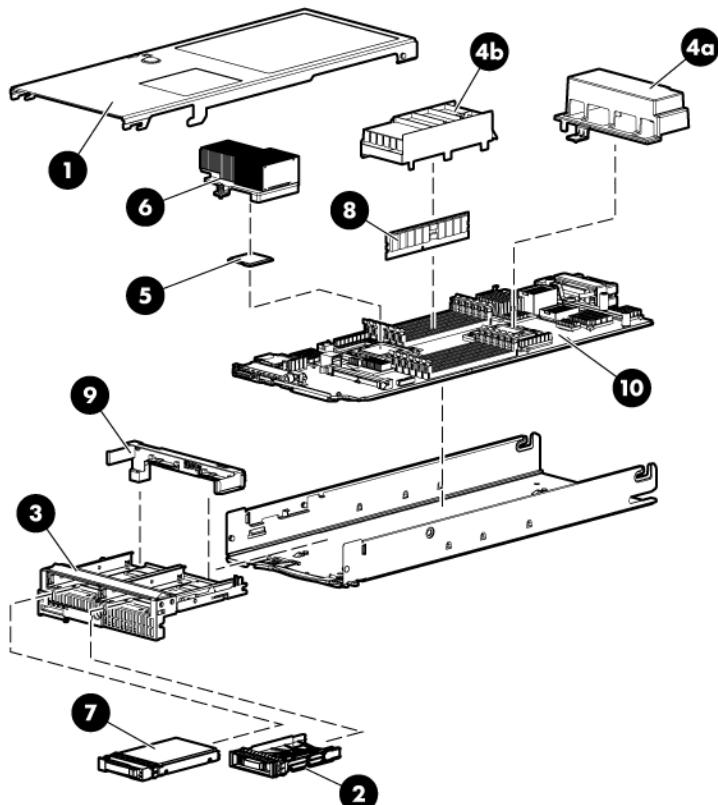

Item	Description	Spare part number	Customer self repair (on page 5)
<b>Mechanical components</b>			
1	Access panel	531224-001	Mandatory <sup>1</sup>
2	Hard drive blank	392613-001	Mandatory <sup>1</sup>
3	Front panel/hard drive cage assembly	531228-001	Mandatory <sup>1</sup>
4	Hardware and plastics kit	531223-001	Mandatory <sup>1</sup>
	a) Heatsink blank	—	—
	b) DIMM baffle	—	—
	c) Battery tray*	—	—
	d) Enclosure connector cover*	—	—
<b>System components</b>			
5	Processors	—	—

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>	<b>Customer self repair (on page 5)</b>
	a) 1.86-GHz Intel® Xeon® E5502 processor* **	490075-001	Optional <sup>2</sup>
	b) 2.00-GHz Intel® Xeon® E5504 processor* **	490074-001	Optional <sup>2</sup>
	c) 2.13-GHz Intel® Xeon® E5506 processor* **	506013-001	Optional <sup>2</sup>
	d) 2.13-GHz Intel® Xeon® L5506 processor* **	513597-001	Optional <sup>2</sup>
	e) 2.26-GHz Intel® Xeon® E5520 processor* **	490073-001	Optional <sup>2</sup>
	f) 2.26-GHz Intel® Xeon® L5520 processor* **	508567-001	Optional <sup>2</sup>
	g) 2.40-GHz Intel® Xeon® E5530 processor* **	490072-001	Optional <sup>2</sup>
	h) 2.53-GHz Intel® Xeon® E5540 processor* **	490071-001	Optional <sup>2</sup>
	i) 2.67-GHz Intel® Xeon® X5550 processor* **	490070-001	Optional <sup>2</sup>
	j) 2.80-GHz Intel® Xeon® X5560 processor* **	490069-001	Optional <sup>2</sup>
	k) 2.93-GHz Intel® Xeon® X5570 processor* **	506012-001	Optional <sup>2</sup>
	l) 2.40-GHz Intel® Xeon® L5530 processor* **	536584-001	Optional <sup>2</sup>
	m) 2.66-GHz Intel® Xeon® E5640 processor* **	594885-001	Optional <sup>2</sup>
	n) 2.26-GHz Intel® Xeon® L5640 processor* **	594890-001	Optional <sup>2</sup>
	o) 2.66-GHz Intel® Xeon® X5650 processor* **	594884-001	Optional <sup>2</sup>
	p) 2.93-GHz Intel® Xeon® X5670 processor* **	594882-001	Optional <sup>2</sup>
	q) 3.06-GHz Intel® Xeon® X5675 processor * **	638134-001	Optional <sup>2</sup>
	r) 2.53-GHz Intel® Xeon® E5649 processor * **	628695-001	Optional <sup>2</sup>
	s) 2.49-GHz Intel® Xeon® E5645 processor * **	628696-001	Optional <sup>2</sup>
	t) 2.40-GHz Intel® Xeon® X5620 processor * **	594887-001	Optional <sup>2</sup>
6	Heatsink	508955-001	Optional <sup>2</sup>
7	Hard drives	—	—
	a) 36-GB, SAS, SFF, 15,000-rpm	432322-001	Mandatory <sup>1</sup>
	b) 36-GB, SAS, SFF, 15,000-rpm, dual port*	418397-001	Mandatory <sup>1</sup>
	c) 72-GB, SAS, SFF, 10,000-rpm*	434916-001	Mandatory <sup>1</sup>
	d) 72-GB, SAS, SFF, 10,000-rpm, dual port*	505608-001	Mandatory <sup>1</sup>
	e) 72-GB, SAS, SFF, 15,000-rpm*	432321-001	Mandatory <sup>1</sup>
	f) 72-GB, SAS, SFF, 15,000-rpm, dual port*	418398-001	Mandatory <sup>1</sup>
	f) 72-GB, SAS, SFF, 15,000-rpm, 6G*	512743-001	Mandatory <sup>1</sup>
	g) 146-GB, SAS, SFF, 15,000-rpm, dual port, 3G*	504334-001	Mandatory <sup>1</sup>
	h) 146-GB, SAS, SFF, 10,000-rpm, 6G*	432320-001	Mandatory <sup>1</sup>
	i) 146-GB, SAS, SFF, 10,000-rpm, 6G*	418399-001	Mandatory <sup>1</sup>
	j) 146-GB, SAS, SFF, 10,000-rpm, dual port, 6G*	507283-001	Mandatory <sup>1</sup>
	k) 300-GB, SAS, SFF, 10,000-rpm, 6G*	493083-001	Mandatory <sup>1</sup>
	l) 146-GB, SAS, SFF, 10,000-rpm, dual port, 6G*	507283-001	Mandatory <sup>1</sup>

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>	<b>Customer self repair (on page 5)</b>
	m) 300-GB, SAS, SFF, 10,000-rpm, dual port, 6G*	507284-001	Mandatory <sup>1</sup>
	n) 120-GB, SATA, SFF, 5,400-rpm*	459322-001	Mandatory <sup>1</sup>
	o) 250-GB, SATA, SFF, 5,400-rpm*	460426-001	Mandatory <sup>1</sup>
	p) 600-GB, SAS, SFF, 10,000-rpm, 6G *	581311-001	Mandatory <sup>1</sup>
	q) 500-GB, SAS, SFF, 7,200-rpm, 6G *	508009-001	Mandatory <sup>1</sup>
	r) 450-GB, SAS, SFF, 10,000-rpm, 6G *	581310-001	Mandatory <sup>1</sup>
	s) 200-GB, 2.5-in, SAS HP SLC	632627-001	Mandatory <sup>1</sup>
	t) 400-GB, 2.5-in. SAS HP SLC	632630-001	Mandatory <sup>1</sup>
	u) 200-GB, 2.5-in. SAS HP MLC	632633-001	Mandatory <sup>1</sup>
	v) 400-GB, 2.5-in SAS HP MLC	632636-001	Mandatory <sup>1</sup>
	w) 800-GB, 2.5-in. SAS HP MLC	632639-001	Mandatory <sup>1</sup>
	x) 900GB 6G SAS 2.5 10K HP DP ENT	619463-001	Mandatory <sup>1</sup>
	<b>Boards</b>		
8	DIMMs	—	—
	a) PC3-10600E (DDR3-1333) 1-GB*	501539-001	Mandatory <sup>1</sup>
	b) PC3-10600E (DDR3-1333) 2-GB*	501540-001	Mandatory <sup>1</sup>
	c) PC3-10600R (DDR3-1333) 2-GB*	501533-001	Mandatory <sup>1</sup>
	d) PC3-10600R (DDR3-1333) 2Rx4 4-GB*	501534-001	Mandatory <sup>1</sup>
	e) PC3-8500R (DDR3-1066) 4-GB*	501535-001	Mandatory <sup>1</sup>
	f) PC3-8500R (DDR3-1066) 8-GB*	519201-001	Mandatory <sup>1</sup>
	g) PC3-10600R (DDR3-1333) 1Rx4 4-GB*	595424-001	Mandatory <sup>1</sup>
	h) PC3L-10600R (DDR3-1333) 4-GB*	606426-001	Mandatory <sup>1</sup>
	i) PC3L-10600R (DDR3-1333) 8-GB*	606427-001	Mandatory <sup>1</sup>
	j) PC3-10600E (DDR3-1333) 4-GB*	501541-001	Mandatory <sup>1</sup>
	k) PC3-10600R 16-GB, DDR3-1333, 512-MB x4*	501538-001	Mandatory <sup>1</sup>
9	Hard drive backplane	531225-001	Optional <sup>2</sup>
10	System board	531221-001	Optional <sup>2</sup>
11	Trusted Platform Module*	505836-001	No <sup>3</sup>
12	SD card module*	531227-001	Mandatory <sup>1</sup>
	<b>Miscellaneous</b>		
13	System battery*	234556-001	Optional <sup>2</sup>
14	Ethernet mezzanine*	—	—
	a) HP NC325m PCI Express Quad Port 1Gb Server Adapter for c-Class BladeSystem	436011-001	Mandatory <sup>1</sup>
	b) HP NC326m PCI Express Dual Port 1Gb Server Adapter for c-Class BladeSystem	419330-001	Mandatory <sup>1</sup>
	c) HP NC360m Dual Port 1GbE BL-c Adapter	448068-001	Mandatory <sup>1</sup>

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>	<b>Customer self repair (on page 5)</b>
	d) HP NC364m Quad Port 1GbE BL-c Adapter	448066-001	Mandatory <sup>1</sup>
	e) HP NC382m Dual Port 1GbE Multifunction BL-c Adapter	462748-001	Mandatory <sup>1</sup>
	f) HP NC512m Dual Port 10GbE Multifunction BL-c Adapter	448515-001	Mandatory <sup>1</sup>
	g) HP NC532m Dual Port 10GbE BL-c Adapter	466308-001	Mandatory <sup>1</sup>
	h) QLogic QMH4062 1Gb E iSCSI Adapter for HP BladeSystem c-Class	488081-001	Mandatory <sup>1</sup>
	i) HP NC550m PCIe x8 Dual Port 10 GbE Flex-10 Ethernet Adapter	586445-001	Mandatory <sup>1</sup>
15	Fibre Channel mezzanine*	—	—
	a) Emulex LPe1105-HP 4Gb FC HBA for HP c-Class BladeSystem	405921-001	Mandatory <sup>1</sup>
	b) QLogic QMH2462 4Gb FC HBA for HP c-Class BladeSystem	405920-001	Mandatory <sup>1</sup>
16	Infiniband mezzanine*	—	—
	a) HP 4X QDR IB Dual Port Mezzanine HCA for HP BladeSystem c-Class	519133-001	Mandatory <sup>1</sup>
	b) HP 4X DDR IB Dual Port Mezzanine HCA for HP BladeSystem c-Class	450604-001	Mandatory <sup>1</sup>
	c) HP 4X DDR IB Mezzanine HCA for HP BladeSystem c-Class	410500-001	Mandatory <sup>1</sup>
	d) HP 4X QDR IB Mezzanine HCA for HP BladeSystem c-Class	583999-001	Mandatory <sup>1</sup>
	e) HP 4X QDR IB CX-2 Dual Port Mezzanine HCA for HP BladeSystem c-Class	593411-001	Mandatory <sup>1</sup>
17	BBWC options*	—	—
	a) Cache module, 512-MB	462975-001	Mandatory <sup>1</sup>
	b) Cache module, 256-MB	462974-001	Mandatory <sup>1</sup>
	c) BBWC battery pack	462976-001	Mandatory <sup>1</sup>
	d) Battery cable, 24 in.*	488138-001	Mandatory <sup>1</sup>
18	Server blade release lever kit*	531232-001	Optional <sup>2</sup>
	a) Server blade release lever	—	—
	b) Server blade release button	—	—
	c) Server blade release lever spring	—	—
	d) Server blade release lever nut	—	—
19	HP c-Class Blade SUV Cable*	416003-001	Mandatory <sup>1</sup>
20	Mezzanine graphics options kits *		
	NVIDIA Quadro FX 880M, 1 GB	608293-001	Mandatory <sup>1</sup>
	NVIDIA Quadro FX 770M, 512 MB	583493-001	Mandatory <sup>1</sup>
	NVIDIA Quadro FX 770M, 256 MB	583494-001	Mandatory <sup>1</sup>
	NVIDIA Quadro FX 2800M, 1 GB	608294-001	Mandatory <sup>1</sup>
	NVIDIA Quadro FX 3600M, 512 MB	583495-001	Mandatory <sup>1</sup>

<sup>\*</sup>Not shown

<sup>\*\*</sup>Do not mix processors with different speeds or cache sizes.

<sup>1</sup>Mandatory—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

<sup>2</sup>Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

<sup>3</sup>No—Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

<sup>1</sup>Mandatory: Obligatoire—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

<sup>2</sup>Optional: Facultatif—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

<sup>3</sup>No: Non—Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

<sup>1</sup>Mandatory: Obbligatorie—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.

<sup>2</sup>Optional: Opzionali—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese addizionali a seconda del tipo di garanzia previsto per il prodotto.

<sup>3</sup>No: Non CSR—Alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

<sup>1</sup>Mandatory: Zwingend—Teile, die im Rahmen des Customer Self Repair Programms ersetzt werden müssen. Wenn Sie diese Teile von HP ersetzen lassen, werden Ihnen die Versand- und Arbeitskosten für diesen Service berechnet.

<sup>2</sup>Optional: Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

<sup>3</sup>No: Kein—Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

<sup>1</sup>Mandatory: Obligatorio—componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

<sup>2</sup>Optional: Opcional— componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

<sup>3</sup>No: No—Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

<sup>1</sup>Mandatory: Verplicht—Onderdelen waarvoor Customer Self Repair verplicht is. Als u HP verzoekt deze onderdelen te vervangen, komen de reiskosten en het arbeidsloon voor uw rekening.

<sup>2</sup>Optional: Optioneel—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

<sup>3</sup>No: Nee—Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantieverwaarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

<sup>1</sup>Mandatory: Obrigatória—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

<sup>2</sup>Optional: Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

<sup>3</sup>No: Nenhuma—Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

<sup>1</sup>Mandatory : 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

<sup>2</sup>Optional : 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、費用を負担していただくことなく保証サービスを受けることができます。

<sup>3</sup>No : 除外 - HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

<sup>1</sup>Mandatory: 强制性的 — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

<sup>2</sup>Optional: 可选的 — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

<sup>3</sup>No: 否 — 某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

<sup>1</sup>Mandatory: 強制的 — 客戶自行維修所使用的零件是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

<sup>2</sup>Optional: 選購的 — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。


<sup>3</sup>No: 否 — 某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

<sup>1</sup> Mandatory: 필수 — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

<sup>2</sup> Optional: 옵션 — 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

<sup>3</sup> No: No — 고객 셀프 수리가 불가능하도록 설계된 HP 부품. 이 부품들은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 고객 보증을 만족시키기 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다.

# Graphics Expansion Blade components

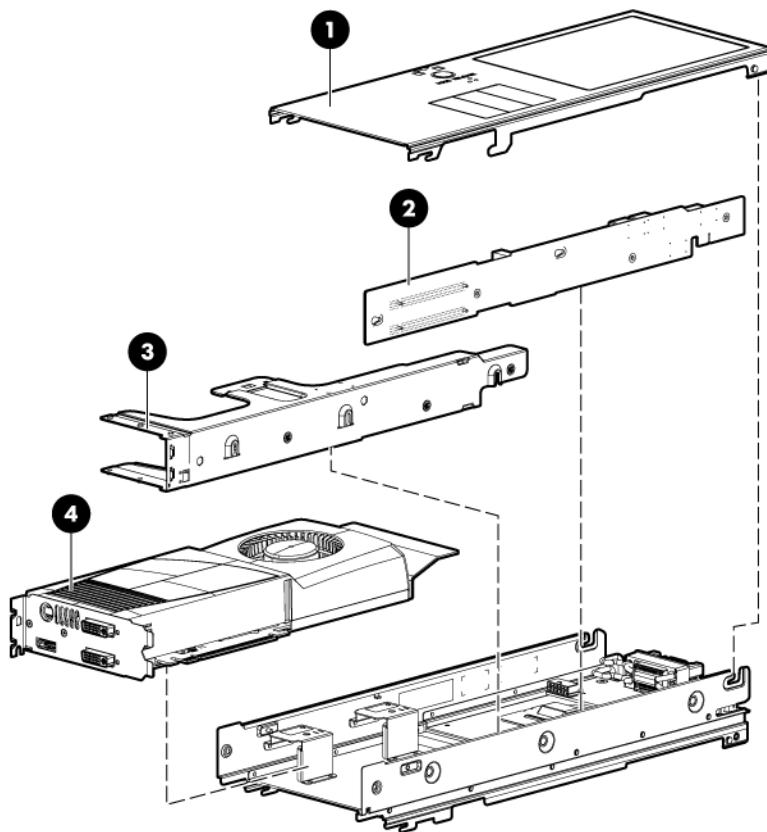

Item	Description	Spare part number	Customer self repair (on page 5)
1	Top cover	531224-001	Mandatory <sup>1</sup>
2	BD PCIe card cage	608178-001	Optional <sup>2</sup>
3	Cage Graphics Expander	608176-001	Optional <sup>2</sup>
4	Multi-MXM PCI board	686155-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro 1000M graphics card	686157-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro 3000M graphics card	686158-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro 4000 graphics card	654840-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro 5000 graphics card	616077-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro 6000 graphics card	616078-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro FX 3800 graphics card	519297-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro FX 4800 graphics card	536796-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro FX 5800 graphics card	536797-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro Q4000 graphics card PCI extender bracket	662365-001	Mandatory <sup>1</sup>
—	NVIDIA Quadro Q5000-6000 graphics card PCI extender bracket	662366-001	Mandatory <sup>1</sup>
—	AMD Firestream FS9350	653975-001	Mandatory <sup>1</sup>
—	NVIDIA Tesla M2072Q	651152-001	Mandatory <sup>1</sup>

Parts listed here are in addition to parts listed for the workstation blade.

<sup>1</sup>Mandatory—Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service.

<sup>2</sup>Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that HP replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

<sup>3</sup>No—Some HP parts are not designed for customer self repair. In order to satisfy the customer warranty, HP requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

<sup>1</sup>Mandatory: Obligatoire—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à HP de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

<sup>2</sup>Optional: Facultatif—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à HP de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

<sup>3</sup>No: Non—Certaines pièces HP ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, HP exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

<sup>1</sup>Mandatory: Obbligatorie—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad HP, deve sostenere le spese di spedizione e di manodopera per il servizio.

<sup>2</sup>Optional: Opzionali—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad HP, potrebbe dover sostenere spese addizionali a seconda del tipo di garanzia previsto per il prodotto.

<sup>3</sup>No: Non CSR—Alcuni componenti HP non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, HP richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

<sup>1</sup>Mandatory: Zwingend—Teile, die im Rahmen des Customer Self Repair Programms ersetzt werden müssen. Wenn Sie diese Teile von HP ersetzen lassen, werden Ihnen die Versand- und Arbeitskosten für diesen Service berechnet.

<sup>2</sup>Optional: Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von HP vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

<sup>3</sup>No: Kein—Einige Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem HP Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

<sup>1</sup>Mandatory: Obligatorio—componentes para los que la reparación por parte del usuario es obligatoria. Si solicita a HP que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

<sup>2</sup>Optional: Opcional— componentes para los que la reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que HP realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

<sup>3</sup>No: No—Algunos componentes no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, HP pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

<sup>1</sup>Mandatory: Verplicht—Onderdelen waarvoor Customer Self Repair verplicht is. Als u HP verzoekt deze onderdelen te vervangen, komen de reiskosten en het arbeidsloon voor uw rekening.

<sup>2</sup>Optional: Optioneel—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter HP verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

<sup>3</sup>No: Nee—Sommige HP onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorraarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

<sup>1</sup>Mandatory: Obrigatória—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a HP substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

<sup>2</sup>Optional: Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a HP as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

<sup>3</sup>No: Nenhuma—Algumas peças da HP não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a HP exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca “No” (Não), no catálogo de peças ilustrado.

<sup>1</sup>Mandatory : 必須 - 顧客自己修理が必須の部品。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

<sup>2</sup>Optional : 任意 - 顧客自己修理が任意である部品。この部品も顧客自己修理用です。当該部品について、もしもお客様がHPに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、費用を負担していただくことなく保証サービスを受けることができます。

<sup>3</sup>No : 除外 - HP製品の一部の部品は、顧客自己修理用ではありません。製品の保証を継続するためには、HPまたはHP正規保守代理店による交換作業が必須となります。部品カタログには、当該部品が顧客自己修理除外品である旨が記載されています。

<sup>1</sup>Mandatory: 强制性的 — 要求客户必须自行维修的部件。如果您请求 HP 更换这些部件，则必须为该服务支付差旅费和人工费用。

<sup>2</sup>Optional: 可选的 — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 HP 为您更换这些部件，则根据为您的产品指定的保修服务类型，HP 可能收取或不再收取任何附加费用。

<sup>3</sup>No: 否 — 某些 HP 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，HP 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

<sup>1</sup>Mandatory: 強制的 — 客戶自行維修所使用的零件是強制性的。如果您要求 HP 更換這些零件，HP 將會向您收取此服務所需的外出費用與勞動成本。

<sup>2</sup>Optional: 選購的 — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 HP 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

<sup>3</sup>No: 否 — 某些 HP 零件沒有消費者可自行維修的設計。為符合客戶保固，HP 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

<sup>1</sup> Mandatory: 필수 — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 HP에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

<sup>2</sup> Optional: 옵션 — 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 HP에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

<sup>3</sup> No: No — 고객 셀프 수리가 불가능하도록 설계된 HP 부품. 이 부품들은 고객 셀프 수리가 불가능하도록 설계되었습니다. HP는 고객 보증을 만족시키기 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다.

# Removal and replacement procedures

## Required tools

You need the following items for some procedures:

- T-15 Torx screwdriver (provided inside the access panel)
- HP Insight Diagnostics software ("HP Insight Diagnostics" on page 78)

## Safety considerations

Before performing service procedures, review all the safety information.

### Preventing electrostatic discharge

To prevent damaging the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

### Workstation blade warnings and cautions



**WARNING:** To reduce the risk of shock or injury from high-current electrical energy, do not remove the workstation blade access panel and then install the workstation blade into the enclosure.



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




**CAUTION:** Do not operate the workstation blade with the access panel removed. Operating the workstation blade in this manner results in improper airflow and improper cooling that can lead to thermal damage.



**CAUTION:** When performing non-hot-plug operations, you must power down the workstation blade and/or the system. However, the workstation blade might have to be powered up when performing other operations, such as hot-plug installations or troubleshooting.

## Symbols on equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions.

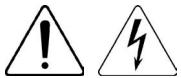

This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.

**WARNING:** To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.



This symbol indicates the presence of electric shock hazards. The area contains no user or field serviceable parts. Do not open for any reason.

**WARNING:** To reduce the risk of injury from electric shock hazards, do not open this enclosure.



This symbol on an RJ-45 receptacle indicates a network interface connection.

**WARNING:** To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

**WARNING:** To reduce the risk of injury from a hot component, allow the surface to cool before touching.



This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.

5.82 - 6.44 kg  
12.82 - 14.20 lb

**WARNING:** To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



These symbols, on power supplies or systems, indicate that the equipment is supplied by multiple sources of power.

**WARNING:** To reduce the risk of injury from electric shock, remove all power cords to completely disconnect power from the system.

## Workstation blade preparation

To service any internal workstation blade component, power down the workstation blade and remove it from the enclosure.

### Power down the workstation blade

Before powering down the workstation blade for any upgrade or maintenance procedures, perform a backup of critical server data and programs.



**IMPORTANT:** When the workstation blade is in standby mode, auxiliary power is still being provided to the system.

Depending on the Onboard Administrator configuration, use one of the following methods to power down the workstation blade:

- Press and release the Power On/Standy button.  
This method initiates a controlled shutdown of applications and the OS before the workstation blade enters standby mode.
- Press and hold the Power On/Standy button for more than 4 seconds to force the workstation blade to enter standby mode.  
This method forces the workstation blade to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.
- Use a virtual power button selection through iLO 2.  
This method initiates a controlled remote shutdown of applications and the OS before the workstation blade enters standby mode.
- Use the Onboard Administrator CLI to execute one of the following commands:
  - `poweroff server [bay number]`  
This command initiates a controlled shutdown of applications and the OS before the workstation blade enters standby mode.
  - `poweroff server [bay number] force`  
This form of the command forces the workstation blade to enter standby mode without properly exiting applications and the OS. If an application stops responding, this method forces a shutdown.
- Use the Onboard Administrator GUI to initiate a shutdown:
  - a. Select the **Enclosure Information** tab.
  - b. In the Device Bays item, select the **Overall** checkbox.
  - c. From the Virtual Power menu, initiate a shutdown of applications and the OS:
    - For a controlled shutdown, select **Momentary Press**.
    - For an emergency shutdown, select **Press and Hold**.

Before proceeding, verify the workstation blade is in standby mode by observing that the system power LED is amber.

To power down all workstation blades, use one of the following methods:


- Execute one of the following commands using the Onboard Administrator CLI:
  - `poweroff server all`  
This command initiates a controlled shutdown of applications and the OS before the workstation blade enters standby mode.
  - `poweroff server all force`  
This command forces the workstation blade to enter standby mode without exiting applications and the OS. This command is an emergency method to force a shutdown in the event of a hung application.
- Use the Onboard Administrator GUI to initiate a shutdown:
  - a. Select the **Enclosure Information** tab, and then in the Device Bays item, select the **Overall** checkbox.
  - b. On the Virtual Power menu, to initiate a controlled shutdown of applications and the OS, select **Momentary Press**, or to initiate an emergency shutdown of applications and the OS, select **Press and Hold**.

## Remove the workstation blade

⚠ **CAUTION:** Do not use the workstation blade release lever to lift or carry the workstation blade. Always support the weight of the workstation blade by handling the chassis directly. Improper use can damage the release lever and the workstation blade.

To remove the component:

1. Identify the proper workstation blade.
2. Power down the workstation blade (on page 26).
3. Remove the workstation blade.

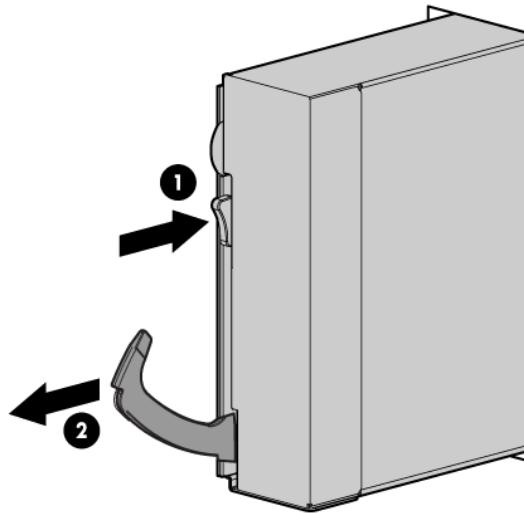

4. Place the workstation blade on a flat, level work surface.

⚠ **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

⚠ **CAUTION:** To prevent damage to electrical components, properly ground the workstation blade before beginning any installation procedure. Improper grounding can cause ESD.

## Access panel

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Lift the access panel latch and slide the access panel to the rear.
4. Remove the access panel.

⚠ **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



**CAUTION:** To prevent damage to electrical components, properly ground the workstation blade before beginning any installation procedure. Improper grounding can cause ESD.


To replace the component:

1. Place the access panel on top of the workstation blade with the hood latch open. Allow the panel to extend past the rear of the workstation blade approximately 0.8 cm (0.2 in).
2. Engage the anchoring pin with the corresponding hole in the latch.
3. Push down on the hood latch. The access panel slides to a closed position.

## WS460c Graphics Expansion Blade access panel

To remove the access panel:

1. Lift the access panel latch (1). The access panel slides to the rear (2).
2. Remove the access panel.

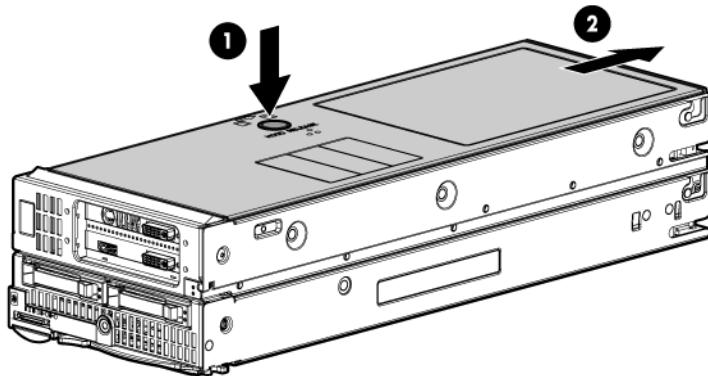


To reinstall the access panel, follow these steps in reverse order.

## WS460c Graphics Expansion Blade


To remove the blade:

1. Remove the WS460c Graphics Expansion Blade access panel ("WS460c Graphics Expansion Blade access panel" on page 29).

2. Disconnect the four PCIe/SAS cables from the PCIe riser board, noting the location for reinstallation.

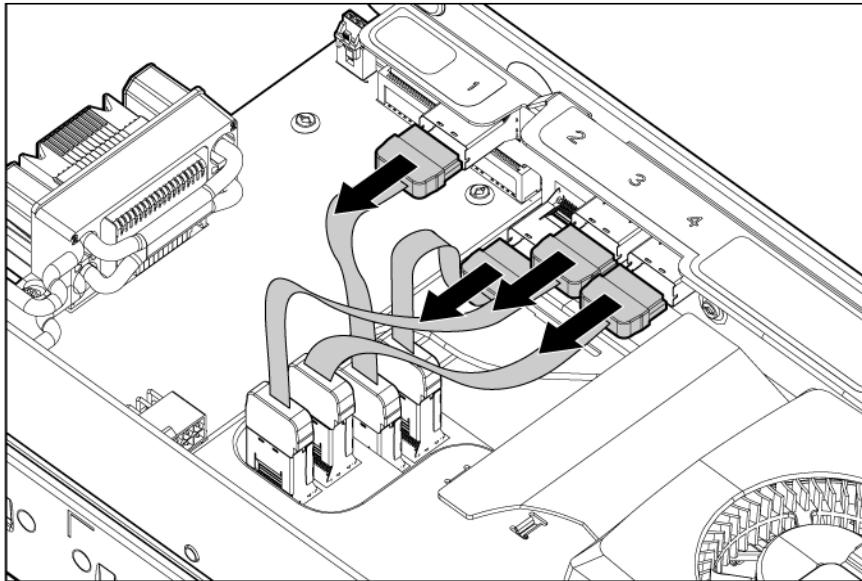

3. Remove the two Torx-15 screws that secure the graphics expansion blade to the workstation blade (1).
4. To remove the graphics expansion blade from the workstation blade, carefully pull up on the front and right sides of the PCIe card cage to disengage it from the anchoring pins on the expansion blade enclosure (1), and then lift the PCIe card cage out of the expansion blade enclosure (2).

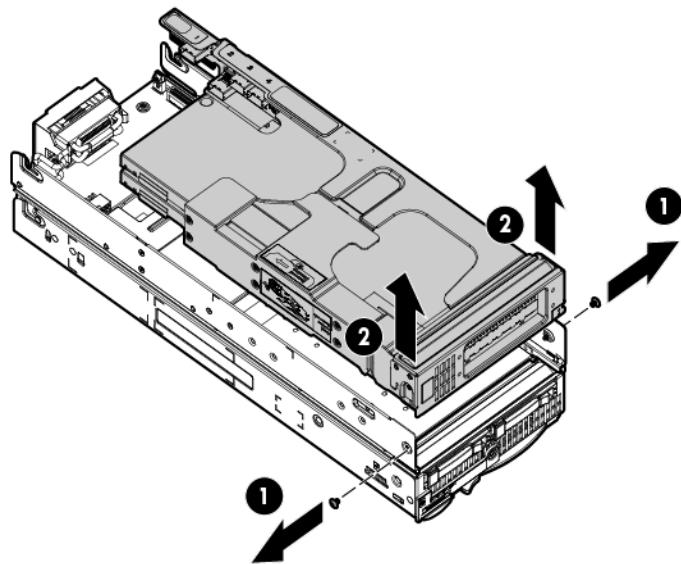


To reinstall the blade, follow these steps in reverse order.

## WS460c Graphics Expansion Blade PCIe card cage


To install another graphics card, you must remove the PCIe card cage from the WS460c Graphics Expansion Blade. To remove the card cage:

1. Remove the WS460c Graphics Expansion Blade access panel ("WS460c Graphics Expansion Blade access panel" on page 29).

2. Disconnect the four PCIe/SAS cables from the PCIe riser board, noting the location for reinstallation.

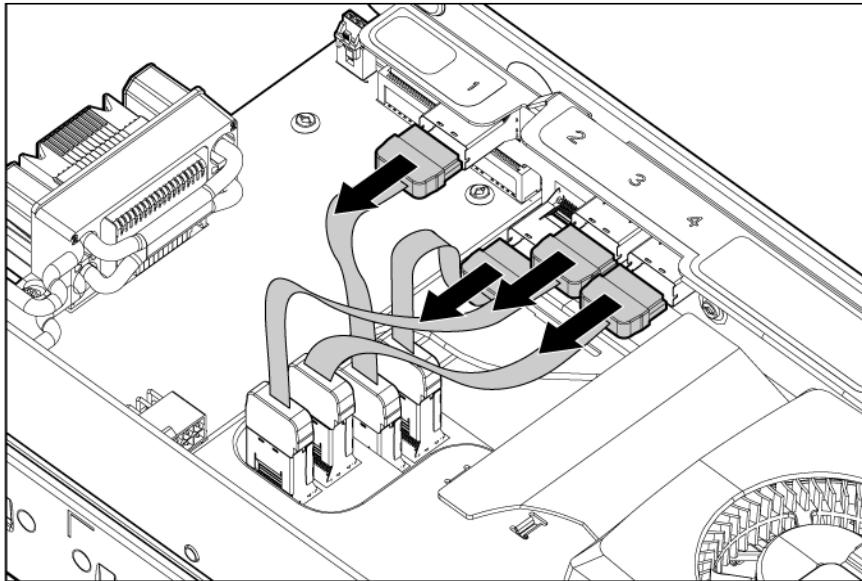


3. If you are removing the graphics card from the PCIe card cage, disconnect the power cables from the graphics board.

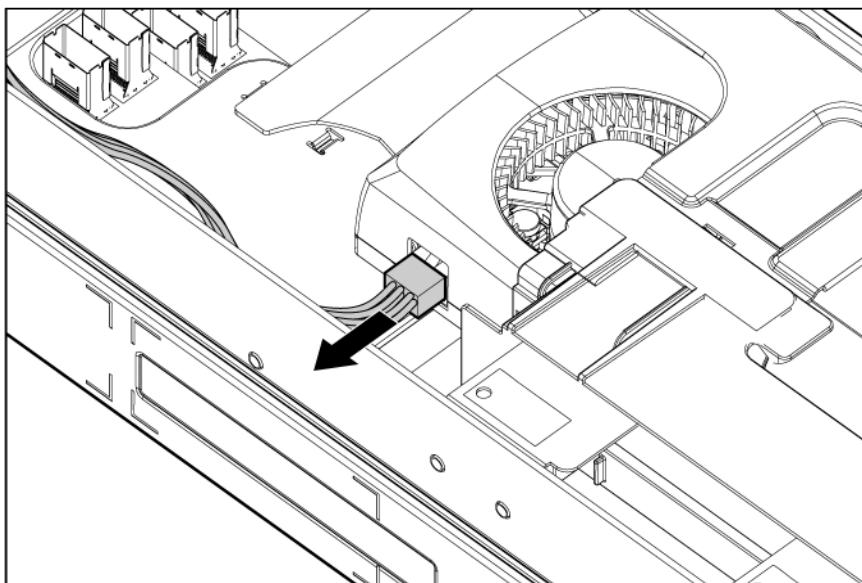

4. Remove the two Torx-15 screws that secure the front of the PCIe card cage (1).

5. Carefully pull up on the front and right sides of the PCIe card cage to disengage it from the anchoring pins on the expansion blade enclosure, and then lift the PCIe card cage out of the expansion blade enclosure (2).

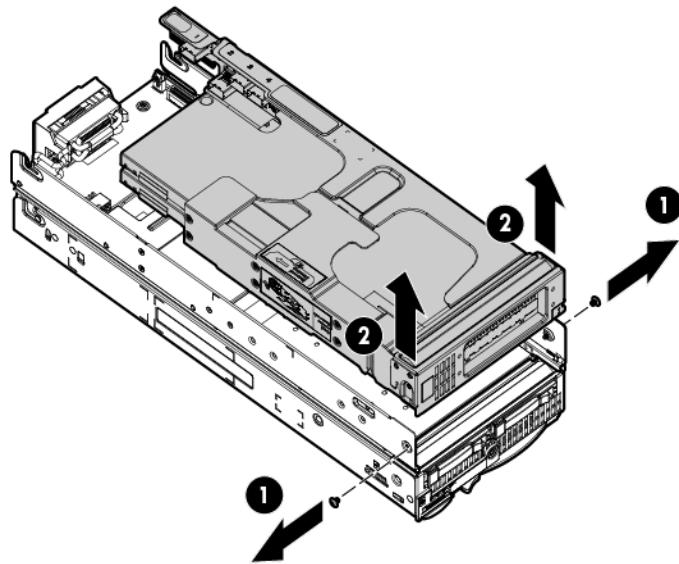


- To replace the cage, position the cage over the expansion blade enclosure, align the slots on the right and left sides of the card cage with the anchoring pins, and then push down until the card cage is firmly sealed.
- The PCIe/SAS connectors on the riser board are labeled 1 through 4. Each mezzanine connector board has two connectors labeled J3 and J4. The PCIe/SAS cables connect the mezzanine connector boards to the riser board in the following order:
  - a. Connect the first long PCIe/SAS cable (J3) to the first riser connector.
  - b. Connect the second long PCIe/SAS cable (J4) to the second riser connector.
  - c. Connect the first short PCIe/SAS cable (J3) to the third riser connector.
  - d. Connect the second short PCIe/SAS cable (J4) to the fourth riser connector.


## Configure the WS460c Graphics Expansion Blade configuration with HBA

**NOTE:** This unique configuration is for users who want to use a single mezzanine card with the graphics expansion blade. (For example, using a HBA to connect to storage.) This configuration permits the use of only one PCIe slot on the graphics expansion blade.


1. Place the host bus adapter (1) into mezzanine slot one, and then tighten the screws (2).

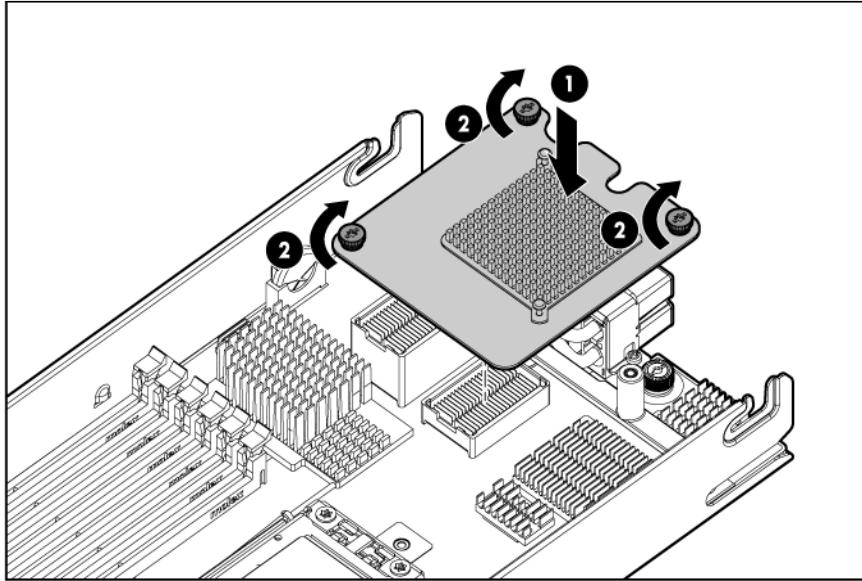


2. Place the expansion cable card (1) into mezzanine slot two, and then tighten the screw (2).

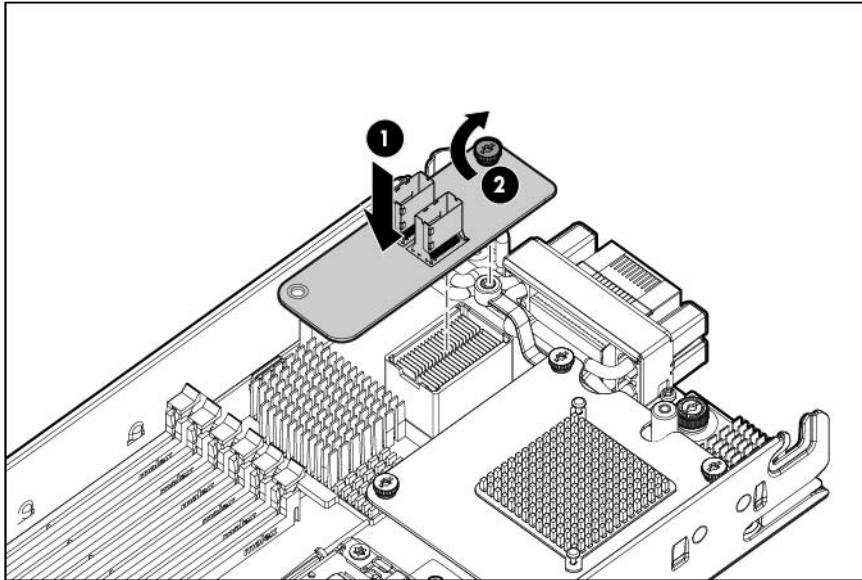


3. Slide the graphics expansion blade onto the workstation blade.

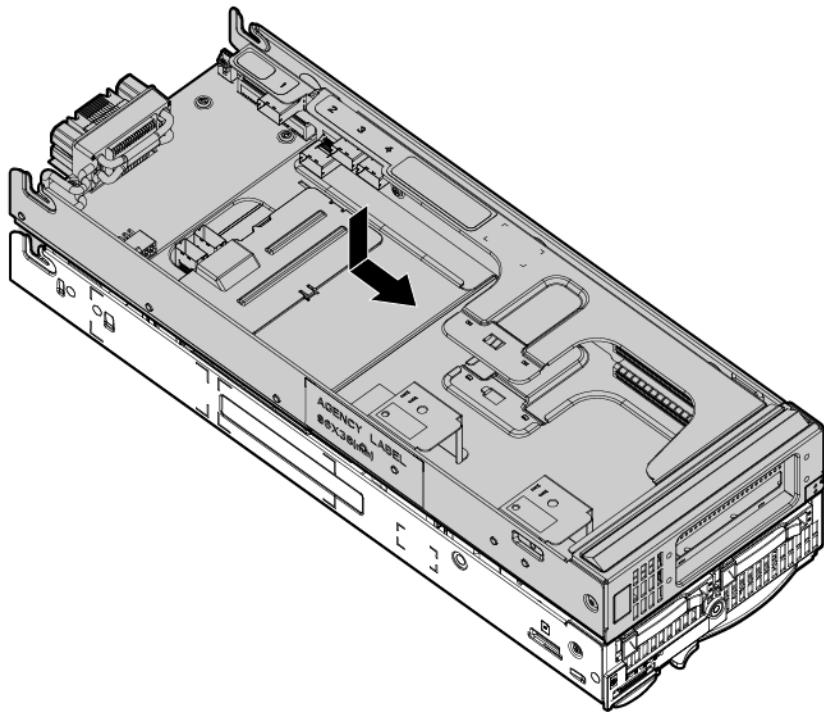


4. Remove the screws (1), and then remove the PCIe slot card (2) from the graphics expansion blade.

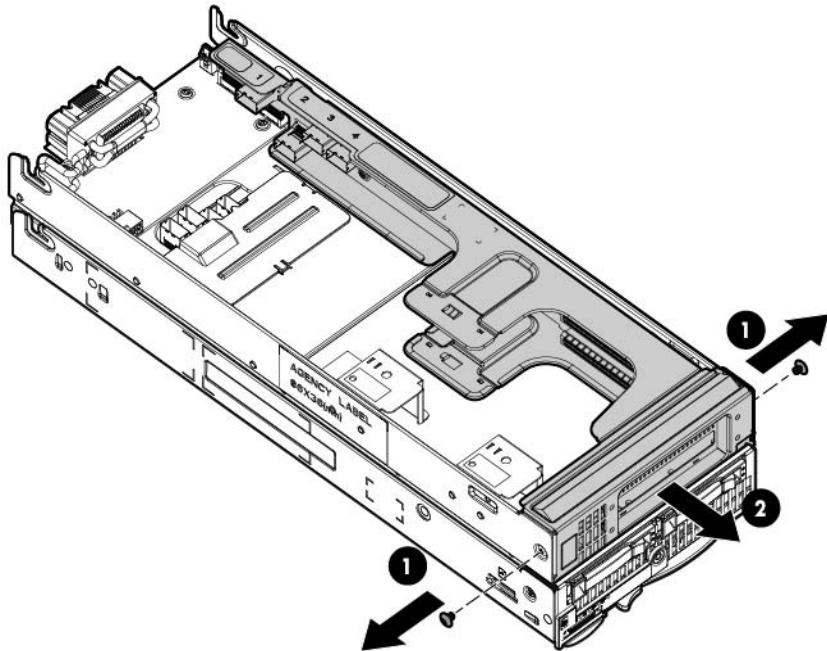


5. Insert the graphic card into PCIe slot one.

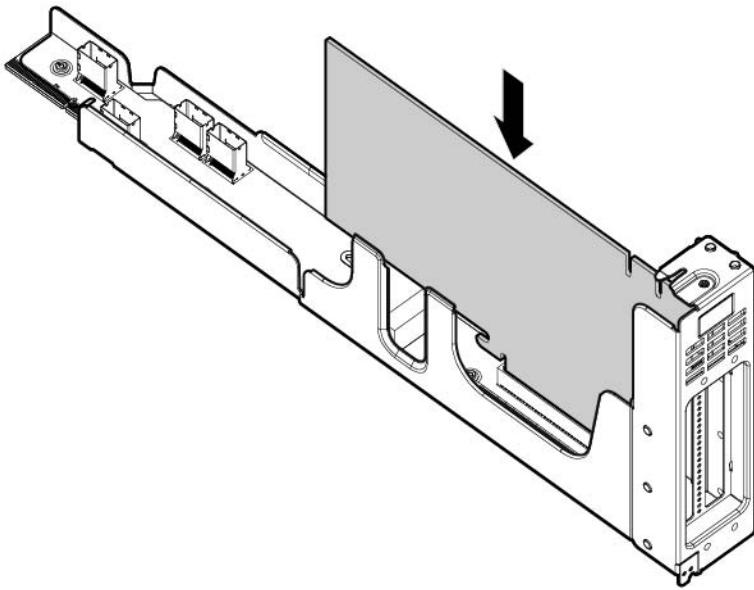


6. Replace the graphic card retainer.

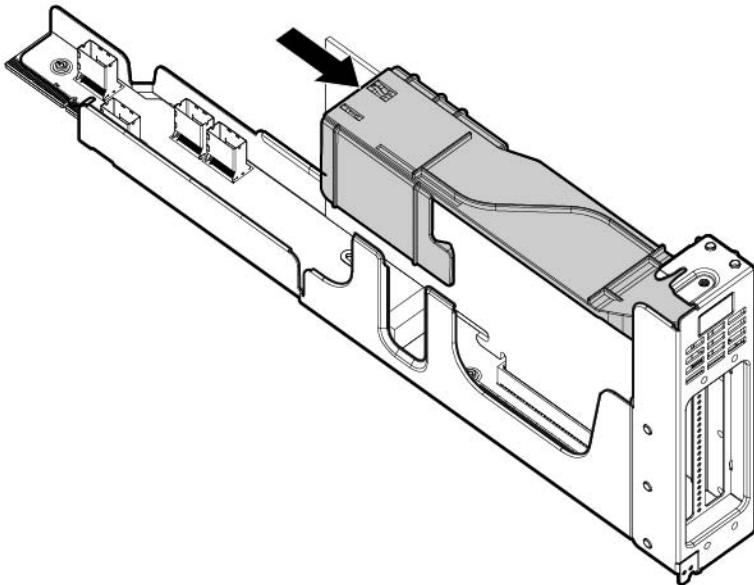


7. Locate the dipswitch on the left side of the PCIe slot card, and then flip switch 2 to ON.

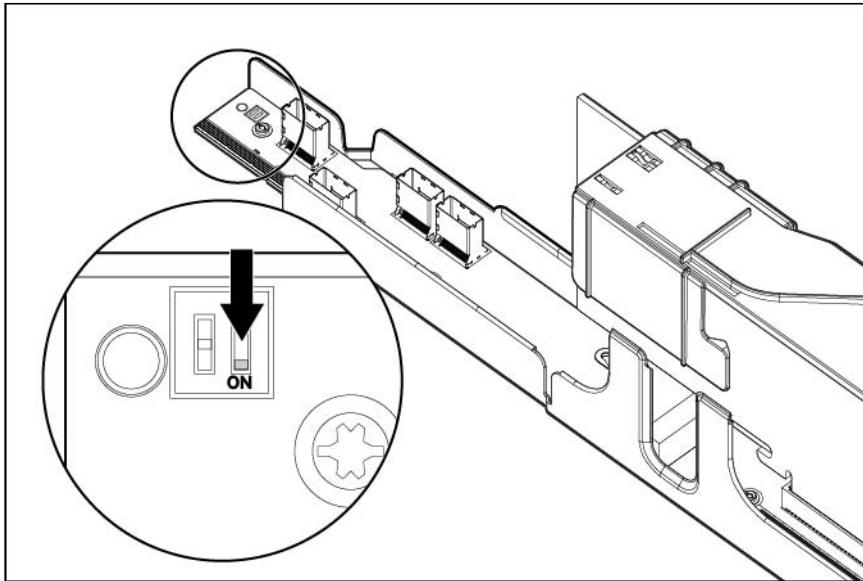


8. Replace the PCIe slot card on the graphics expansion blade (1), and then tighten the screws (2).

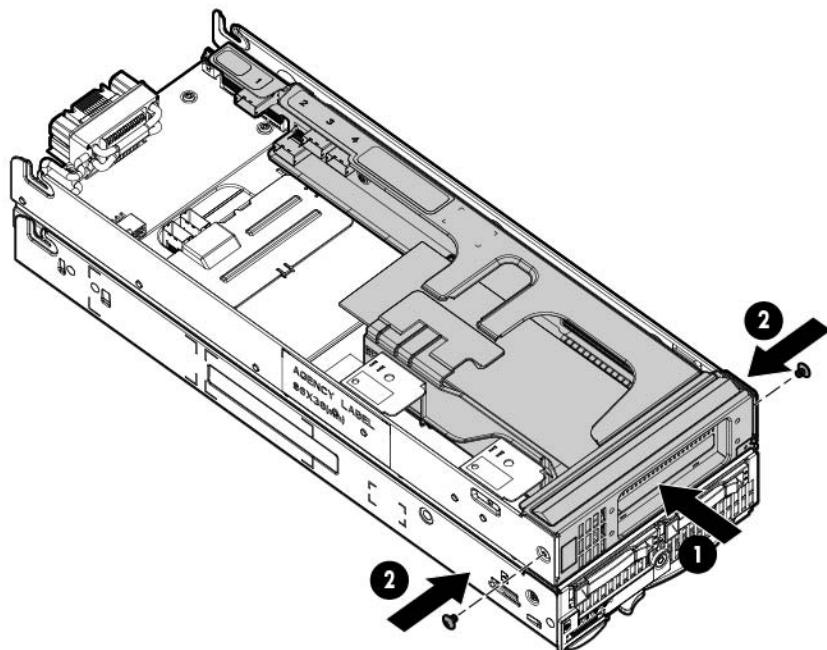


**9.** Insert the graphic card power cable.

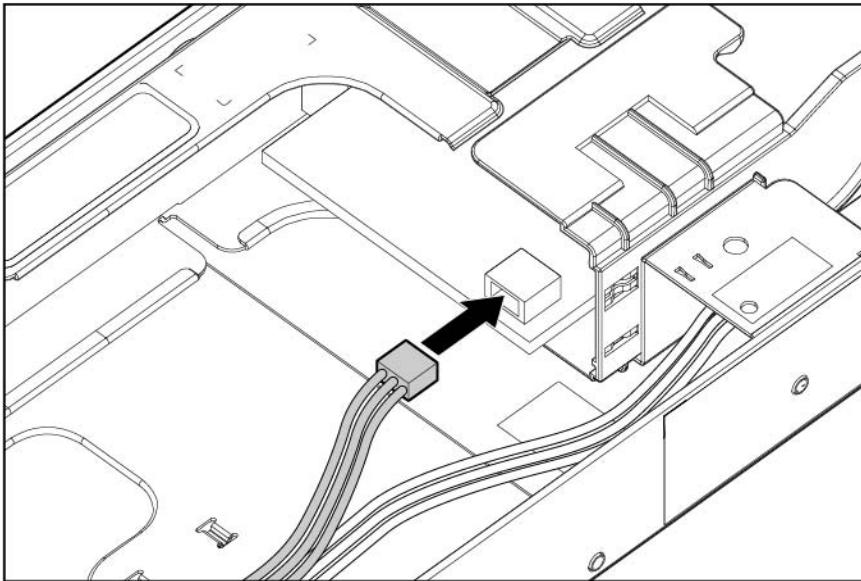


**10.** Insert cables into the graphic expansion cable mezzanine card.

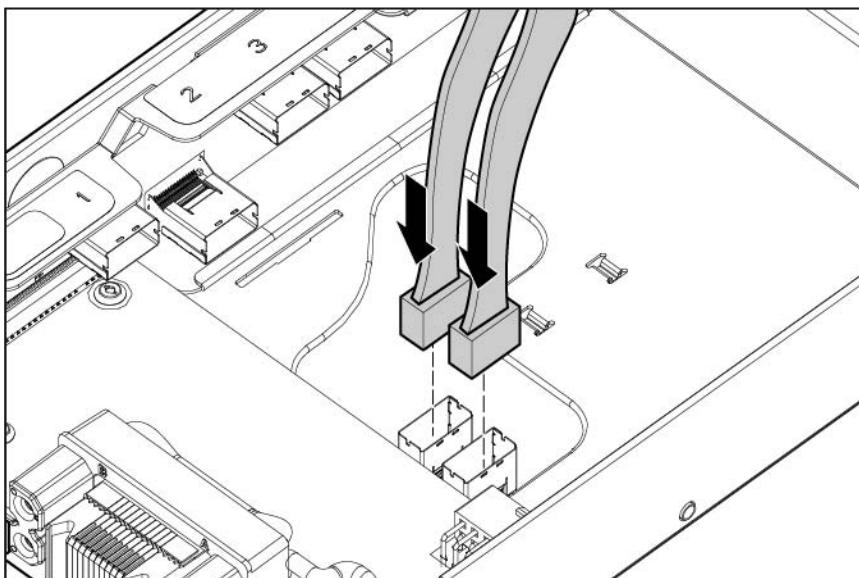

**11.** Insert cable 4 to slot 2 (1), and then insert cable 3 to slot 1 (2).

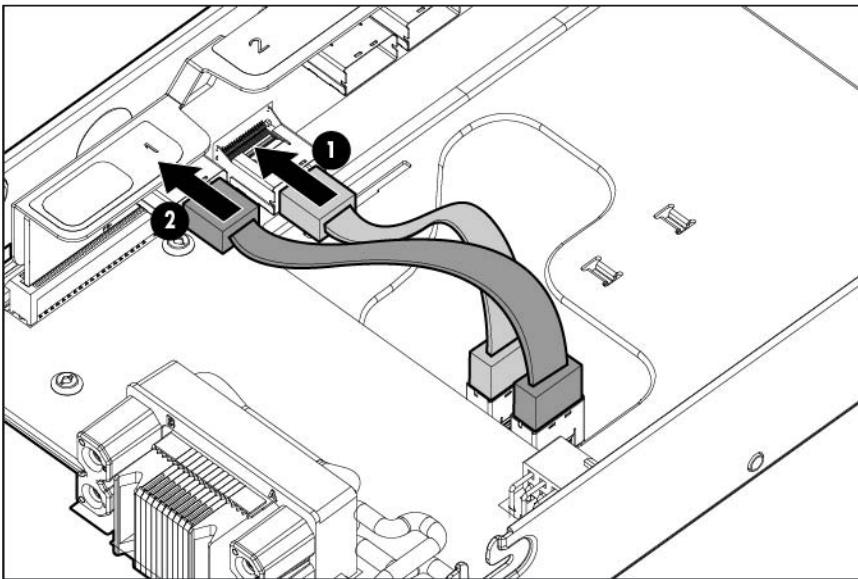


**12.** Slide the cover onto graphic expansion blade.

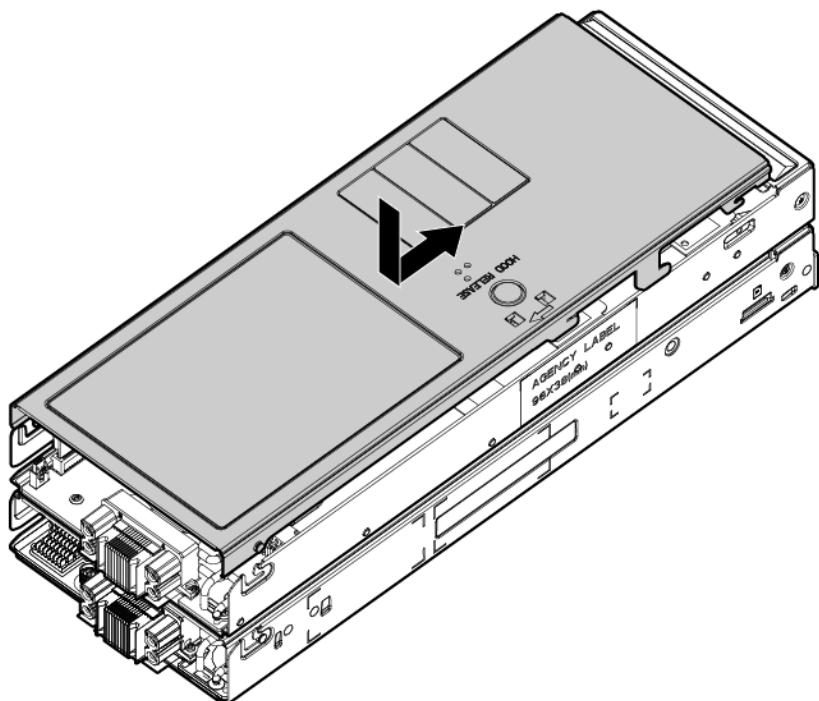

## Hard drive blank

Remove the hard drive blank.

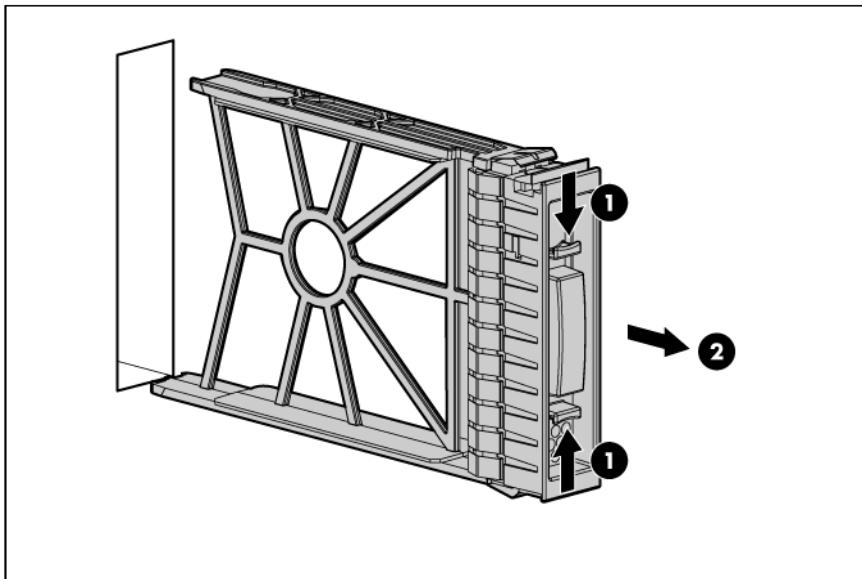

To replace the component, reverse the removal procedure.

## Hard drive



**IMPORTANT:** Hot-plug capability and drive LED support are only available when a supported optional controller is installed in the server.


To remove the component:

1. Back up all data on the hard drive.
2. Power down the workstation blade (on page 26).



**CAUTION:** To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

3. Remove the hard drive.

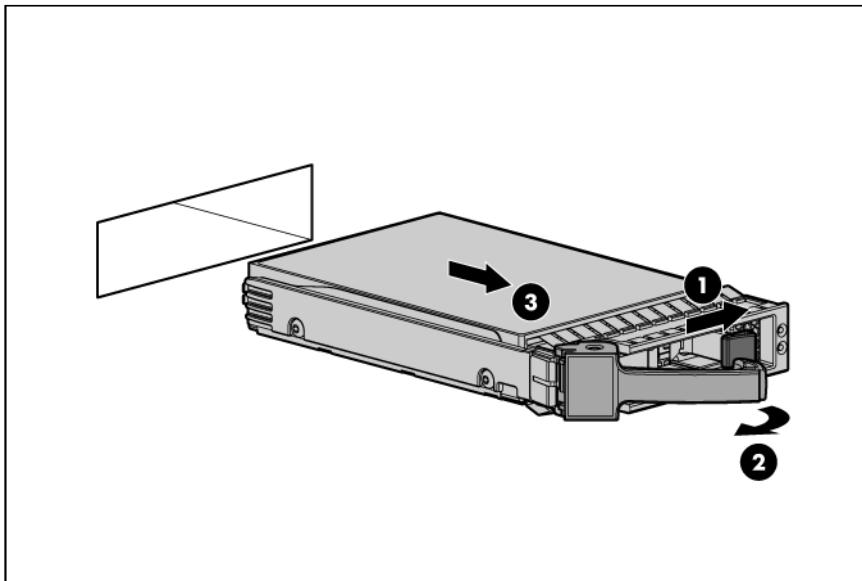

To replace the component, reverse the removal procedure.

When adding hard drives to the workstation blade, observe the following general guidelines:

- The system automatically sets all drive numbers.
- If only one hard drive is used, install it in the bay with the lowest drive number.
- Drives must be the same capacity to provide the greatest storage space efficiency when drives are grouped together into the same drive array.

Optional storage controllers provide support for hot-plug capability and drive LEDs. Controller options are:

- The embedded controller supports non-hot-plug SATA hard drives. Drive LEDs are not supported.
- Optional SATA controllers support hot-plug SATA hard drives and drive LEDs.
- Optional SAS controllers support hot-plug SAS or SATA hard drives and drive LEDs.

---

**NOTE:** ACU does not support mixing SAS and SATA drives in the same logical volume.


---

## Battery tray

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).

4. Remove the battery tray.

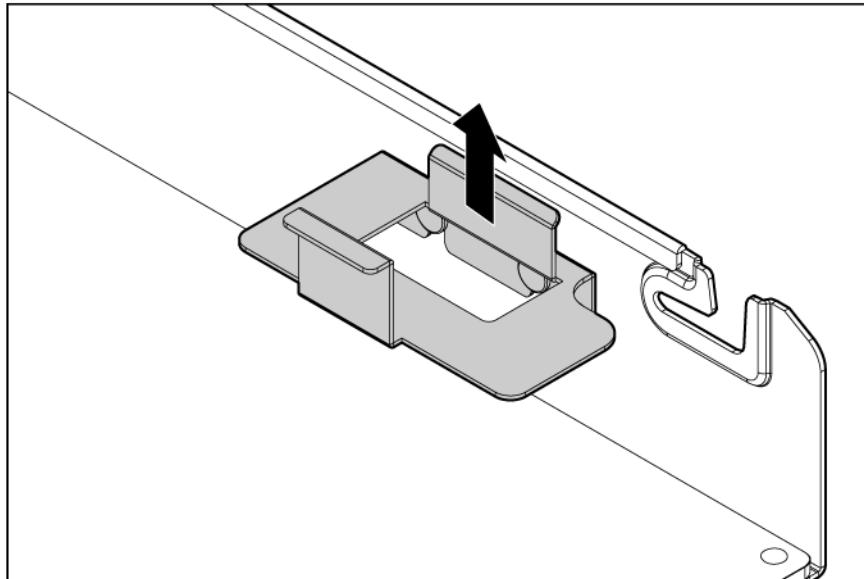


To replace the component, reverse the removal procedure.

## Mezzanine connector cover

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove the mezzanine connector cover.

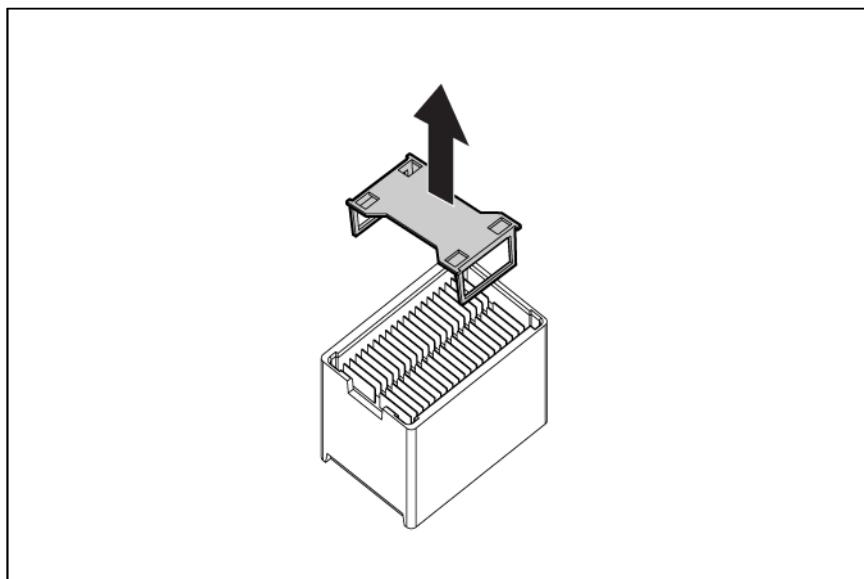


To replace the component, reverse the removal procedure.

# DIMM baffles

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove the DIMM baffle.

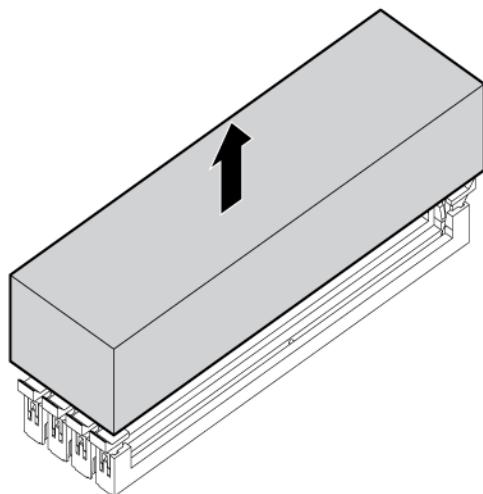

To replace the component, reverse the removal procedure.

# Installing a DIMM




**CAUTION:** To avoid damage to the hard drives, memory, and other system components, the air baffle, drive blanks, and access panel must be installed when the server is powered up.

Before installing a DIMM, you must remove any previously installed WS460c Graphics Expansion Blade access panel and blade.

To install a DIMM:

1. Power down the server ("Power down the workstation blade" on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all DIMM baffles ("DIMM baffles" on page 42).
5. Open the DIMM slot latches.

**6.** Install the DIMM.

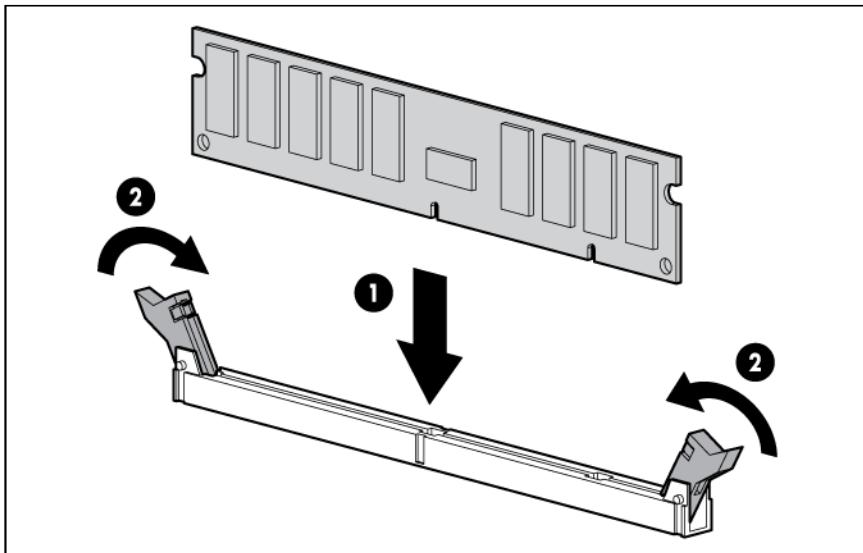

**7.** Install all DIMM baffles.

**8.** Install the access panel ("Access panel" on page 28).


If you are installing DIMMs in a mirrored or lock-step configuration, configure this mode in RBSU.

If necessary, reinstall the WS460c Graphics Expansion Blade and the access panel.

## Heatsink blank

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove the heatsink blank.

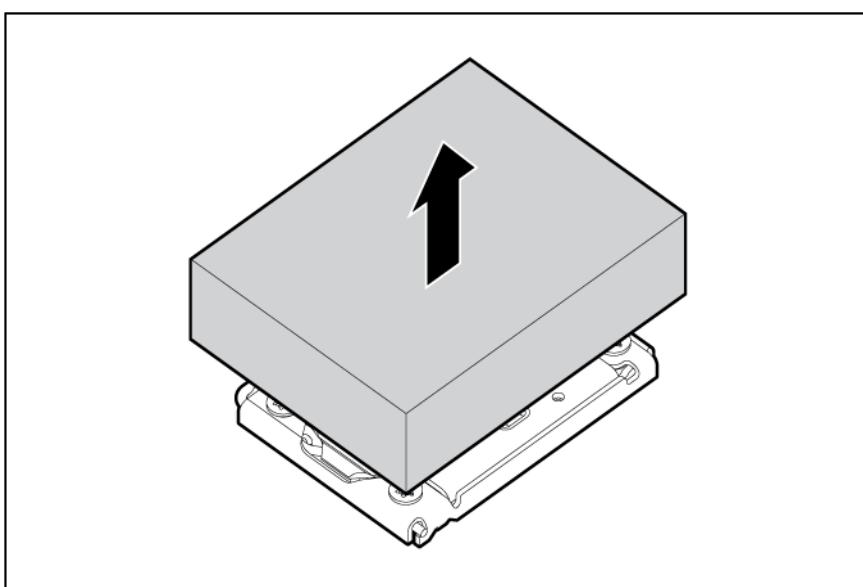

To replace the component, reverse the removal procedure.


## Mezzanine card

Optional mezzanine cards enable network connectivity or provide Fibre Channel support. For mezzanine card locations, see the system board components (on page 87).

Because mezzanine cards are supported on multiple workstation blade models, the mezzanine card may have captive screws that are not required to secure it to the workstation blade. When installing a mezzanine card in this workstation blade, only two captive screws are required.


To remove the component:

1. Power down the workstation blade (on page 26).
2. Choose one of the following options:
  - o Remove the workstation blade (on page 28).
  - o If you are using the WS460c G6 Workstation Blade with WS460c Graphics Expansion Blade:
    - i. Remove the WS460c Graphics Expansion Blade access panel.
    - ii. Remove the WS460c Graphics Expansion Blade.
3. Remove the access panel ("Access panel" on page 28).
4. Remove the mezzanine card.

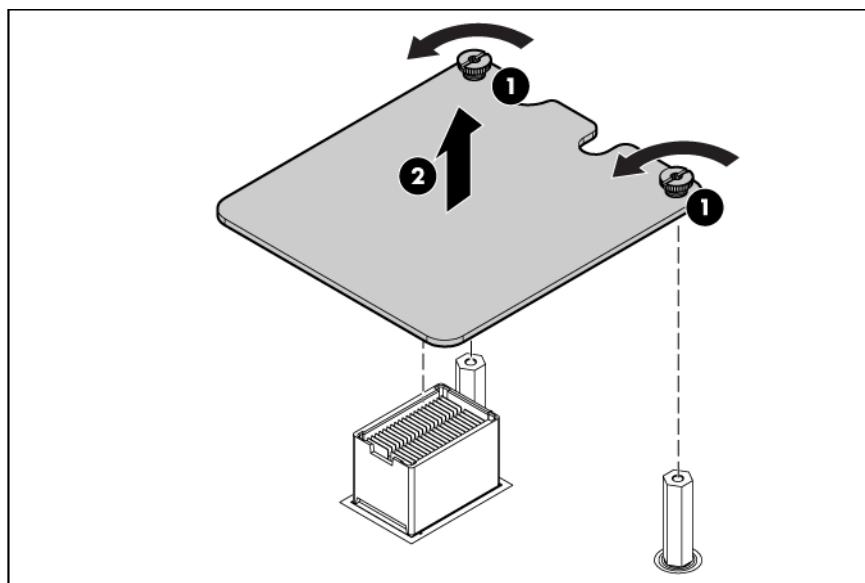

To replace the component:

1. Install the mezzanine card. Press down on the connector to seat the board.

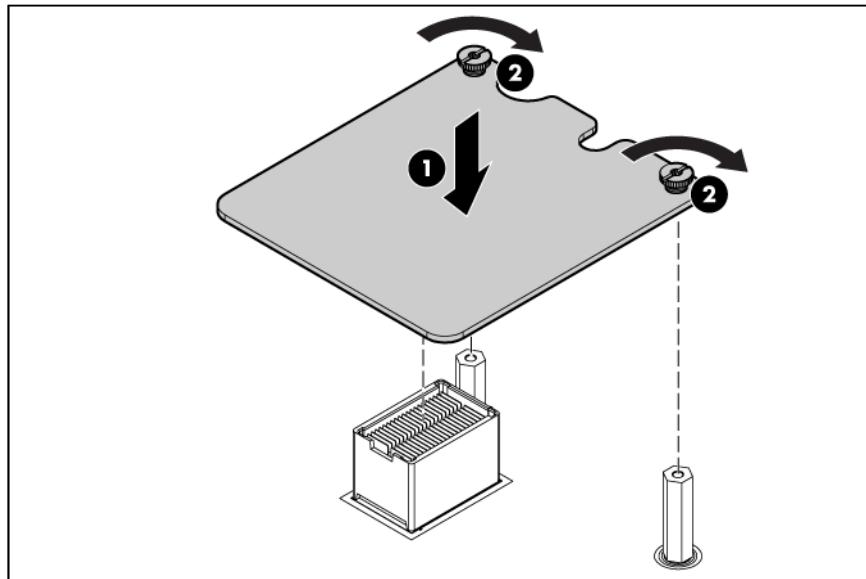

2. Install the access panel ("Access panel" on page 28).
3. Choose one of the following options:
  - o Install the workstation blade.
  - o If you are using the WS460c G6 Workstation Blade with WS460c Graphics Expansion Blade, install the graphics expansion blade, the graphics access panel, and the blade assembly.


## Hard drive backplane

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).


 **CAUTION:** Remove all hard drives and hard drive blanks before removing the hard drive backplane.

6. Remove the hard drive backplane.

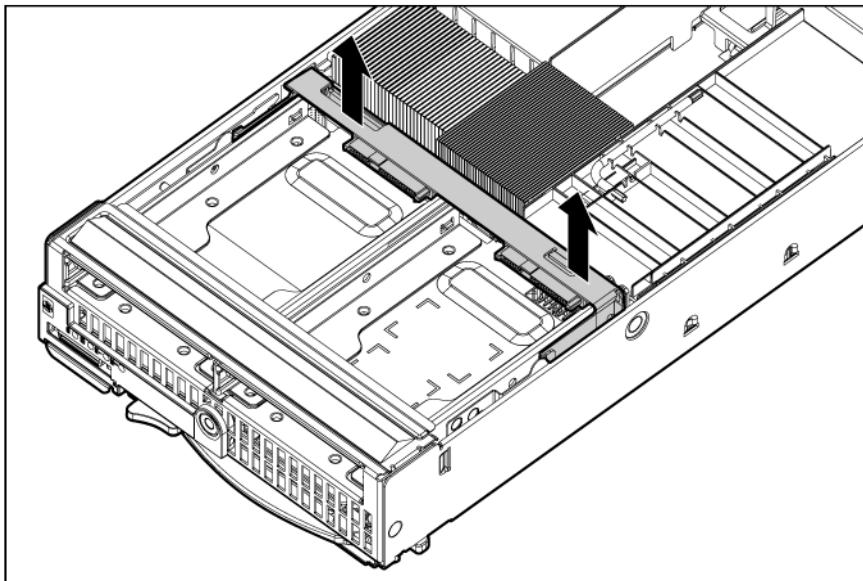

To replace the component:

1. Install the hard drive backplane. Press down on the hard drive backplane retainer to seat the board.

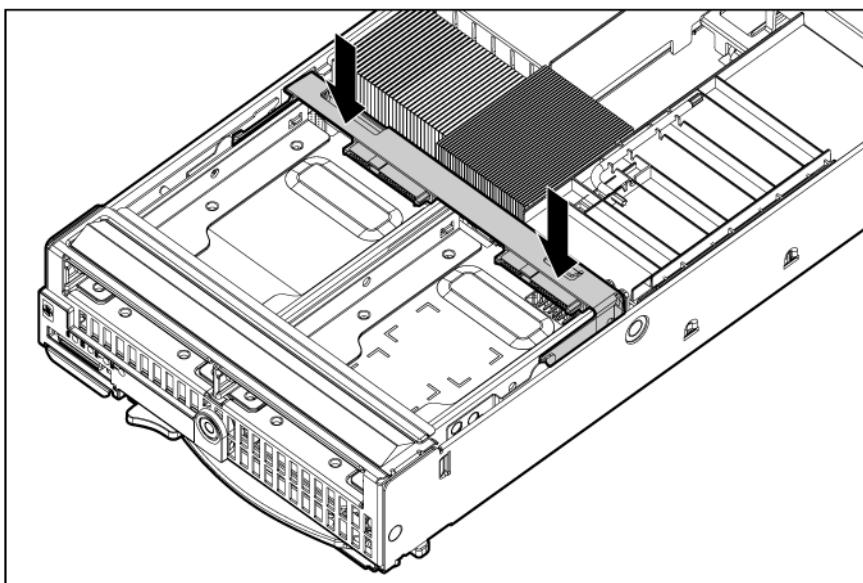


2. Install the hard drives ("Hard drive" on page 39).
3. Install the hard drive blanks ("Hard drive blank" on page 39).
4. Install the access panel ("Access panel" on page 28).
5. Install the workstation blade.

## Front panel/hard drive cage assembly

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).

3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the two T-15 screws from the front panel/hard drive cage assembly.
8. Remove the front panel/hard drive cage assembly.

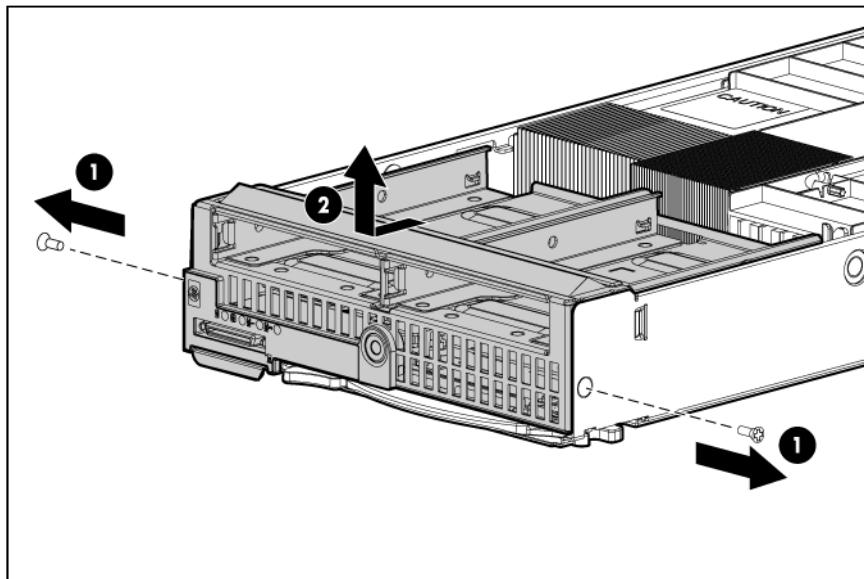

To replace the component, reverse the removal procedure.

## Battery-backed write cache procedures

Two types of procedures are provided for the BBWC option:

- Removal and replacement of failed components:
  - Removing the cache module (on page 47)
  - Removing the battery pack (on page 48)
- Recovery of cached data from a failed workstation blade ("Recovering data from the battery-backed write cache" on page 49)


**△ CAUTION:** Do not detach the cable that connects the battery pack to the cache module. Detaching the cable causes any unsaved data in the cache module to be lost.

### Removing the cache module

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).

5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
8. Remove the cache module.

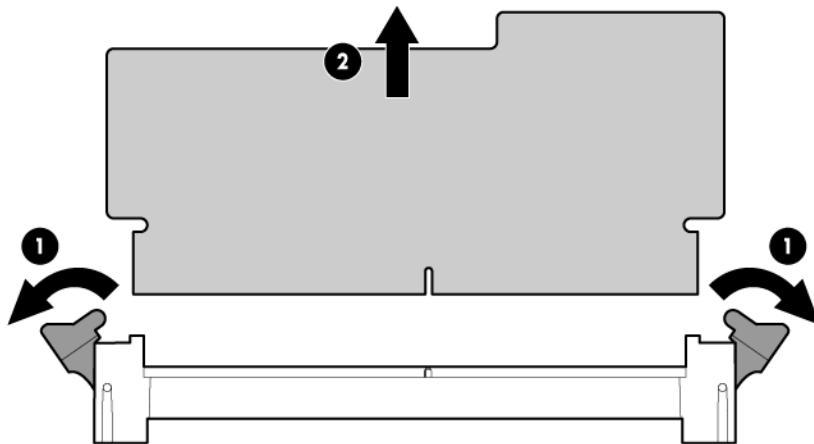

To replace the component, reverse the removal procedure.


 **CAUTION:** To prevent damage to the cache module during installation, be sure the cache module is fully inserted before pressing down.

## Removing the battery pack


To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).

4. Disconnect the BBWC cable from the cache module.

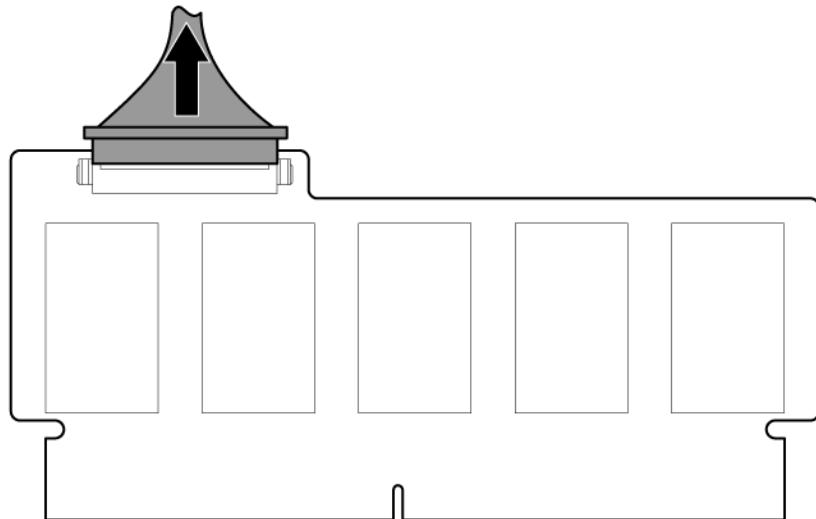

5. Remove the battery pack.

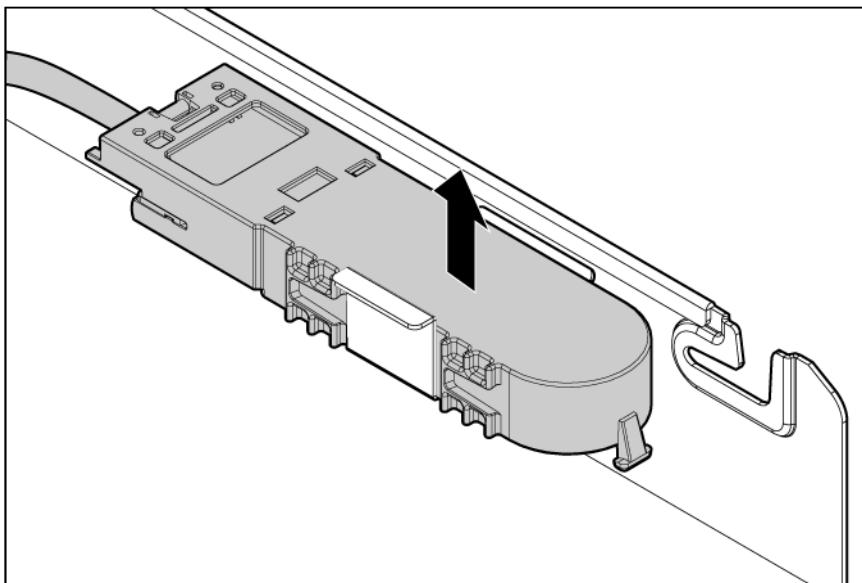

To replace the component, reverse the removal procedure.

## Recovering data from the battery-backed write cache

If the workstation blade fails, use the following procedure to recover data temporarily stored in the BBWC.

 **CAUTION:** Before starting this procedure, read the information about protecting against electrostatic discharge ("[Preventing electrostatic discharge](#)" on page 25).

1. Perform one of the following:
  - Set up a recovery workstation blade station using an identical workstation blade model. Do not install any internal drives or BBWC in this workstation blade. (HP recommends this option.)


- Find a workstation blade that has enough empty drive bays to accommodate all the drives from the failed workstation blade and that meets all the other requirements for drive and array migration.
  - 2. Power down the failed workstation blade ("Power down the workstation blade" on page 26). If any data is stored in the cache module, a green LED on the module flashes every 2 seconds.
- 
-  **CAUTION:** Do not detach the cable that connects the battery pack to the cache module. Detaching the cable causes any unsaved data in the cache module to be lost.
- 
- 3. Transfer the hard drives from the failed workstation blade to the recovery workstation blade station.
  - 4. Perform one of the following:
    - If the array controller has failed, remove the cache module ("Removing the cache module" on page 47) and battery pack ("Removing the battery pack" on page 48) from the failed array controller, and install the cache module and battery pack on an array controller in the recovery workstation blade.
    - If the workstation blade has failed, remove the controller, cache module ("Removing the cache module" on page 47), and battery pack ("Removing the battery pack" on page 48) from the failed workstation blade, and install the controller, cache module, and battery pack in the recovery workstation blade.
  - 5. Power up the recovery workstation blade. A 1759 POST message is displayed, stating that valid data was flushed from the cache. This data is now stored on the drives in the recovery workstation blade. You can now transfer the drives (and controller, if one was used) to another workstation blade.

## SD card module

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).

8. Remove the SD card module.

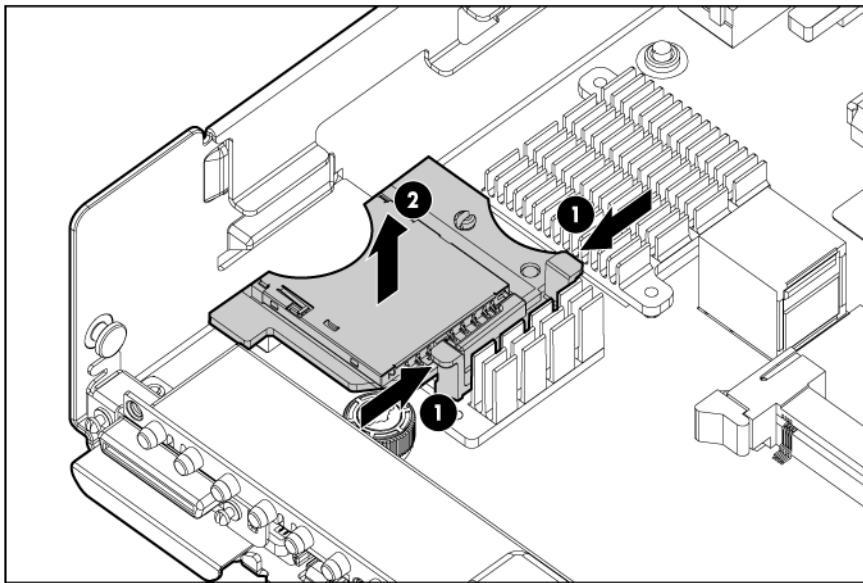

To replace the component, reverse the removal procedure.

## Heatsink




**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

To remove the component:


1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).

8. Remove the heatsink.

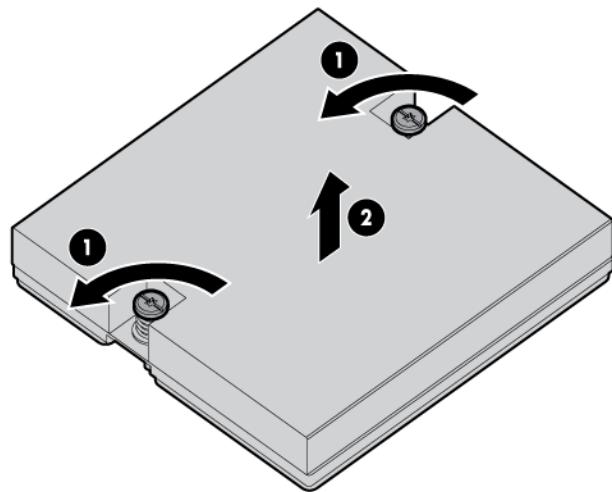


To replace the component:

1. Clean the old thermal grease from the processor with the alcohol swab. Allow the alcohol to evaporate before continuing.
2. Remove the thermal interface protective cover from the heatsink.

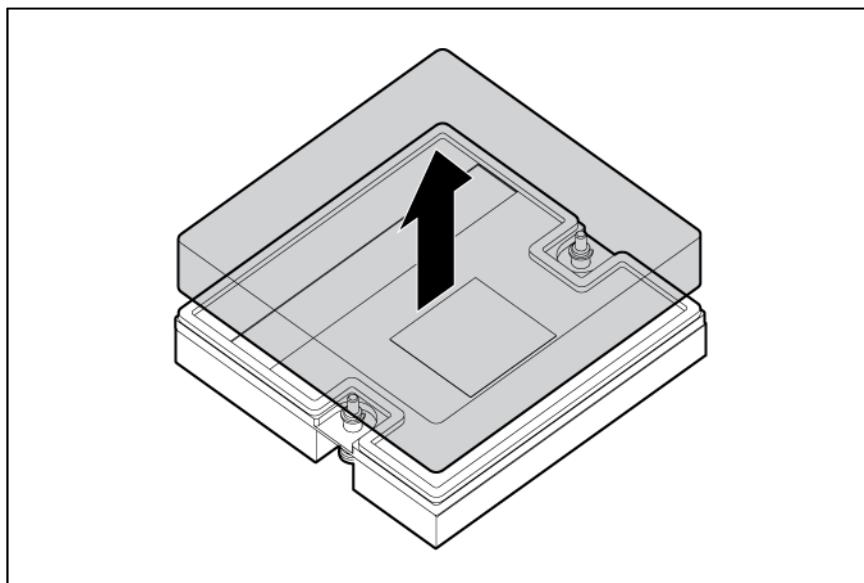

**CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws. Use the wrench supplied with the system to reduce the possibility of overtightening the screws.

3. Align and install the heatsink. Alternate tightening the screws until the heatsink is seated properly.

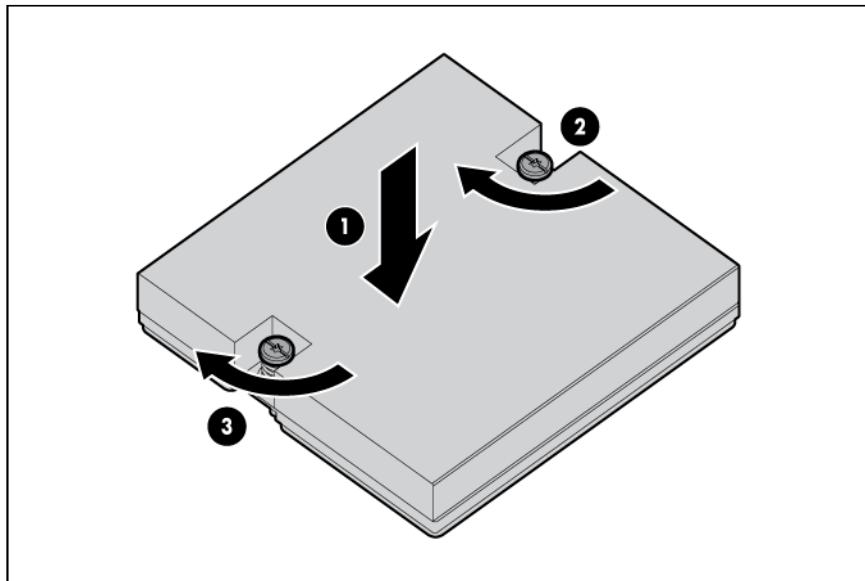

4. Install the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
5. Install the hard drive backplane ("Hard drive backplane" on page 45).
6. Install the hard drives ("Hard drive" on page 39).
7. Install the hard drive blanks ("Hard drive blank" on page 39).
8. Install the access panel ("Access panel" on page 28).
9. Install the workstation blade.

## Processor



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



**CAUTION:** To prevent possible server malfunction, do not mix processors of different speeds or cache sizes. Refer to the label on the processor heatsink for a description of the processor.



**CAUTION:** To prevent possible workstation blade overheating, always populate each processor socket with a processor socket cover and a heatsink blank or a processor and a heatsink.



**IMPORTANT:** Processor socket 1 must always be populated. If processor socket 1 is empty, the workstation blade does not power up.


To remove the component:

1. Update the system ROM.


Locate and download the latest ROM version from the HP website (<http://www.hp.com/support>). Follow the instructions on the website to update the system ROM.

2. Power down the workstation blade (on page 26).
3. Remove the workstation blade (on page 28).


4. Remove the access panel ("Access panel" on page 28).
5. Remove all hard drives ("Hard drive" on page 39).
6. Remove all hard drive blanks ("Hard drive blank" on page 39).
7. Remove the hard drive backplane ("Hard drive backplane" on page 45).
8. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
9. Remove the heatsink ("Heatsink" on page 51).
10. Open the processor locking lever and the processor socket retaining bracket.

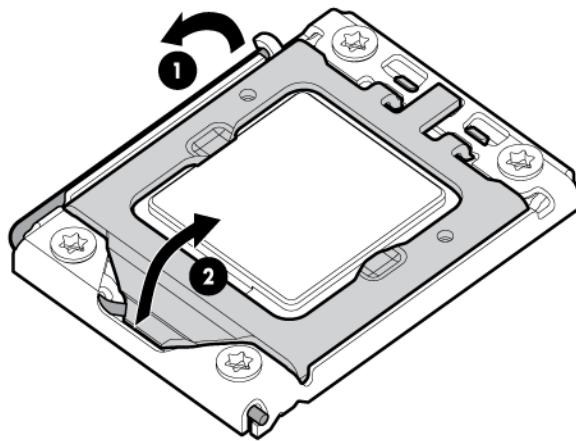

11. Using the processor tool, remove the processor from the system board:
  - a. Line up the processor tool, ensuring the locking lever graphic on the tool is oriented correctly.
  - b. Press in on the plastic tabs, and then place the tool on the processor.
  - c. Release the tabs, and then carefully lift the processor and tool straight up.

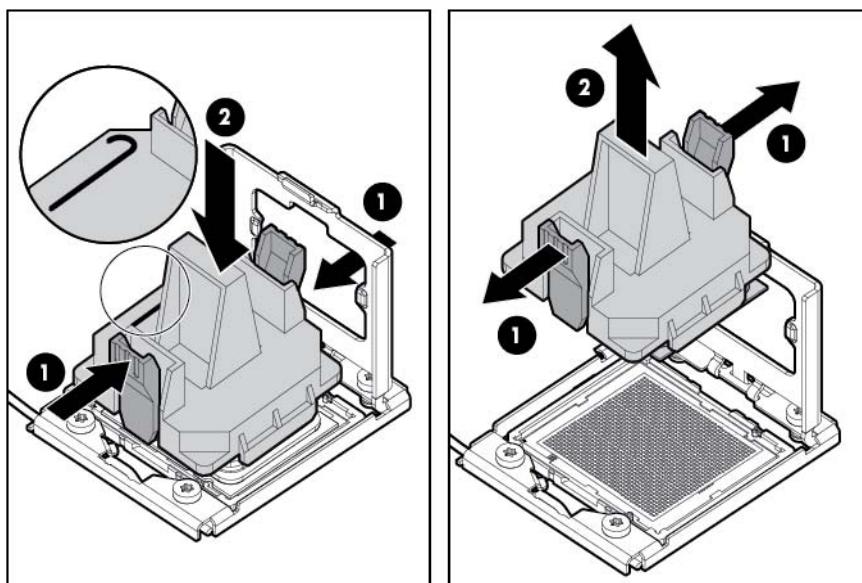

12. Carefully rotate the tool, and then push in and release the tabs to secure the processor in the tool.

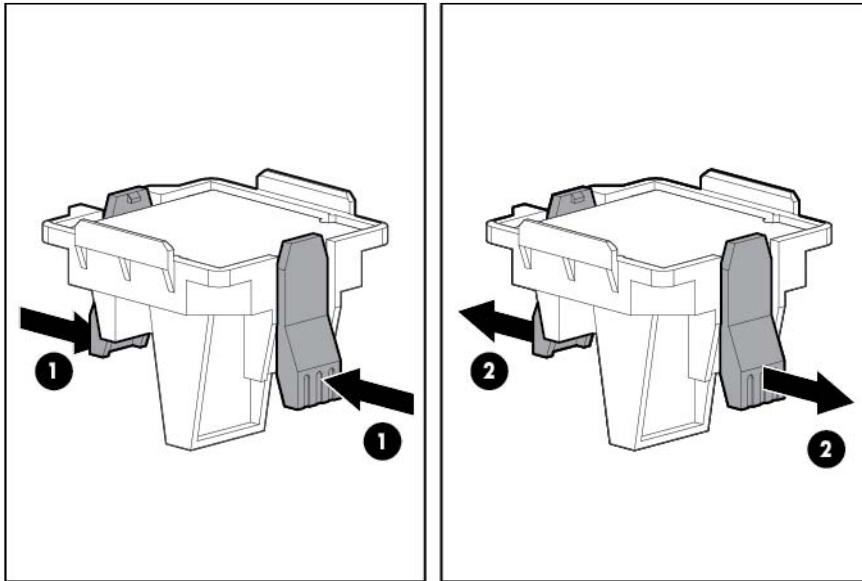


△ **CAUTION:** To avoid damage to the processor, do not touch the bottom of the processor, especially the contact area.


To replace the component:

△ **CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws. Use the wrench supplied with the system to reduce the possibility of overtightening the screws.

1. Carefully insert the processor into the processor installation tool. Handle the processor by the edges only, and do not touch the bottom of the processor, especially the contact area.

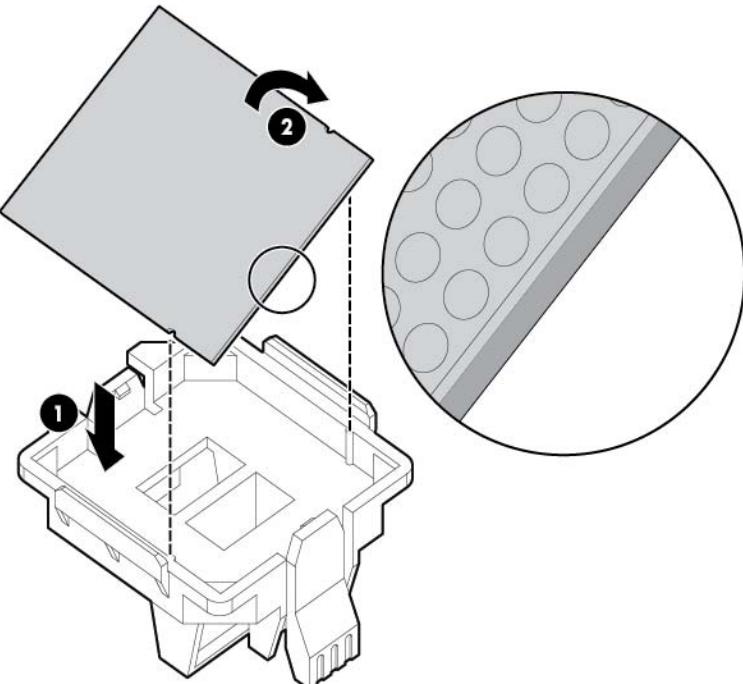


2. Be sure the tool is oriented correctly. Align the processor installation tool with the socket, and then install the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

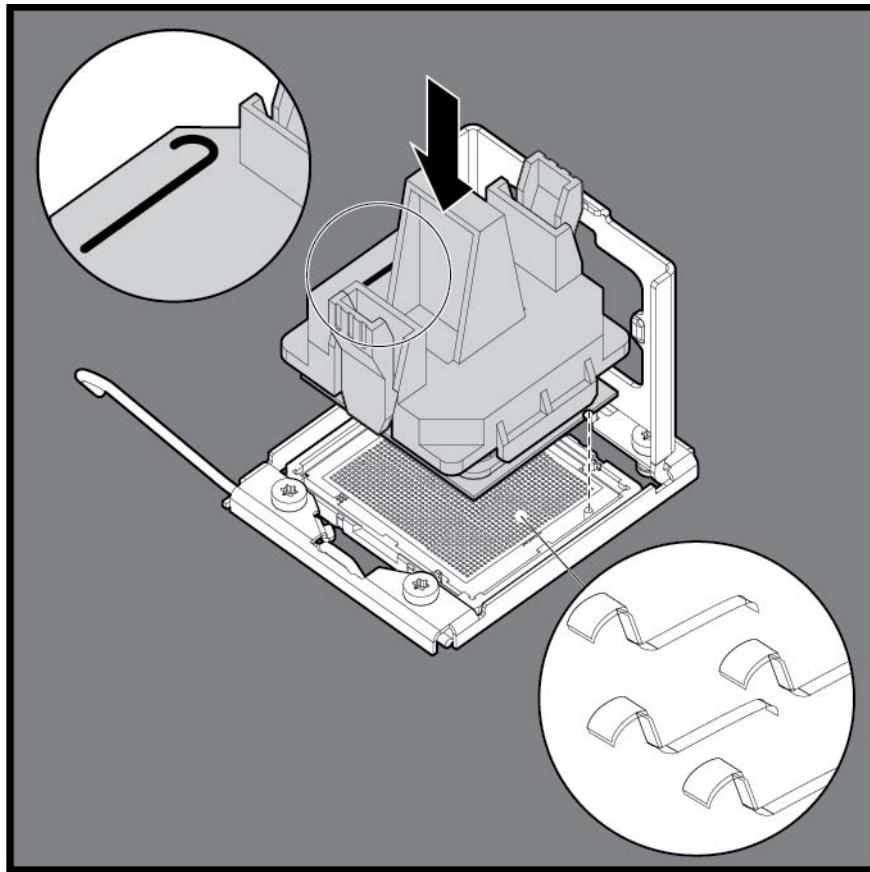

**CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.** To avoid damage to the system board:


- Never install or remove a processor without using the processor installation tool.
- Do not touch the processor socket contacts.
- Do not tilt or slide the processor when lowering the processor into the socket.

3. Press and hold the tabs on the processor installation tool to separate it from the processor, and then remove the tool.

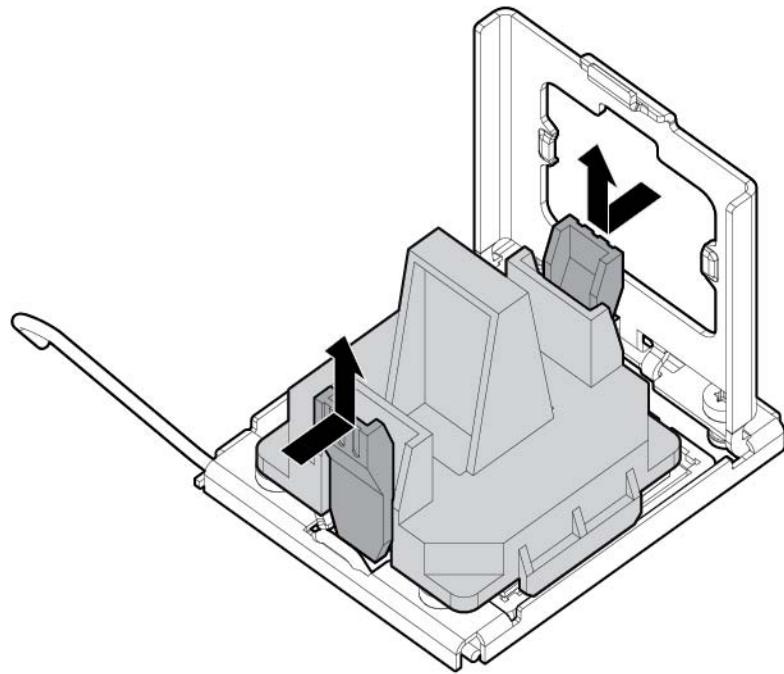


4. Close the processor socket retaining bracket and the processor locking lever.

**CAUTION:** Be sure to close the processor socket retaining bracket before closing the processor locking lever. The lever should close without resistance. Forcing the lever closed can damage the processor and socket, requiring system board replacement.

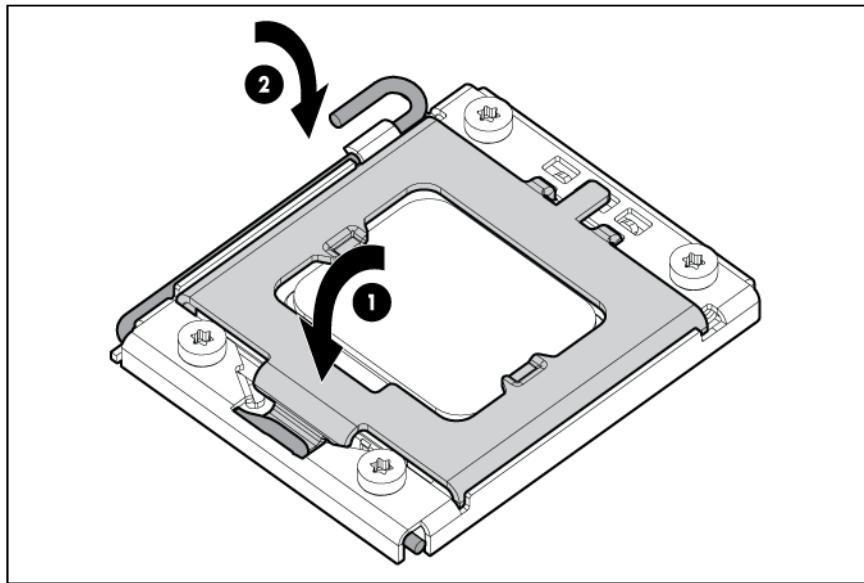


5. Clean the old thermal grease from the heatsink with the alcohol swab. Allow the alcohol to evaporate before continuing.

6. Apply all the grease to the top of the processor in the following pattern to ensure even distribution.

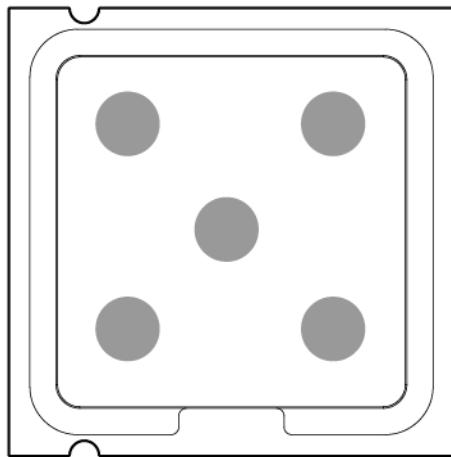

**CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws. Use the wrench supplied with the system to reduce the possibility of overtightening the screws.

7. Align and install the heatsink. Alternate tightening the screws until the heatsink is seated properly.

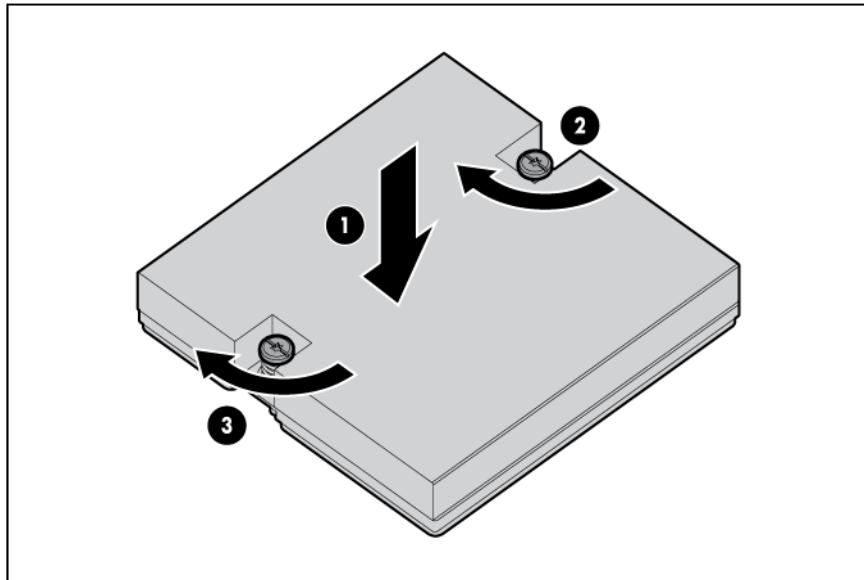


8. Install the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
9. Install the hard drive backplane ("Hard drive backplane" on page 45).
10. Install the hard drives ("Hard drive" on page 39).
11. Install the hard drive blanks ("Hard drive blank" on page 39).
12. Install the access panel ("Access panel" on page 28).
13. Install the workstation blade.

# System board


To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
8. Remove all DIMMs.
9. Remove all mezzanine cards, if installed ("Mezzanine card" on page 44).
10. Remove the heatsink ("Heatsink" on page 51).
11. Open the processor locking lever and the processor socket retaining bracket.

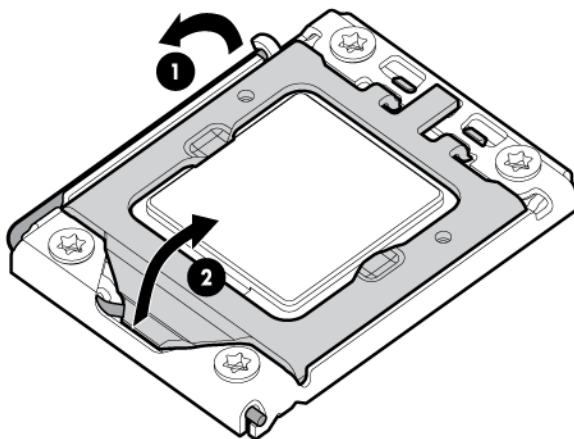


12. Using the processor tool, remove the processor from the system board:
  - a. Line up the processor tool, ensuring the locking lever graphic on the tool is oriented correctly.
  - b. Press in on the plastic tabs, and then place the tool on the processor.

c. Release the tabs, and then carefully lift the processor and tool straight up.

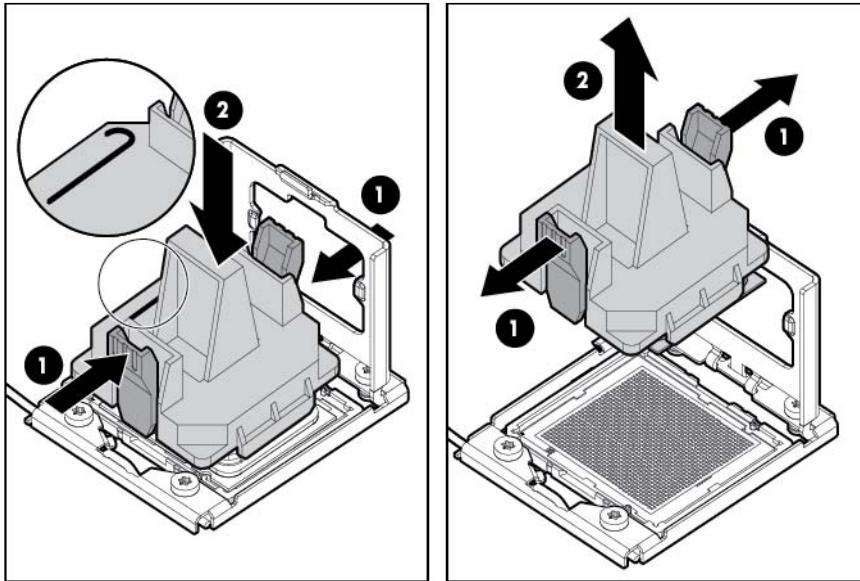


13. Carefully rotate the tool, and then push in and release the tabs to secure the processor in the tool.

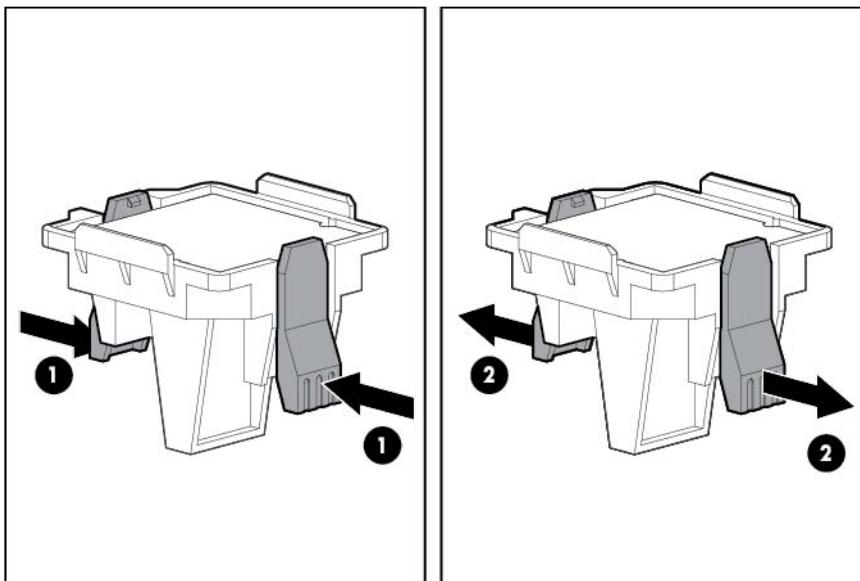


**CAUTION:** To avoid damage to the processor, do not touch the bottom of the processor, especially the contact area.

**14.** Remove the system board assembly.

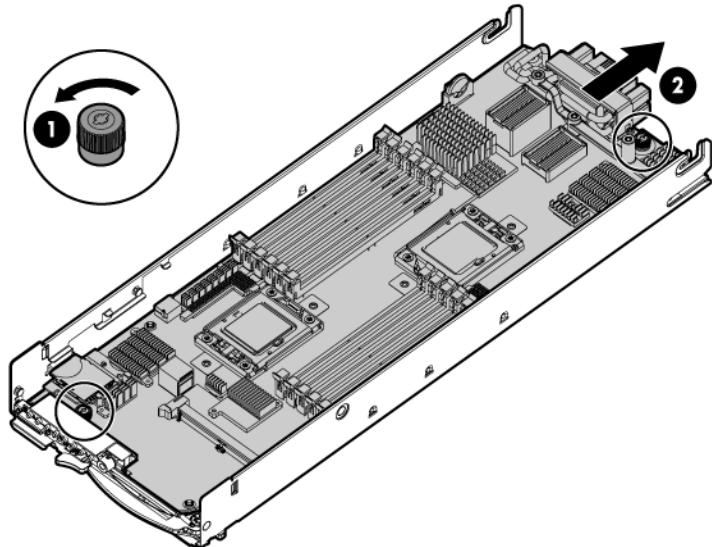


To replace the system board:

1. Install the spare system board.

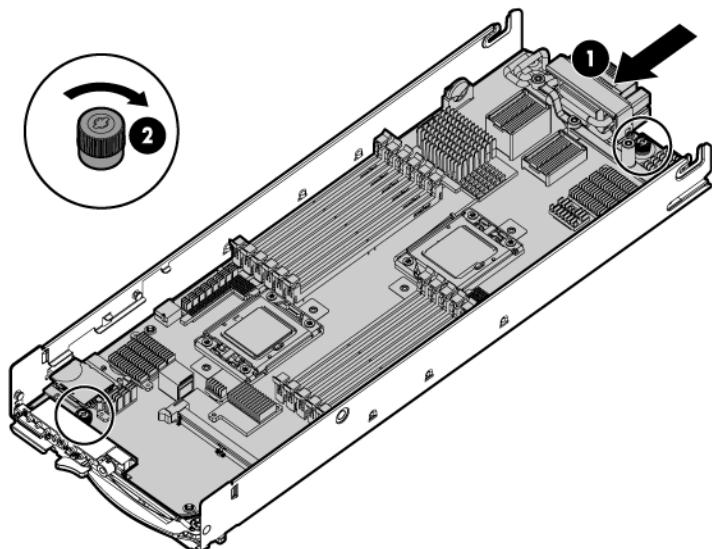


**CAUTION:** Failure to completely open the processor locking lever prevents the processor from seating during installation, leading to hardware damage.

2. Open the processor locking lever and the processor socket retaining bracket. **Do not remove the processor socket cover.**

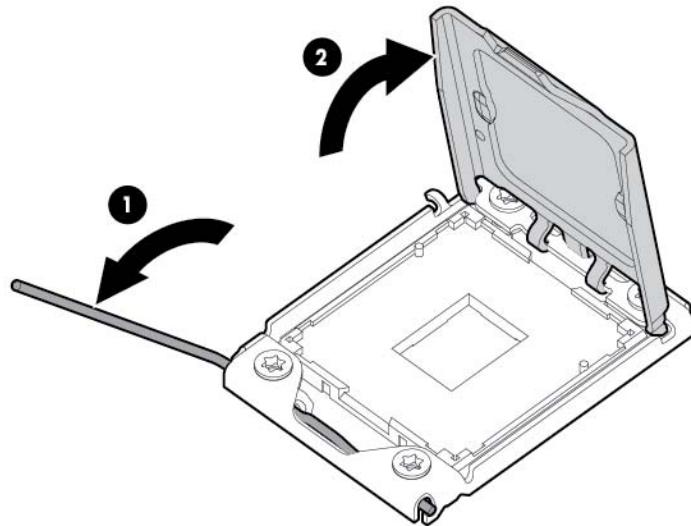


**IMPORTANT:** Be sure the processor remains inside the processor installation tool.

3. If the processor has separated from the installation tool, carefully re-insert the processor in the tool. Handle the processor by the edges only, and do not touch the bottom of the processor, especially the contact area.

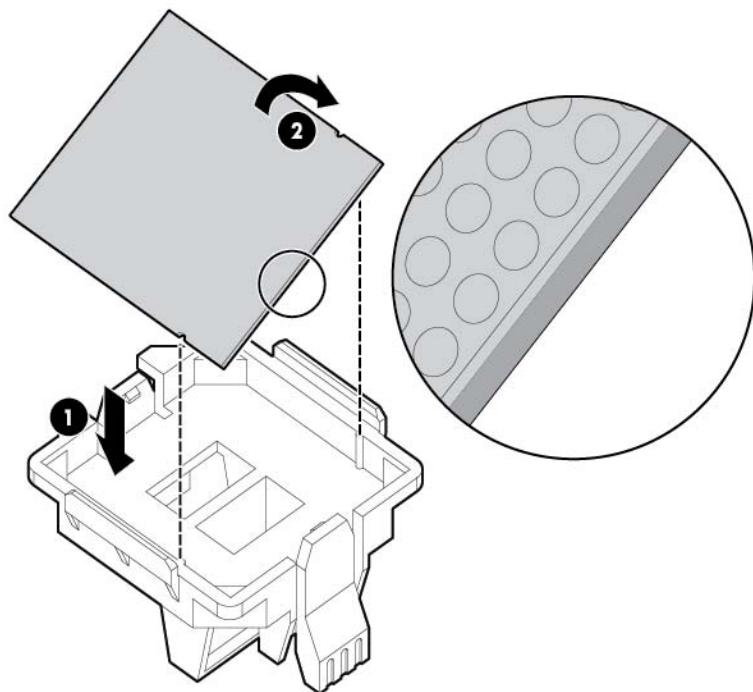


4. Align the processor installation tool with the socket, and then install the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

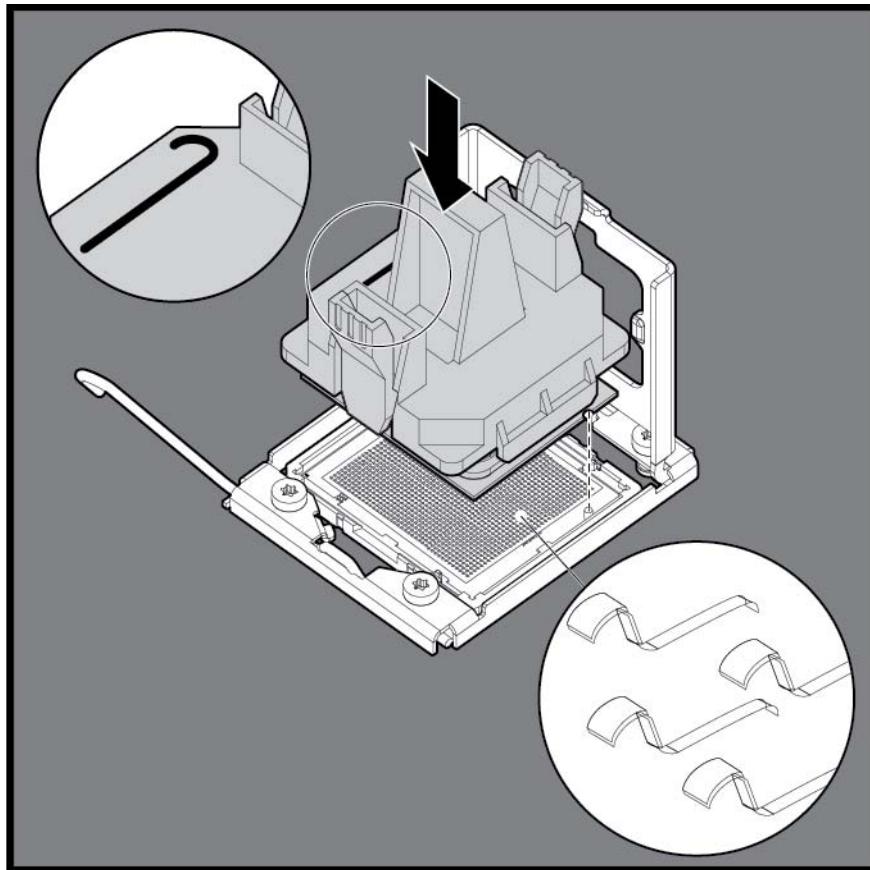


**CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.** To avoid damage to the system board:

- Never install or remove a processor without using the processor installation tool.
- Do not touch the processor socket contacts.
- Do not tilt or slide the processor when lowering the processor into the socket.

5. Press the tabs on the processor installation tool to separate it from the processor, and then remove the tool.

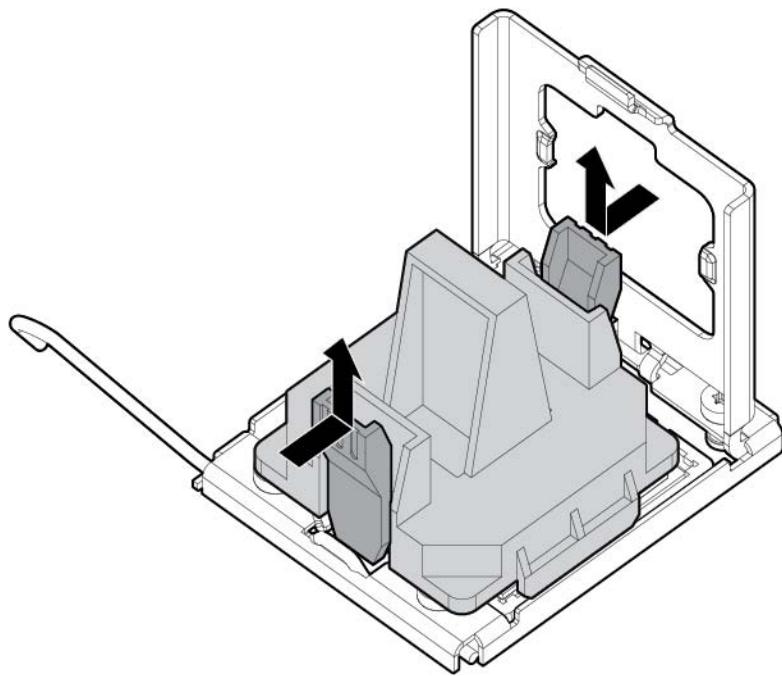


6. Close the processor socket retaining bracket and the processor locking lever. **The processor socket cover is automatically ejected**. Remove the cover.

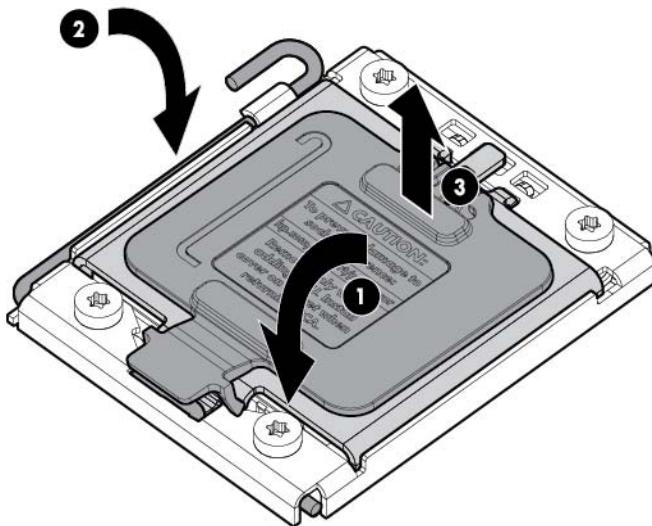

**CAUTION:** Be sure to close the processor socket retaining bracket before closing the processor locking lever. The lever should close without resistance. Forcing the lever closed can damage the processor and socket, requiring system board replacement.

7. Install the processor socket cover onto the processor socket of the failed system board.
8. Clean the old thermal grease from the heatsink and the top of the processor with the alcohol swab. Allow the alcohol to evaporate before continuing.

9. Apply all the grease to the top of the processor in the following pattern to ensure even distribution.

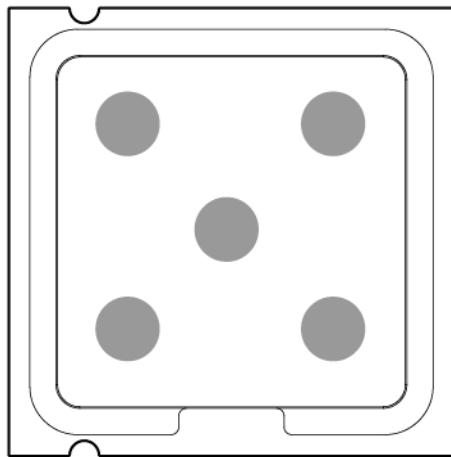

10. Install the heatsink ("Heatsink" on page 51).



**IMPORTANT:** Install all components with the same configuration that was used on the failed system board.

11. Install all components removed from the failed system board.
12. Install the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
13. Install the hard drive backplane ("Hard drive backplane" on page 45).
14. Install the hard drives ("Hard drive" on page 39).
15. Install the hard drive blanks ("Hard drive blank" on page 39).
16. Install the access panel ("Access panel" on page 28).
17. Install the workstation blade.

After you replace the system board, you must re-enter the workstation blade serial number and the product ID.

1. During the workstation blade startup sequence, press the **F9** key to access RBSU.
2. Select the **Advanced Options** menu.
3. Select **Service Options**.
4. Select **Serial Number**. The following warnings appear:

WARNING! WARNING! WARNING! The serial number is loaded into the system during the manufacturing process and should NOT be modified. This option should only be used by qualified service personnel. This value should always match the serial number sticker located on the chassis.

Warning: The serial number should ONLY be modified by qualified personnel. This value should always match the serial number located on the chassis.

5. Press the **Enter** key to clear the warning.
6. Enter the serial number and press the **Enter** key.
7. Select **Product ID**. The following warning appears:
8. Enter the product ID and press the **Enter** key.

Warning: The Product ID should ONLY be modified by qualified personnel. This value should always match the Product ID on the chassis.

9. Press the **Esc** key to close the menu.
10. Press the **Esc** key to exit RBSU.
11. Press the **F10** key to confirm exiting RBSU. The workstation blade automatically reboots.

## PCI Express graphics board

For detailed installation steps, see the server-specific user documentation.

To install the PCIe graphics board:

1. Power down the server ("Power down the workstation blade" on page 26).
2. Extend or remove the server from the rack.
3. Remove the access panel ("Access panel" on page 28).
4. Remove the PCIe x16 riser board assembly.
5. Install the graphics board in the x16 slot of the PCIe riser board assembly.
6. Install the PCIe x16 riser board assembly into the server.
7. Connect the power cable:
  - a. Locate the 2x3 power cable wired to the power supply.
  - b. Connect the 2x3 power cable to the graphics board.
8. Install the access panel ("Access panel" on page 28).
9. Install the server into the rack.
10. Power up the server.

## Battery replacement

If the workstation blade no longer automatically displays the correct date and time, you may need to replace the battery that provides power to the real-time clock. Under normal use, battery life is 5 to 10 years.




- WARNING:** The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:
- Do not attempt to recharge the battery.
  - Do not expose the battery to temperatures higher than 60°C (140°F).
  - Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
  - Replace only with the spare designated for this product.

Before replacing a battery, you must remove any previously installed WS460c Graphics Expansion Blade access panel and the blade.


To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Identify the battery location ("System board components" on page 87).

5. Remove the battery tray.

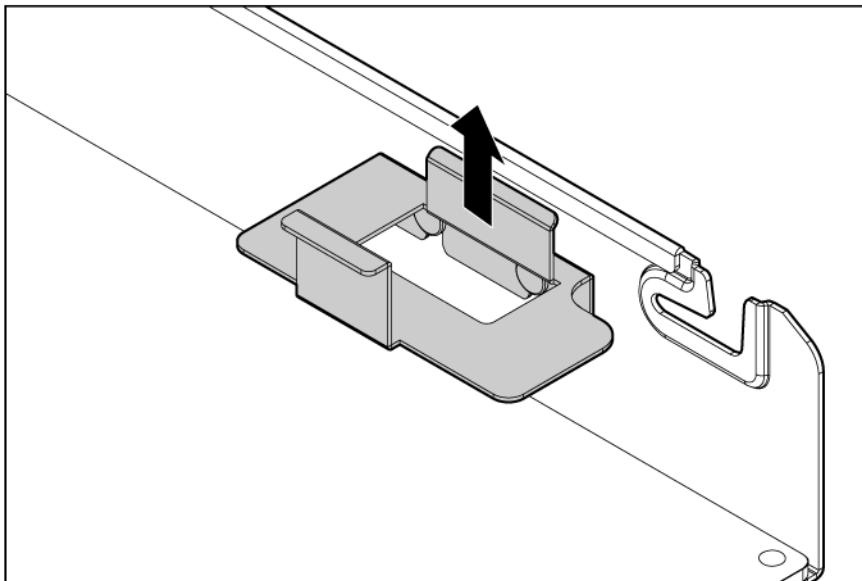

6. Remove the battery.

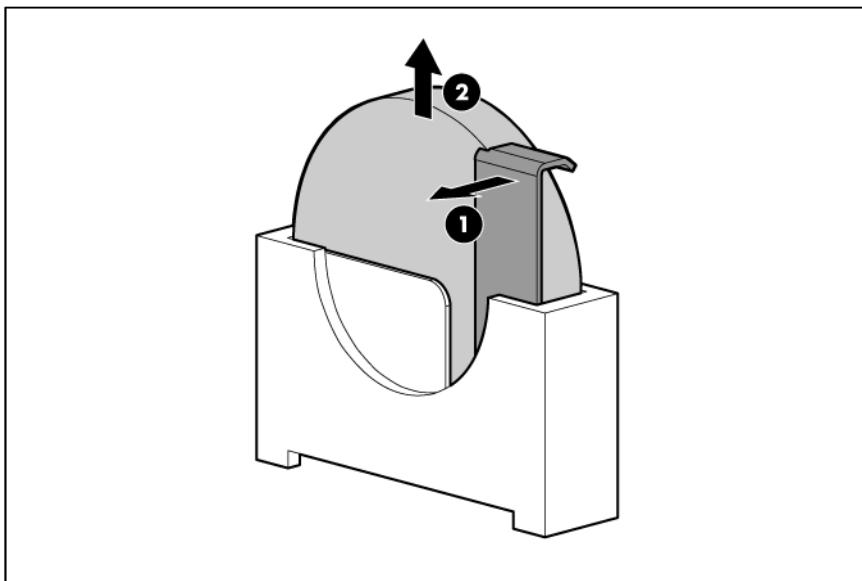

**IMPORTANT:** Replacing the system board battery resets the system ROM to its default configuration. After replacing the battery, reconfigure the system through RBSU.

To replace the component, reverse the removal procedure. If necessary, reinstall the WS460c Graphics Expansion Blade and the access panel.


For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

## Workstation blade release lever

To remove the component:

1. Power down the workstation blade (on page 26).

2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
8. Remove the workstation blade release lever.

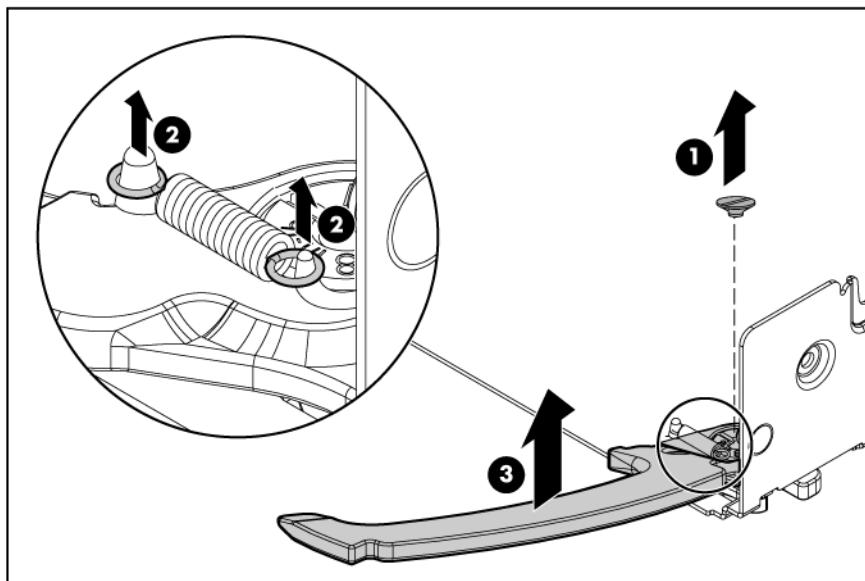

To replace the component, reverse the removal procedure.


## Release button

To remove the component:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the access panel ("Access panel" on page 28).
4. Remove all hard drives ("Hard drive" on page 39).
5. Remove all hard drive blanks ("Hard drive blank" on page 39).
6. Remove the hard drive backplane ("Hard drive backplane" on page 45).
7. Remove the front panel/hard drive cage assembly ("Front panel/hard drive cage assembly" on page 46).
8. Remove the system board ("System board" on page 59).

Removing DIMMs, heatsinks, processors, and mezzanine cards is not required for this procedure.

9. Remove the release button.

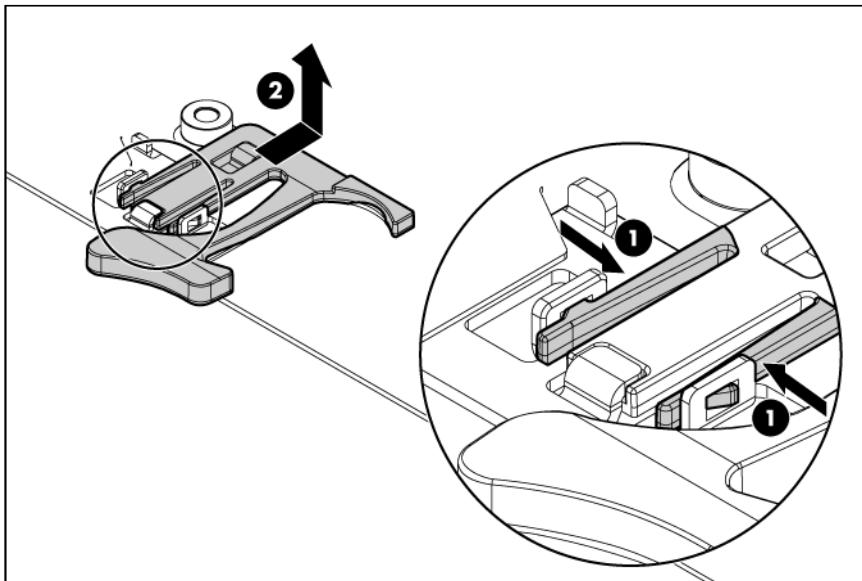

To replace the component, reverse the removal procedure.

## HP Trusted Platform Module

The TPM is not a customer-removable part.

**CAUTION:** Any attempt to remove an installed TPM from the system board breaks or disfigures the TPM security rivet. Upon locating a broken or disfigured rivet on an installed TPM, administrators should consider the system compromised and take appropriate measures to ensure the integrity of the system data.

If you suspect a TPM board failure, leave the TPM installed and remove the system board ("System board" on page 59). Contact an HP authorized service provider for a replacement system board and TPM board.

## Installing the NVIDIA Quadro 1000M and 3000M GPUs


Required tools for this procedure:

- T-10/T-15 Torx screwdriver (provided inside the server)
- HP Insight Diagnostics software


To install the GPU:

1. Power down the workstation blade (on page 26).
2. Remove the workstation blade (on page 28).
3. Remove the Graphics Expansion Blade access panel.
4. Remove the Graphics Expansion Blade.

5. Remove the power cable.

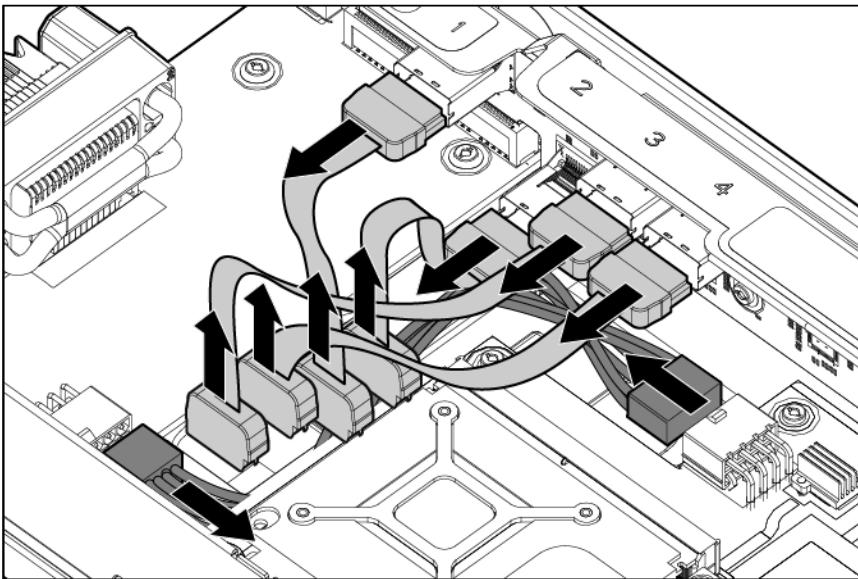


6. Disconnect the four PCIe/SAS cables.

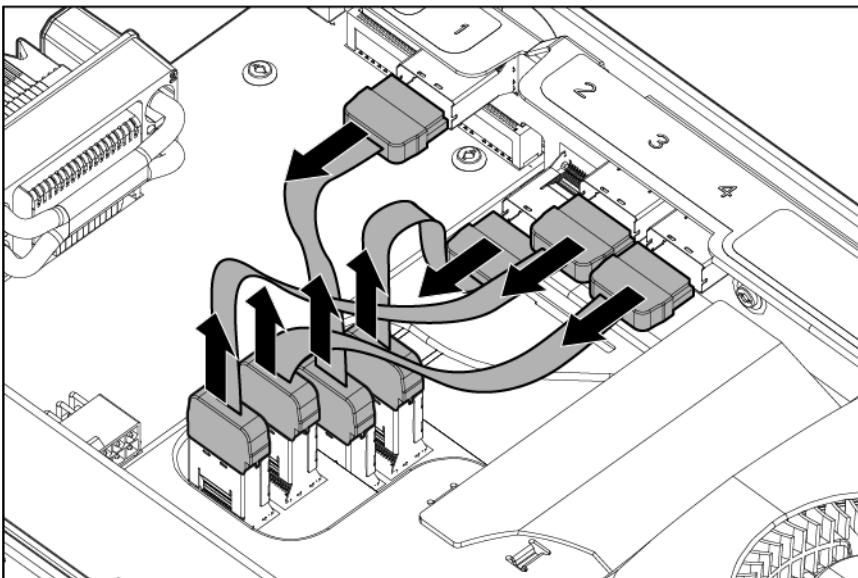


7. Remove the Graphics Expansion Blade PCIe card cage.
  - a. Disconnect the four PCIe/SAS cables from the PCIe riser board.
  - b. Disconnect power cables from the graphics board.
  - c. Remove the two T-15 screws (1) securing the front of the PCIe card cage.


- d. Carefully pull up on the front and right sides of the PCIe card cage to disengage it from the anchoring pins on the expansion blade enclosure (1), and then lift the PCIe card cage out of the expansion blade enclosure (2).

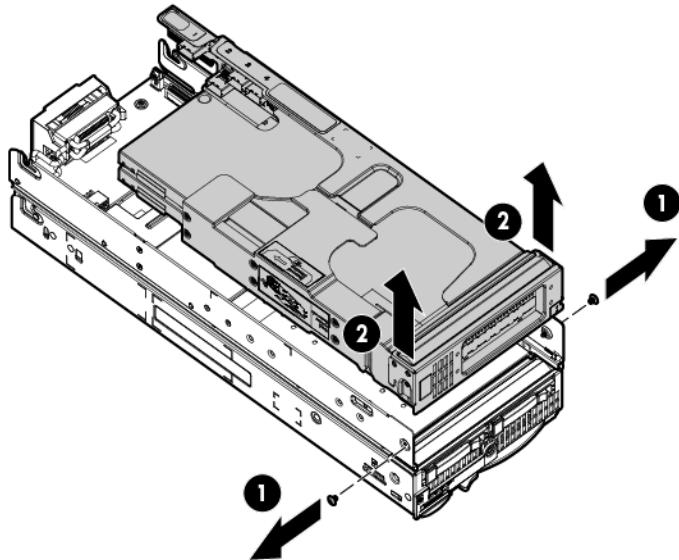

8. Disconnect the graphics card retainer (1), and then remove it from the PCIe card cage (2).

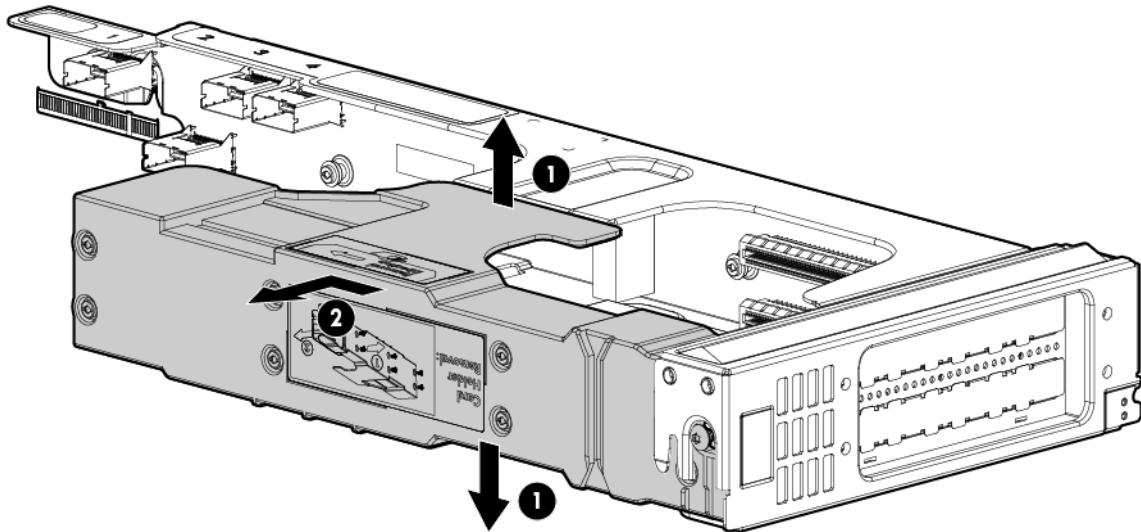


9. Remove the graphics card and, if necessary, the slot cover.

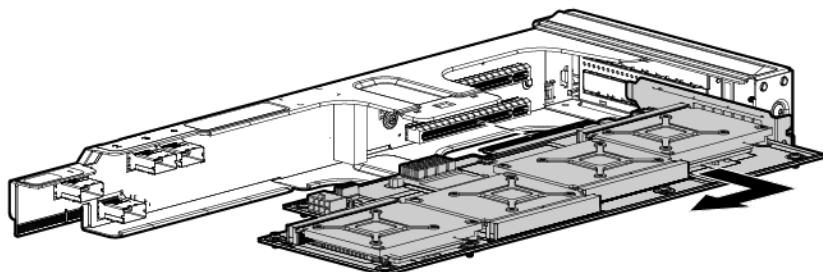


10. Connect the cable pigtail, connect the small bracket, and then attach the screws from the small bracket.

11. Install the graphics cards, and then connect any power cables to the graphics cards. If you are installing only one graphics card, you must install it in slot 1, the lower slot, and then install a filler card in slot 2.

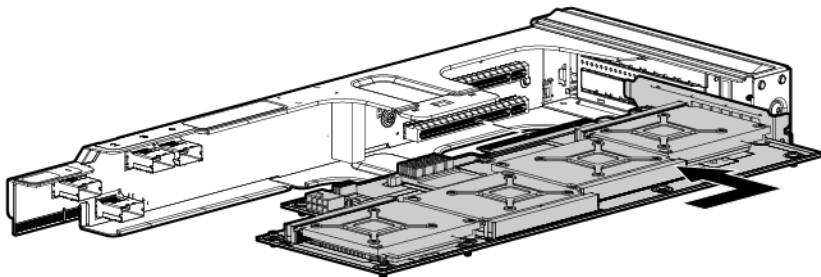

12. Install the graphics card retainer by sliding the retainer under the lip at a slight angle (1). As you push forward, the retainer straightens out, and then the clips connect to the Graphics Expansion Blade chassis (2).

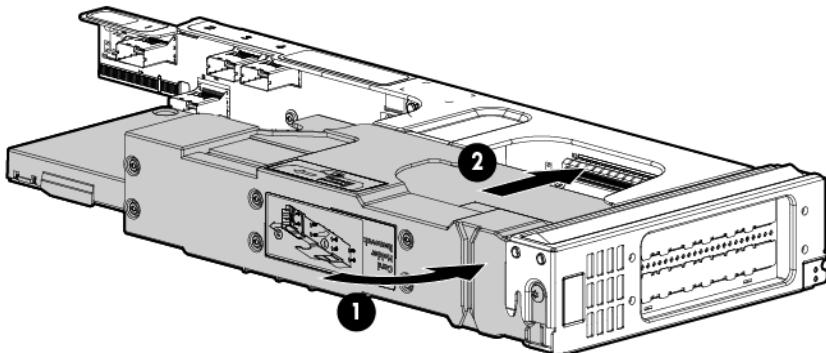

13. Install the Graphics Expansion Blade PCIe card cage:
  - a. Engage the PCIe card cage to the anchoring pins on the expansion blade enclosure.
  - b. Attach the two T-15 screws that secure the front of the PCIe card cage.
14. Install the four PCIe/SAS cables.
15. Install the Graphics Expansion Blade.
16. Install the Graphics Expansion Blade access panel.
17. Install the workstation blade.
18. Power up the workstation blade.
19. Download and install the latest drivers from the HP website (<http://www8.hp.com/us/en/support-drivers.html>) or the NVIDIA website (<http://www.nvidia.com/content/drivers/drivers.asp>).

For software installation information on the HP ProLiant WS460c Workstation Blade with WS460c Graphics Expansion Blade, see the *Administrator's Guide for Microsoft Windows on HP ProLiant Blade Workstations*.

The installation is complete.


# Installing the NVIDIA Quadro 4000, 5000, and 6000 graphics cards

Required tools for this procedure:

- T-10/T-15 Torx screwdriver (provided inside the server)
- HP Insight Diagnostics software


To install the graphics card:

1. Power down the workstation blade (on page [26](#)).
2. Remove the workstation blade (on page [28](#)).
3. Remove the Graphics Expansion Blade access panel.
4. Remove the Graphics Expansion Blade.
5. Disconnect the four PCIe/SAS cables.

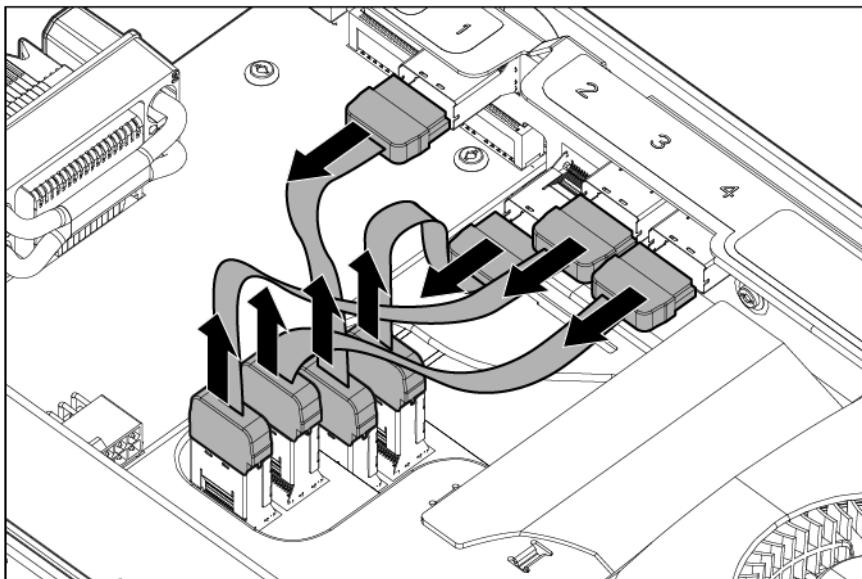


6. Remove the Graphics Expansion Blade PCIe card cage.
  - a. Disconnect the four PCIe/SAS cables from the PCIe riser board.


- b. Disconnect power cables from the graphics board.

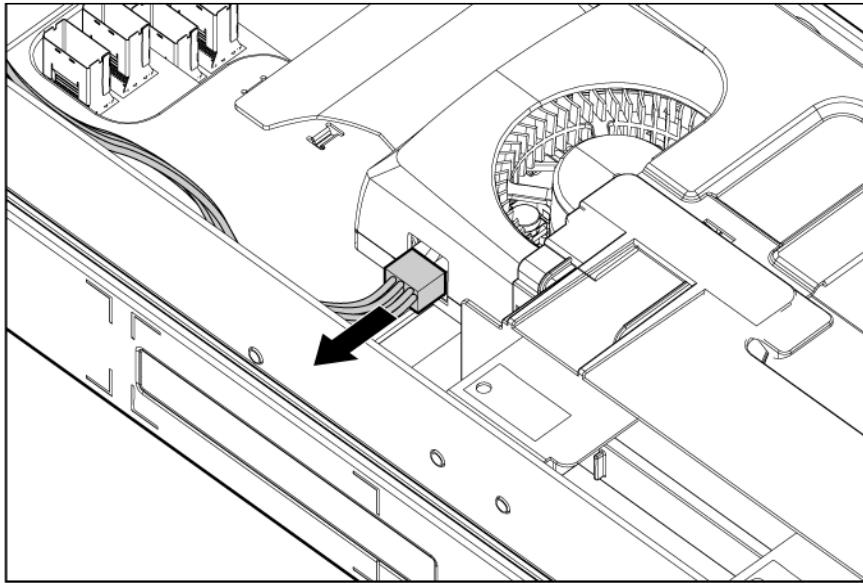


- c. Remove the two T-15 screws (1) securing the front of the PCIe card cage.  
d. Carefully pull up on the front and right sides of the PCIe card cage to disengage it from the anchoring pins on the expansion blade enclosure, and then lift the PCIe card cage out of the expansion blade enclosure (2).

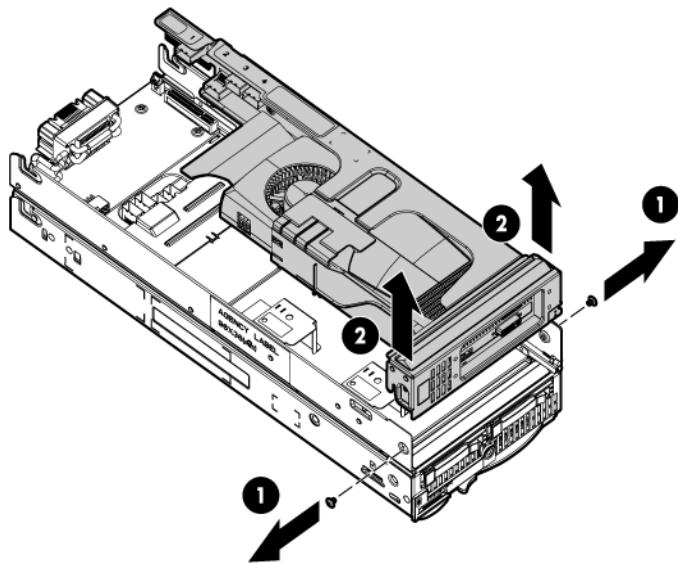

7. Disconnect the graphics card retainer (1), and then remove from the blade enclosure (2).

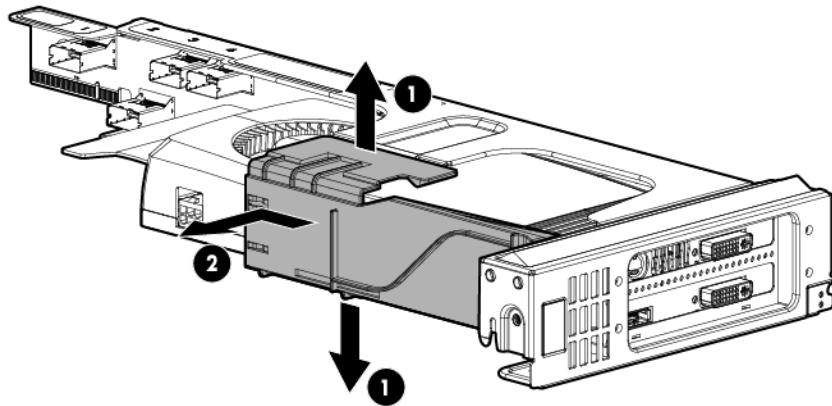


8. Remove the graphics card.

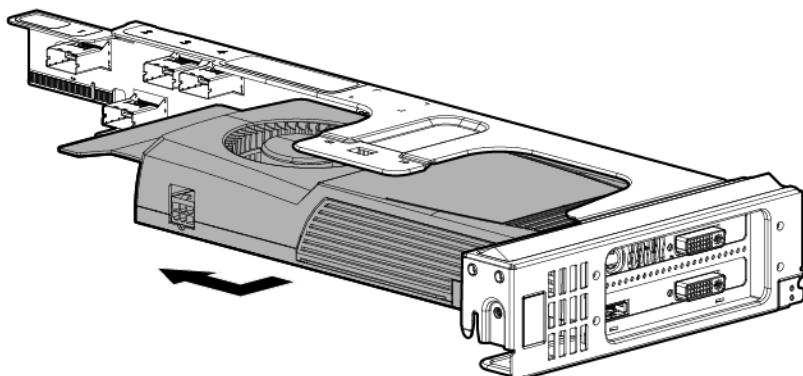


9. Perform one of the following:

- If you are installing the Quadro 4000, install the graphics card (1), insert the slot cover (2) below the graphics card (3), and then connect any power cables to the graphics card.

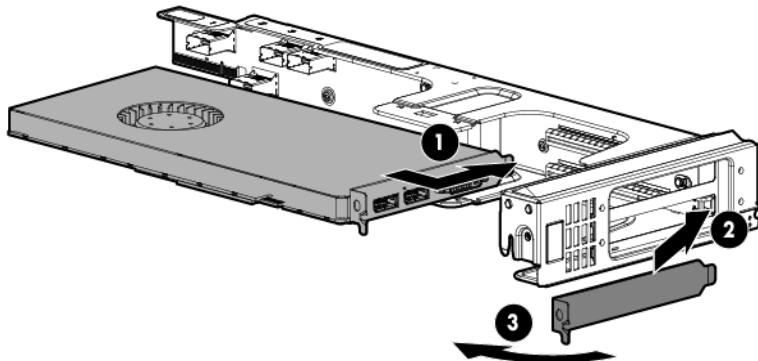

- If you are installing either the Quadro 5000 or Quadro 6000, insert the graphics card and connect any power cables to the graphics card.

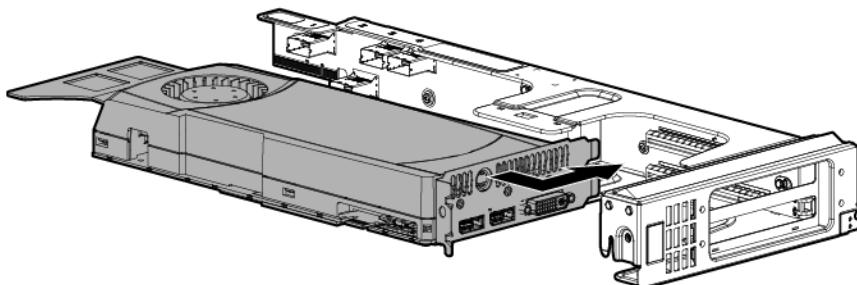

10. Install the graphics card retainer, and then install the entire PCIe card cage into the graphics expansion blade chassis.
11. Connect the four PCIe/SAS cables.
12. Install the Graphics Expansion Blade PCIe card cage.
  - a. Carefully engage the PCIe card cage to the anchoring pins on the expansion blade enclosure.
  - b. Attach the two T-15 screws that secure the front of the PCIe card cage.
13. Install the Graphics Expansion Blade access panel.
14. Install the workstation blade into the enclosure.
15. Power up the workstation blade.
16. Download and install the latest drivers from the HP website (<http://www8.hp.com/us/en/support-drivers.html>) or the NVIDIA website (<http://www.nvidia.com/content/drivers/drivers.asp>).

For software installation information on the HP ProLiant WS460c Workstation Blade with WS460c Graphics Expansion Blade, see the *Administrator's Guide for Microsoft Windows on HP ProLiant Blade Workstations*.

The installation is complete.

# Diagnostic tools

## Troubleshooting resources

The *HP ProLiant Servers Troubleshooting Guide* provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, error message interpretation, issue resolution, and software maintenance on ProLiant servers and server blades. This guide includes problem-specific flowcharts to help you navigate complex troubleshooting processes. To view the guide, select a language:

- English ([http://www.hp.com/support/ProLiant\\_TSG\\_en](http://www.hp.com/support/ProLiant_TSG_en))
- French ([http://www.hp.com/support/ProLiant\\_TSG\\_fr](http://www.hp.com/support/ProLiant_TSG_fr))
- Italian ([http://www.hp.com/support/ProLiant\\_TSG\\_it](http://www.hp.com/support/ProLiant_TSG_it))
- Spanish ([http://www.hp.com/support/ProLiant\\_TSG\\_sp](http://www.hp.com/support/ProLiant_TSG_sp))
- German ([http://www.hp.com/support/ProLiant\\_TSG\\_gr](http://www.hp.com/support/ProLiant_TSG_gr))
- Dutch ([http://www.hp.com/support/ProLiant\\_TSG\\_nl](http://www.hp.com/support/ProLiant_TSG_nl))
- Japanese ([http://www.hp.com/support/ProLiant\\_TSG\\_jp](http://www.hp.com/support/ProLiant_TSG_jp))

## HP Insight Diagnostics

HP Insight Diagnostics is a proactive workstation blade management tool, available in both offline and online versions, that provides diagnostics and troubleshooting capabilities to assist IT administrators who verify workstation blade installations, troubleshoot problems, and perform repair validation.

HP Insight Diagnostics Offline Edition performs various in-depth system and component testing while the OS is not running. To run this utility, launch the SmartStart CD.

HP Insight Diagnostics Online Edition is a web-based application that captures system configuration and other related data needed for effective workstation blade management. Available in Microsoft® Windows® and Linux versions, the utility helps to ensure proper system operation.

For more information or to download the utility, refer to the HP website (<http://www.hp.com/servers/diags>).

## HP Insight Diagnostics survey functionality

HP Insight Diagnostics (on page 78) provides survey functionality that gathers critical hardware and software information on ProLiant workstation blades.

This functionality supports operating systems that may not be supported by the workstation blade. For operating systems supported by the workstation blade, see the HP website (<http://www.hp.com/go/supportos>).

If a significant change occurs between data-gathering intervals, the survey function marks the previous information and overwrites the survey data files to reflect the latest changes in the configuration.

Survey functionality is installed with every SmartStart-assisted HP Insight Diagnostics installation, or it can be installed through the HP PSP.

---

**NOTE:** The current version of SmartStart provides the memory spare part numbers for the workstation blade. To download the latest version, see the HP website (<http://www.hp.com/support>).

---

## Integrated Management Log

The IML records hundreds of events and stores them in an easy-to-view form. The IML timestamps each event with 1-minute granularity.

You can view recorded events in the IML in several ways, including the following:

- From within HP SIM ("HP Systems Insight Manager" on page 79)
- From within Survey Utility
- From within operating system-specific IML viewers
  - For NetWare: IML Viewer (does not apply to HP ProLiant DL980 Servers)
  - For Windows®: IML Viewer
  - For Linux: IML Viewer Application
- From within the iLO 2 user interface
- From within HP Insight Diagnostics (on page 78)

For more information, see the Management CD or DVD in the HP Insight Foundation suite for ProLiant.

## Array Diagnostic Utility

The HP Array Diagnostics Utility is a web-based application that creates a report of all HP storage controllers and disk drives. This report provides vital information to assist in identifying faults or conditions that may require attention. ADU can be accessed from the SmartStart CD or downloaded from the HP website (<http://www.hp.com>).

## HP Systems Insight Manager

HP SIM is a web-based application that allows system administrators to accomplish normal administrative tasks from any remote location, using a web browser. HP SIM provides device management capabilities that consolidate and integrate management data from HP and third-party devices.



**IMPORTANT:** You must install and use HP SIM to benefit from the Pre-Failure Warranty for processors, SAS and SATA hard drives, and memory modules.

---

For additional information, refer to the Management CD in the HP ProLiant Essentials Foundation Pack or the HP SIM website (<http://www.hp.com/go/hpsim>).

# HP Insight Remote Support software

HP strongly recommends that you install HP Insight Remote Support software to complete the installation or upgrade of your product and to enable enhanced delivery of your HP Warranty, HP Care Pack Service, or HP contractual support agreement. HP Insight Remote Support supplements your monitoring 24 x 7 to ensure maximum system availability by providing intelligent event diagnosis, and automatic, secure submission of hardware event notifications to HP, which will initiate a fast and accurate resolution, based on your product's service level. Notifications may be sent to your authorized HP Channel Partner for on-site service, if configured and available in your country. The software is available in two variants:

- HP Insight Remote Support Standard: This software supports server and storage devices and is optimized for environments with 1–50 servers. Ideal for customers who can benefit from proactive notification but do not need proactive service delivery and integration with a management platform.
- HP Insight Remote Support Advanced: This software provides comprehensive remote monitoring and proactive service support for nearly all HP servers, storage, network, and SAN environments, plus selected non-HP servers that have a support obligation with HP. It is integrated with HP Systems Insight Manager. A dedicated server is recommended to host both HP Systems Insight Manager and HP Insight Remote Support Advanced.

Details for both versions are available on the HP website (<http://www.hp.com/go/insightremotesupport>).

To download the software, go to Software Depot (<http://www.software.hp.com>).

Select **Insight Remote Support** from the menu on the right.

## USB support and functionality

### USB support

HP provides both standard USB 2.0 support and legacy USB 2.0 support. Standard support is provided by the OS through the appropriate USB device drivers. Before the OS loads, HP provides support for USB devices through legacy USB support, which is enabled by default in the system ROM.

Legacy USB support provides USB functionality in environments where USB support is not available normally. Specifically, HP provides legacy USB functionality for the following:

- POST
- RBSU
- Diagnostics
- DOS
- Operating environments which do not provide native USB support

### Internal USB functionality

An internal USB connector is available for use with security key devices and USB drive keys. This solution provides for use of a permanent USB key installed in the internal connector, avoiding issues of clearance on the front of the rack and physical access to secure data.


## External USB functionality

HP provides external USB support to enable local connection of USB devices for workstation blade administration, configuration, and diagnostic procedures. For more information, see "Using the HP c-Class Blade SUV Cable (on page 91)."

For additional security, external USB functionality can be disabled through RBSU. Disabling external USB support in RBSU disables the USB connectors on the HP c-Class Blade SUV Cable.

# Component identification


## Front panel components

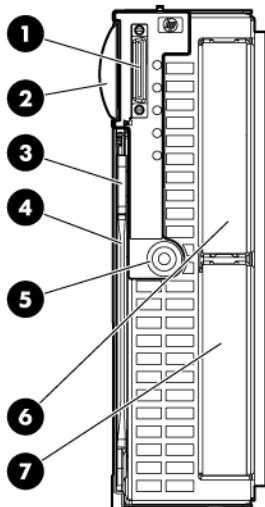

Item	Description
1	SUV connector*
2	Serial label pull tab
3	Release button
4	Workstation blade release lever
5	Power On/Standy button
6	Hard drive bay 1
7	Hard drive bay 2


\*The SUV connector and the HP c-Class Blade SUV Cable are for some workstation blade configuration and diagnostic procedures.

# Front panel components for workstation blade with graphics expander blade

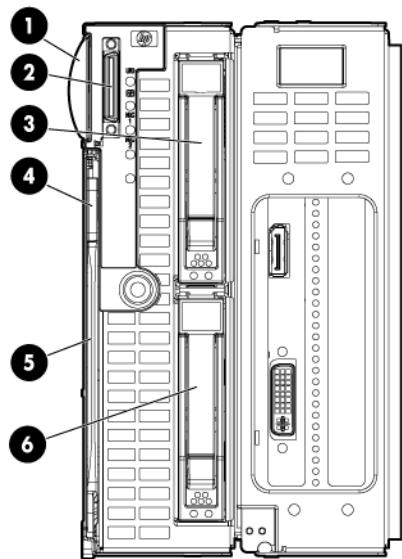


Item	Description
1	Serial label pull tab
2	SUV connector
3	Hard drive bay 1
4	Release button
5	Server blade release lever
6	Hard drive bay 2

## Front panel LEDs

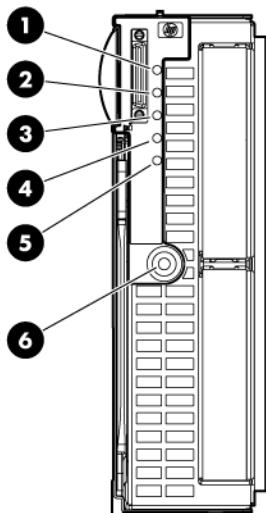


Item	Description	Status
1	UID LED	Blue = Identified Blue flashing = Active remote management Off = No active remote management
2	Health LED	Green = Normal Flashing = Booting Amber = Degraded condition Red = Critical condition
3	Flex-10 NIC 1 LED*	Green = Network linked Green flashing = Network activity Off = No link or activity
4	Flex-10 NIC 1 LED*	Green = Network linked Green flashing = Network activity Off = No link or activity
5	Reserved	—
6	System power LED	Green = On Amber = Standby (auxiliary power available) Off = Off

# Front panel LEDs for workstation blade with graphics expansion blade

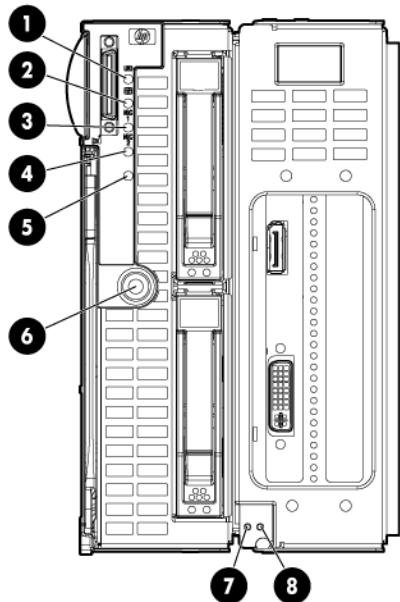

Item	Description	Status
1	UID LED	Blue = Identified Blue flashing = Active remote management Off = No active remote management
2	Health LED	Green = Normal Flashing = Booting Amber = Degraded condition Red = Critical condition
3	Flex-10 NIC 1 LED*	Green = Network linked Green flashing = Network activity Off = No link or activity
4	Flex-10 NIC 1 LED*	Green = Network linked Green flashing = Network activity Off = No link or activity
5	Reserved	—
6	System power LED	Green = On Amber = Standby (auxiliary power available)
7	UID LED	Blue = Identified Blue flashing = Active remote management Off - No active remote management
8	Health LED	Green = Normal Flashing = Booting Amber = Degraded condition Red = Critical condition

# SAS and SATA hard drive LEDs

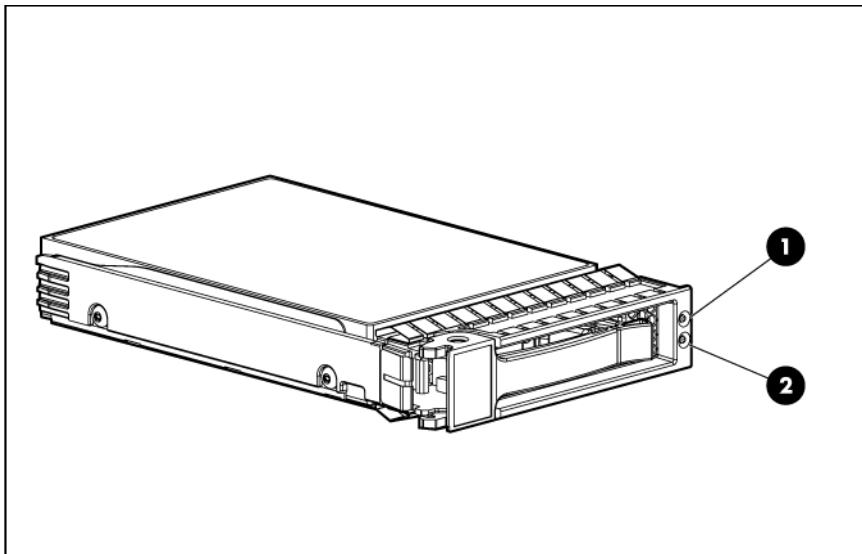


Item	Description
1	Fault/UID LED (amber/blue)
2	Online LED (green)

## SAS and SATA hard drive LED combinations

Online/activity LED (green)	Fault/UID LED (amber/blue)	Interpretation
On, off, or flashing	Alternating amber and blue	The drive has failed, or a predictive failure alert has been received for this drive; it also has been selected by a management application.
On, off, or flashing	Steadily blue	The drive is operating normally, and it has been selected by a management application.
On	Amber, flashing regularly (1 Hz)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
On	Off	The drive is online, but it is not active currently.
Flashing regularly (1 Hz)	Amber, flashing regularly (1 Hz)	<b>Do not remove the drive. Removing a drive may terminate the current operation and cause data loss.</b> The drive is part of an array that is undergoing capacity expansion or stripe migration, but a predictive failure alert has been received for this drive. To minimize the risk of data loss, do not replace the drive until the expansion or migration is complete.
Flashing regularly (1 Hz)	Off	<b>Do not remove the drive. Removing a drive may terminate the current operation and cause data loss.</b> The drive is rebuilding, erasing, or it is part of an array that is undergoing capacity expansion or stripe migration.
Flashing irregularly	Amber, flashing regularly (1 Hz)	The drive is active, but a predictive failure alert has been received for this drive. Replace the drive as soon as possible.
Flashing irregularly	Off	The drive is active, and it is operating normally.

Online/activity LED (green)	Fault/UID LED (amber/blue)	Interpretation
Off	Steadily amber	A critical fault condition has been identified for this drive, and the controller has placed it offline. Replace the drive as soon as possible.
Off	Amber, flashing regularly (1 Hz)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
Off	Off	The drive is offline, a spare, or not configured as part of an array.

## System board components

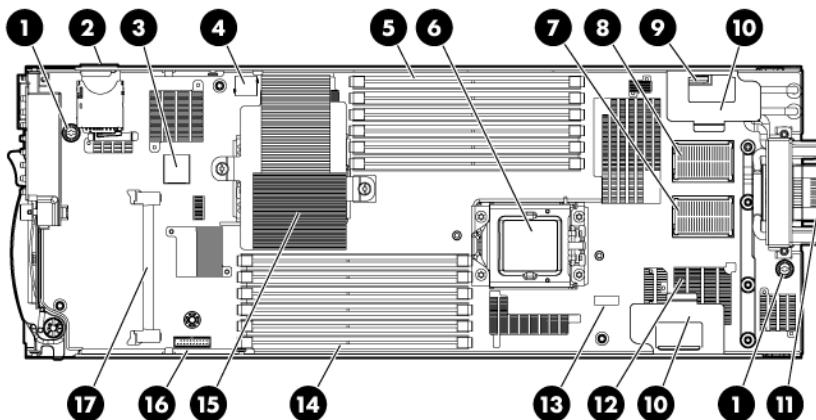


Item	Description
1	System board thumbscrews (2)
2	SD card slot
3	Internal USB connector
4	Hard drive backplane connector
5	Processor 2 DIMM slots (6)
6	Processor socket 2
7	Mezzanine connector 1 (Type I mezzanine only)
8	Mezzanine connector 2 (Type I or Type II mezzanine)
9	System battery
10	Battery tray
11	Enclosure connector
12	Embedded NICs (2)
13	System maintenance switch
14	Processor 1 DIMM slots (6)
15	Processor socket 1 (populated)
16	TPM connector
17	Cache module connector

The symbols correspond to the symbols located on the interconnect bays. For more information, see the *HP ProLiant WS460c G6 Workstation Blade with WS460c Graphics Expansion Blade Installation Instructions* that ship with the workstation blade.


## DIMM slot locations

DIMM slots are numbered sequentially (1 through 6) for each processor. The supported AMP modes use the letter assignments for population guidelines.

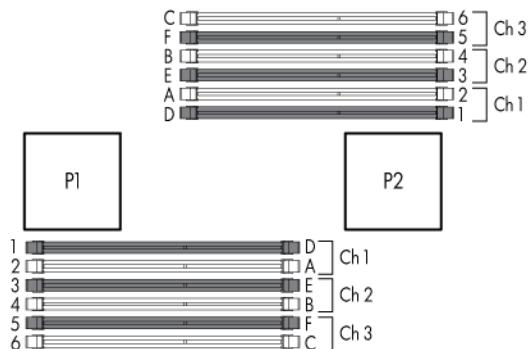

## DIMM identification

To determine DIMM characteristics, use the label attached to the DIMM and the following illustration and table.

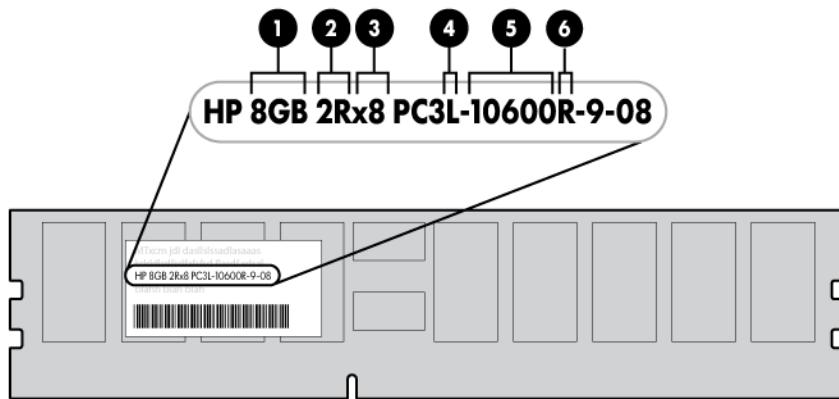

Item	Description	Definition
1	Size	—
2	Rank	1R = Single-rank 2R = Dual-rank 4R = Quad-rank
3	Data width	x4 = 4-bit x8 = 8-bit
4	Voltage rating	L = Low voltage (1.35v) Blank or omitted = Standard

<b>Item</b>	<b>Description</b>	<b>Definition</b>
5	Memory speed	10600 = 1333-MHz 8500 = 1066-MHz
6	DIMM type	R = RDIMM (registered) E = UDIMM (unbuffered with ECC)

For the latest supported memory information, see the QuickSpecs on the HP website (<http://www.hp.com>).

## Mezzanine connector definitions

<b>Item</b>	<b>PCIe</b>
Mezzanine connector 1	x4, Type I mezzanine card only
Mezzanine connector 2	x8, Type I or II mezzanine card


A PCIe x4 mezzanine connector supports x8 cards at up to x4 speeds. A PCIe x8 mezzanine connector supports x16 cards at up to x8 speeds.

## System maintenance switch

<b>Position</b>	<b>Function</b>	<b>Default</b>
1*	iLO 2 security override	Off
2	Configuration lock	Off
3	Reserved	Off
4	Reserved	Off
5*	Password disabled	Off
6*	Reset configuration	Off
7	Reserved	Off
8	Reserved	Off

\*To access redundant ROM, set S1, S5, and S6 to ON.

## HP c-Class Blade SUV Cable

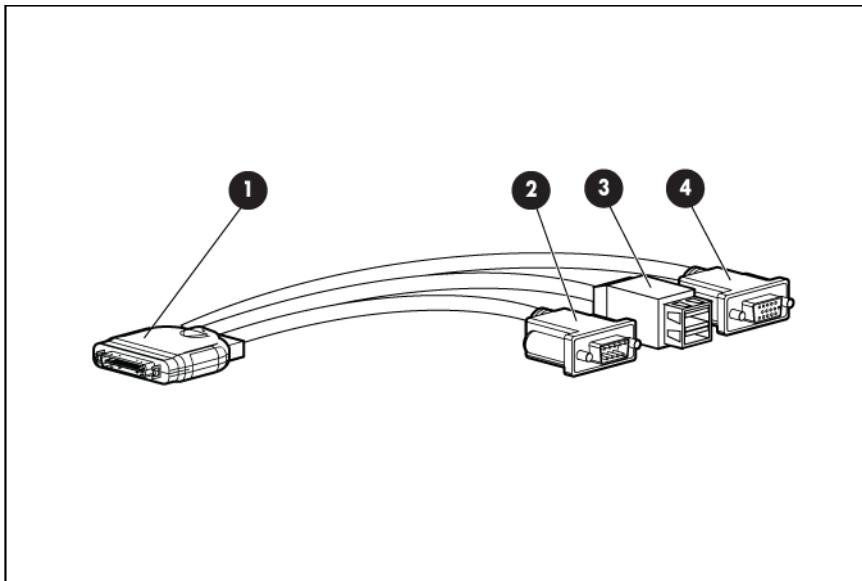

Item	Connector	Description
1	Workstation blade	For connecting to the SUV connector on the workstation blade front panel
2	Video	For connecting a video monitor
3	USB	For connecting up to two USB devices
4	Serial	For trained personnel to connect a null modem serial cable and perform advanced diagnostic procedures

# Cabling

## BBWC battery pack cabling

- Cache module cabling: Use the 24-inch BBWC battery pack cable.



- Mezzanine card cabling: Use the 11.5-inch BBWC battery pack cable.



## Using the HP c-Class Blade SUV Cable

The HP c-Class Blade SUV Cable enables the user to perform workstation blade administration, configuration, and diagnostic procedures by connecting video and USB devices directly to the workstation blade. For SUV cable connectors, see "HP c-Class Blade SUV Cable (on page 90)."

## Connecting locally to a workstation blade with video and USB devices

Use the SUV cable to connect a monitor and any of the following USB devices:

- USB hub
- USB keyboard

- USB mouse
- USB CD/DVD-ROM drive
- USB diskette drive


Access can be configured in several ways. This section offers two possible configurations. For more information, see "USB support and functionality (on page 80, "USB support" on page 80)."

## Accessing a workstation blade with local KVM

For this configuration, a USB hub is not necessary. To connect additional devices, use a USB hub.

 **CAUTION:** Before disconnecting the SUV cable from the connector, always squeeze the release buttons on the sides of the connector. Failure to do so can result in damage to the equipment.

1. Connect the SUV cable to the workstation blade.
2. Connect the video connector to a monitor.
3. Connect a USB mouse to one USB connector.
4. Connect a USB keyboard to the second USB connector.

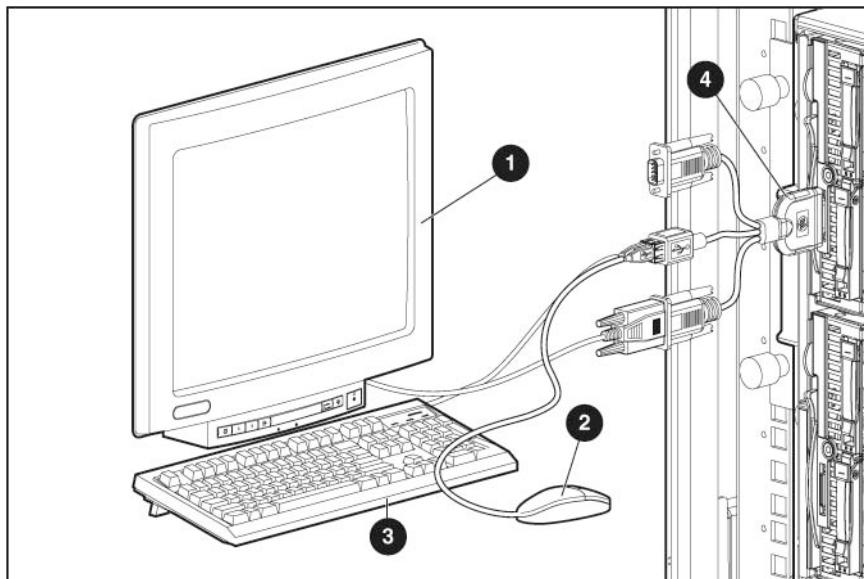


Item	Description
1	Monitor
2	USB mouse
3	USB keyboard
4	HP c-Class Blade SUV Cable

## Accessing local media devices

Use the following configuration when configuring a workstation blade or loading software updates and patches from a USB CD/DVD-ROM or a USB diskette.

Use a USB hub when connecting a USB diskette drive and/or USB CD-ROM drive to the workstation blade. The USB hub provides additional connections.

1. Connect the HP c-Class Blade SUV cable to the workstation blade.
2. Connect the video connector to a monitor.
3. Connect a USB hub to one USB connector.
4. Connect the following to the USB hub:
  - o USB CD/DVD-ROM drive
  - o USB keyboard
  - o USB mouse
  - o USB diskette drive

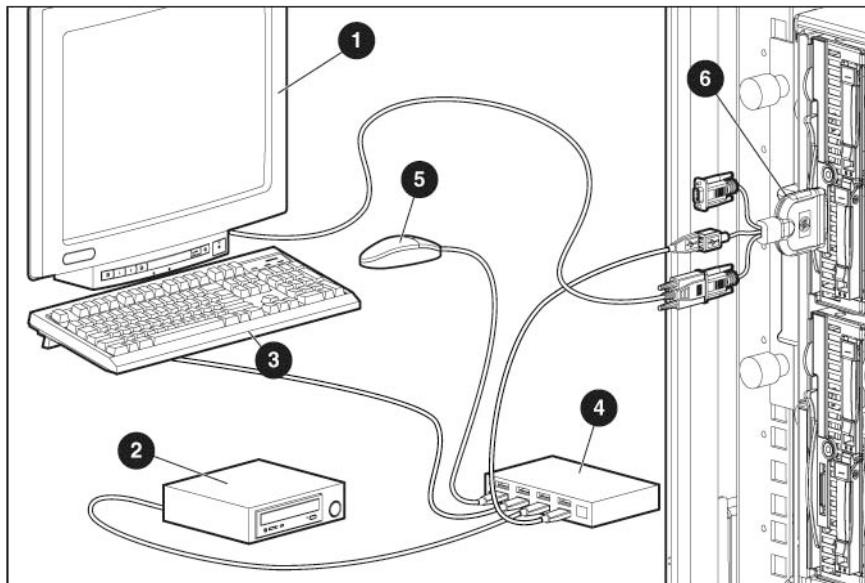

<b>Item</b>	<b>Description</b>
1	Monitor
2	USB CD/DVD-ROM drive or diskette drive
3	USB keyboard
4	USB hub
5	USB mouse
6	HP c-Class Blade SUV Cable

# Specifications

## Environmental specifications

Specification	Value
<b>Temperature range*</b>	—
Operating	10°C to 35°C (50°F to 95°F)
Non-operating	-30°C to 60°C (-22°F to 140°F)
<b>Relative humidity (noncondensing)**</b>	—
Operating	10% to 90% @ 28°C (82.4°F)
Non-operating	5% to 95% @ 38.7°C (101.7°F)
<b>Altitude†</b>	—
Operating	3050 m (10,000 ft)
Non-operating	9144 m (30,000 ft)

\* The following temperature conditions and limitations apply:

- All temperature ratings shown are for sea level.
- An altitude derating of 1°C per 304.8 m (1.8°F per 1,000 ft) up to 3048 m (10,000 ft) applies.
- No direct sunlight is allowed.
- The maximum permissible rate of change is 10°C/hr (18°F/hr).
- The type and number of options installed may reduce the upper temperature and humidity limits.
- Operating with a fan fault or above 30°C (86°F) may reduce system performance.

\*\* Storage maximum humidity of 95% is based on a maximum temperature of 45°C (113°F).

†Maximum storage altitude corresponds to a minimum pressure of 70 kPa (10.1 psia).

## Workstation blade specifications

Specification	Value
Height	18.06 cm (7.11 in)
Depth	50.95 cm (20.06 in)
Width	5.14 cm (2.03 in)
Weight (maximum)	6.16 kg (16.50 lb)
Weight (minimum)	5.22 kg (11.50 lb)

---

# Acronyms and abbreviations

**ADU**

Array Diagnostics Utility

**BBWC**

battery-backed write cache

**CSR**

Customer Self Repair

**ESD**

electrostatic discharge

**FC**

Fibre Channel

**HBA**

host bus adapter

**HCA**

Host Channel Adapter

**HP SIM**

HP Systems Insight Manager

**iLO 2**

Integrated Lights-Out 2

**IML**

Integrated Management Log

**PCIe**

peripheral component interconnect express

**RBSU**

ROM-Based Setup Utility

**SAS**

serial attached SCSI

**SATA**

serial ATA

**SFF**

small form factor

**SIM**

Systems Insight Manager

**SUV**

serial, USB, video

**TPM**

Trusted Platform Module

**UID**

unit identification

**USB**

universal serial bus

---

## Documentation feedback

HP is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (<mailto:docsfeedback@hp.com>). Include the document title and part number, version number, or the URL when submitting your feedback.

# Index

## A

access panel 16, 28  
additional information 78  
ADU (Array Diagnostic Utility) 79  
Array Diagnostic Utility (ADU) 79

## B

backplane, hard drive 45  
batteries, replacing 66  
battery 16, 87  
battery pack, removing 48  
battery tray 16, 40  
battery-backed write cache (BBWC) 47  
battery-backed write cache cabling 91  
BBWC (battery-backed write cache) 47  
BBWC battery pack cabling 91  
buttons 82

## C

cables 91  
cabling 91  
cache module, removing 47  
cautions 25  
components 16, 25, 28, 69, 82, 83  
components, identification 16, 82, 86  
configuring graphics expansion blade with HBA 32  
connectors 82  
CSR (customer self repair) 5  
customer self repair (CSR) 5, 16

## D

data recovery 49  
diagnostic tools 78  
diagnostics utility 78  
DIMM baffles 16, 42  
DIMM slot locations 87, 88  
DIMMs 16, 42, 87  
drives 16, 39, 86

## E

electrostatic discharge 25  
enclosure connector 87  
enclosure connector cover 16, 87  
environmental specifications 94  
external cables 91  
external USB functionality 81

## F

FC mezzanine 16  
features 82  
Fibre Channel mezzanine 16, 44  
front panel buttons 82, 83  
front panel components 82, 83  
front panel LEDs 84, 85  
front panel/hard drive cage assembly 16, 46

## G

graphics card option 29  
graphics expansion blade components 22

## H

hard drive backplane 16, 45  
hard drive backplane connector 87  
hard drive bays 82, 83  
hard drive blanks 16, 39  
hard drive LEDs 86  
hard drives, determining status of 86  
hardware kit 16, 42  
health LEDs 84, 85, 86  
heatsink 16, 51  
heatsink blank 16, 43, 51  
HP c-Class Blade SUV Cable 82, 83, 90, 91  
HP Insight Diagnostics 25, 78  
HP Insight Diagnostics survey functionality 78  
HP Insight Remote Support software 80  
HP ProLiant Essentials Foundation Pack 79  
HP Systems Insight Manager overview 79

## I

illustrated parts catalog 16  
IML (Integrated Management Log) 79  
Insight Diagnostics 25, 78  
installing NVIDIA Quadro 1000M 69  
installing NVIDIA Quadro 3000M 69  
installing NVIDIA Quadro 4000 73  
installing NVIDIA Quadro 5000 73  
installing NVIDIA Quadro 6000 73  
Integrated Management Log (IML) 79  
internal cables 91  
internal USB functionality 80

## L

LED, health 84, 85, 86  
LED, power button 84, 85  
LED, system power 84, 85  
LEDs 82, 86  
LEDs, front panel 86  
LEDs, hard drive 86  
LEDs, NIC 84, 85  
LEDs, SAS hard drive 86  
LEDs, SATA hard drive 86  
LEDs, unit identification (UID) 84, 85  
local KVM, accessing a workstation blade with 92  
local media devices, accessing 92

## M

memory 16, 88  
mezzanine board connectors 87  
mezzanine boards 16, 44  
mezzanine card 44  
mezzanine connector covers 16, 41  
mezzanine connectors 87, 89

## N

NIC (network interface card) 87

## P

part numbers 16  
PCI Express 66  
PCIe expansion boards 30  
power button LED 84, 85  
Power On button 82, 83  
powering down 26  
preparation procedures 26  
processor socket 87  
processors 16, 53, 87

## R

release button 16, 68, 82, 83  
removal and replacement procedures 25  
removing the access panel 28, 29  
removing the server blade 28  
removing the system board 59  
replacement procedures 25  
required tools 25

## S

safety considerations 25  
safety information 25  
SAS drives 16, 86  
SAS hard drive LEDs 86  
SAS/SATA LED combinations 86  
SATA hard drive 16, 86  
SATA hard drive LEDs 86  
SD card module 16, 50  
serial connector 90  
serial label pull tab 82, 83  
server blade release lever 16, 67, 82  
server blade specifications 94  
specifications 94  
specifications, environmental 94  
specifications, server blade 94  
static electricity 25  
SUV connector 82, 90, 91  
symbols on equipment 26  
system battery 16  
system board 16, 59, 87  
system board battery 87  
system board components 87, 89  
system board thumbscrews 87  
system components 82  
system maintenance switch 87, 89  
Systems Insight Manager 79

## T

tools 25, 78  
Torx screwdriver 25  
TPM (Trusted Platform Module) 69  
troubleshooting 78  
troubleshooting resources 78  
Trusted Platform Module (TPM) 69

## U

USB connectors 90  
USB devices 91

USB support 80  
utilities 78

## V

video connector 90  
video connector cabling 90  
video devices 91

## W

warnings 25  
warranty 5